


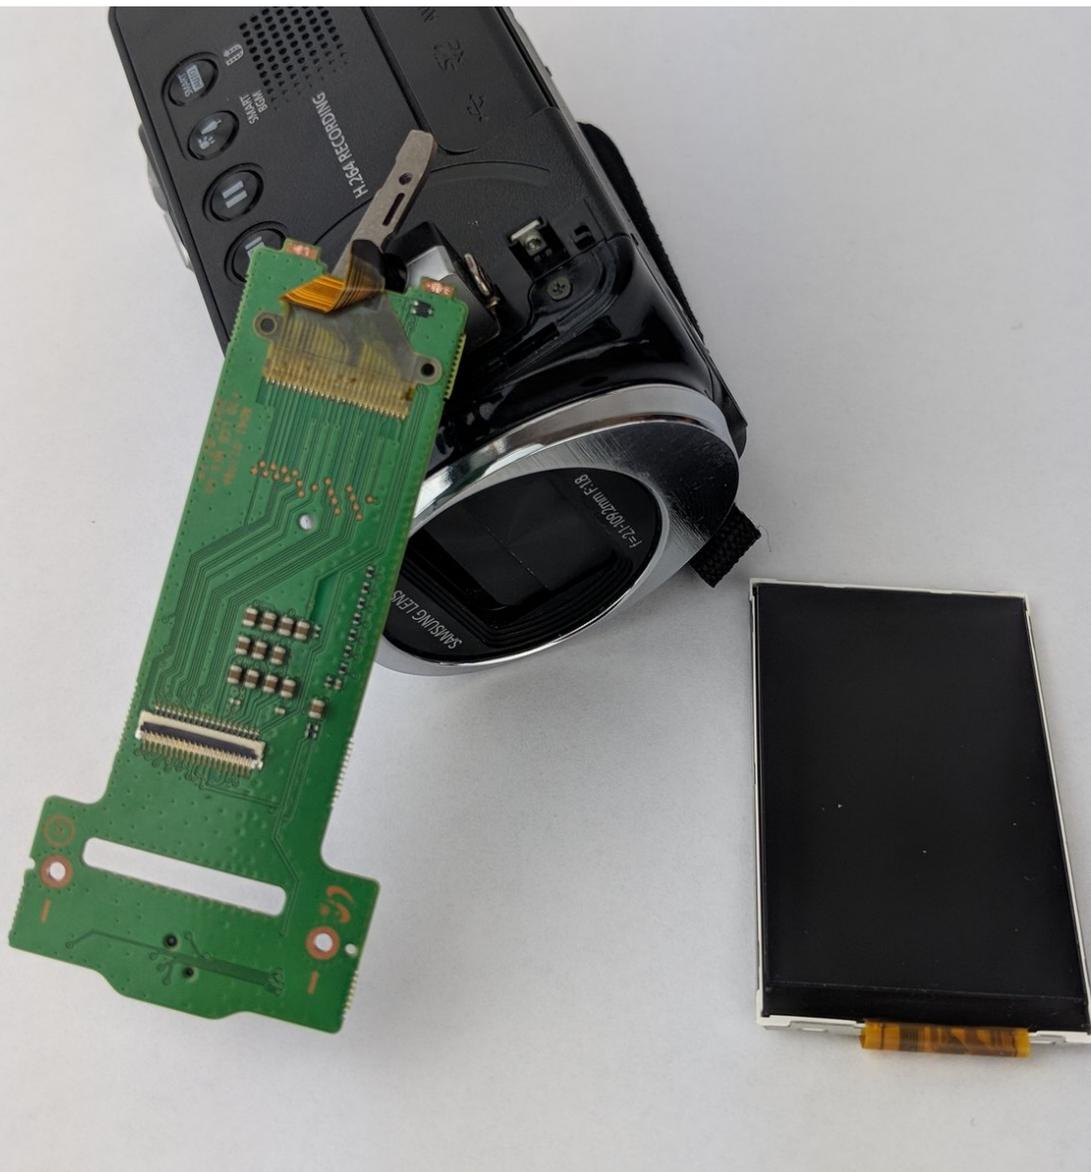

Samsung HMX-F90 LCD Screen Replacement

Removing and replacing the LCD screen of the HMX-F90 Camcorder.

Written By: Amir Harb



INTRODUCTION

Cracked or faulty LCD screens can make the HMX-F90 difficult to use. This guide can be used to replace the flip-out LCD screen.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Tweezers](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — LCD Screen



- Rotate the camcorder so that back is facing you. Then flip open the LCD screen.
- Locate and remove the 4.5mm Phillips #00 screws in the LCD screen base.

Step 2



- Close the LCD screen. Then lift the silver base away from the camcorder.

Step 3




- Rotate the camcorder so that it is facing you.
- Locate and remove the two 4.5mm Phillips #00 screws.

Step 4




- Open the LCD screen and rotate it around 90 degrees.
- Locate the small prying notch and use a prying tool to slowly remove the LCD cover.

Step 5

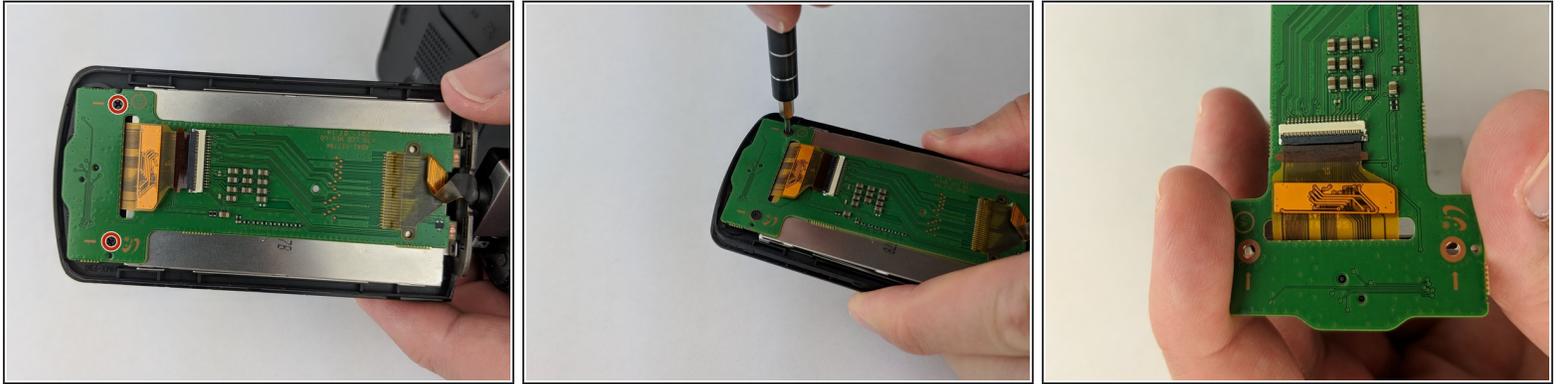

- Locate and remove the two 3.5mm Phillips #00 screws holding the back cover.

Step 6

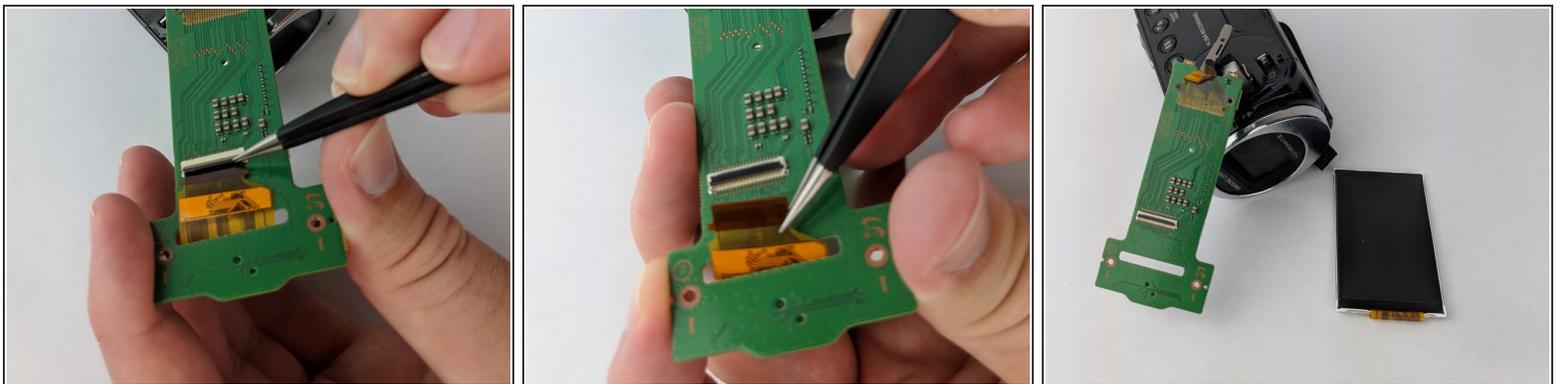

- With tweezers gently unclip the silver tab holding the ribbon wire.
- Gradually feed the ribbon wire through the hole to remove the screen.

To reassemble your device, follow these instructions in reverse order.