




Lenovo IdeaPad 110-15IBR Battery Replacement

This guide will assist you in removing the battery for the Lenovo IdeaPad 110-15IBR.

Written By: Saddam Alsinai

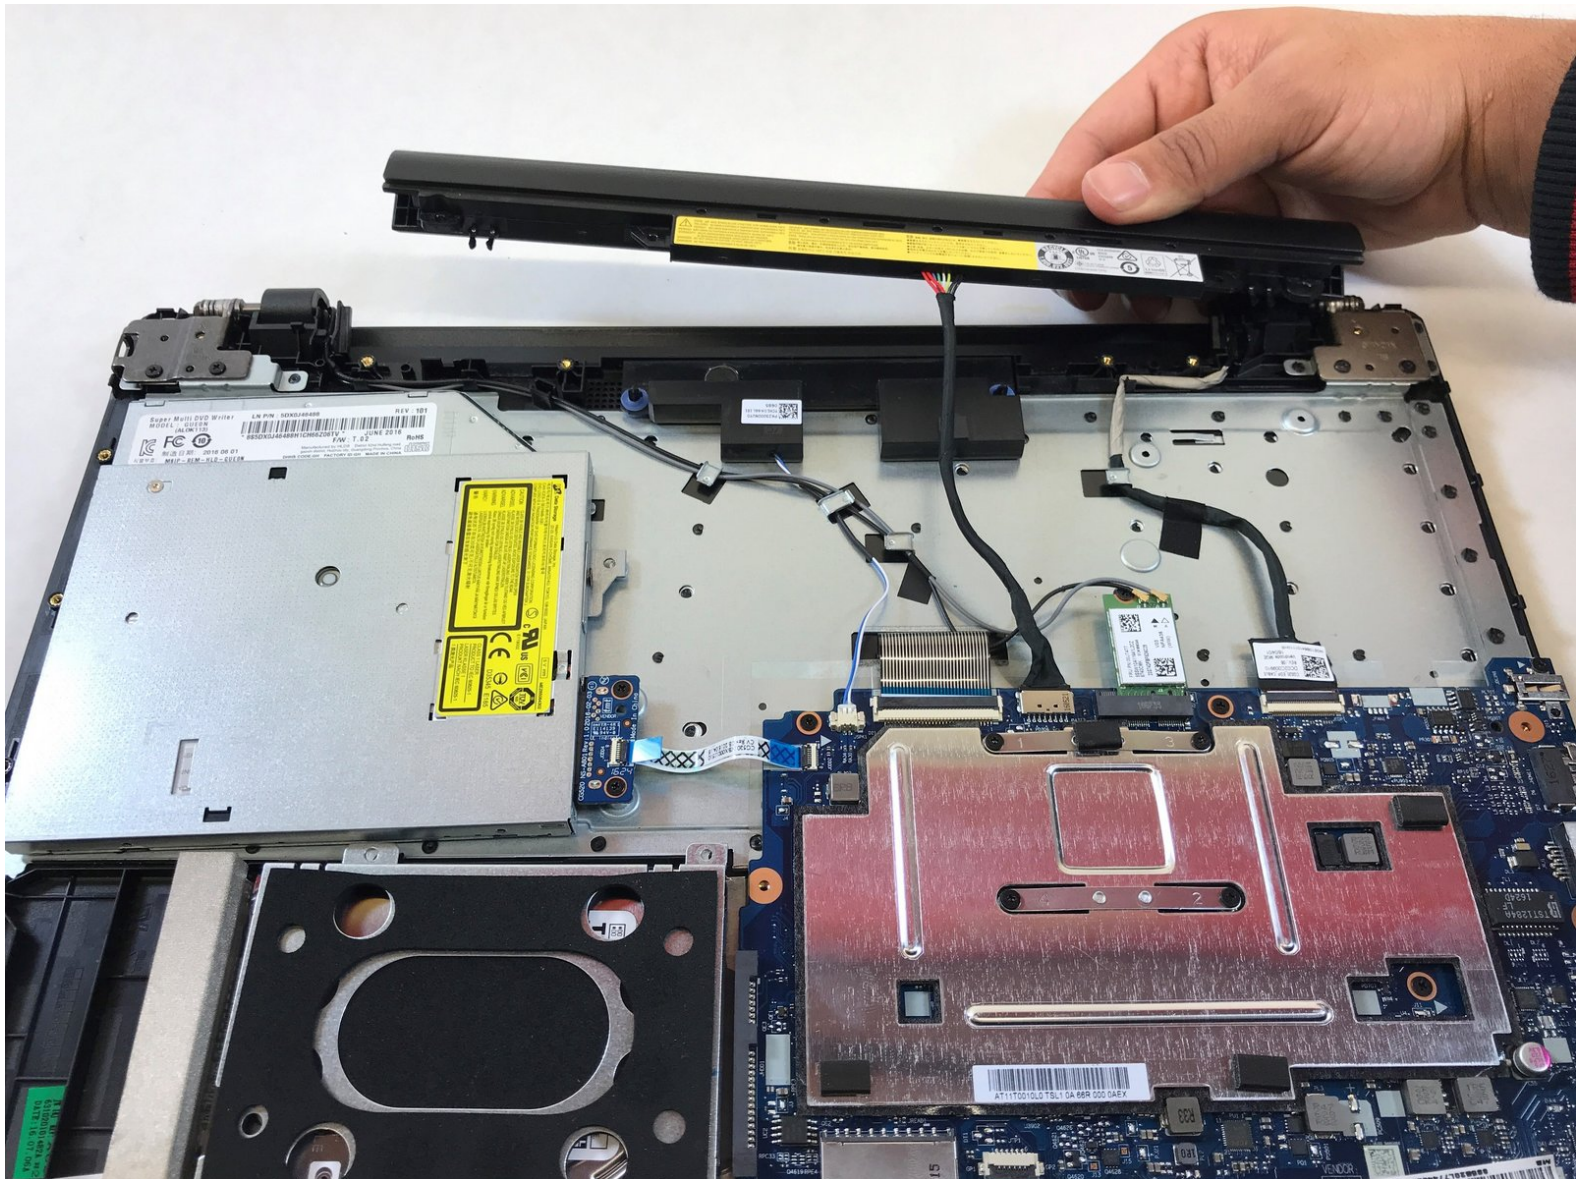

INTRODUCTION

This guide will show how to replace the battery on the device. It walks through the process of removing the back, unscrewing the battery, and unplugging the batter from the device.



TOOLS:


- [iFixit Opening Tool](#) (1)
- [Phillips #1 Screwdriver](#) (1)



PARTS:

- [Lenovo IdeaPad 110 Replacement Laptop Battery](#) (1)
- [Lenovo IdeaPad 110-15IBR Lower Case](#) (1)


Step 1 — Remove screws

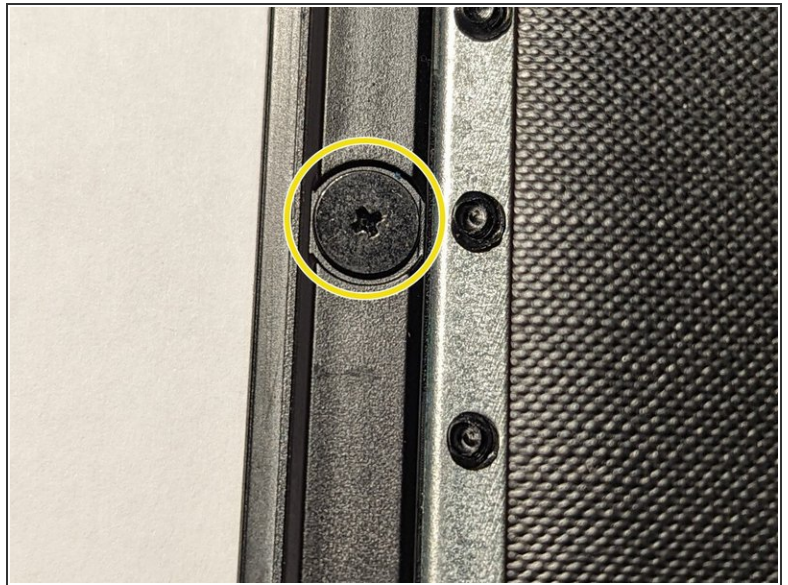

⚠ Before you proceed, make sure your computer is turned off and it's not connected to any power source.


- Remove the thirteen 9 mm Phillips #1 screws.
- Pull out the DVD drive and unscrew the final 3 wide-head screws holding the back in place.

Step 2 — Remove the back

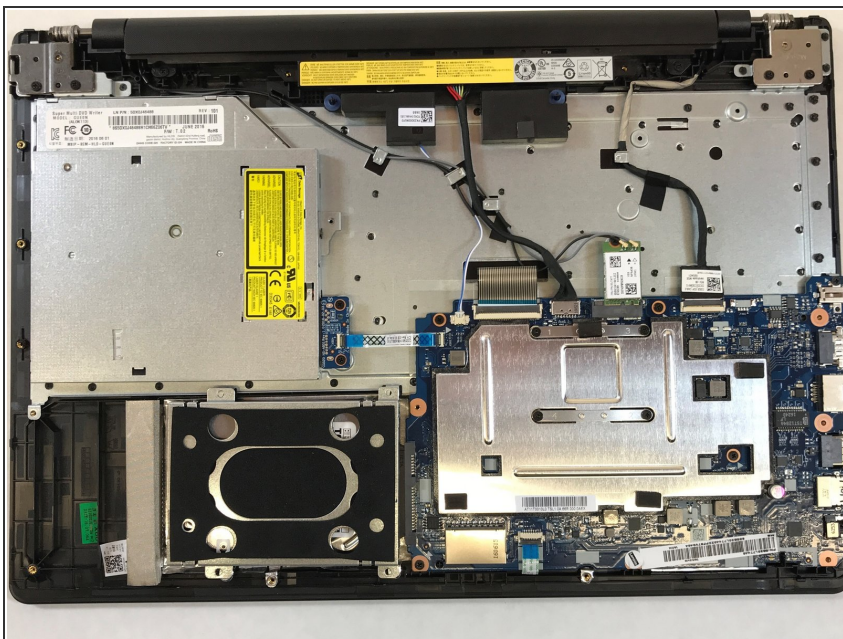




- Gently pry the back off using a plastic opening tool, starting from one of the corners.

Step 3

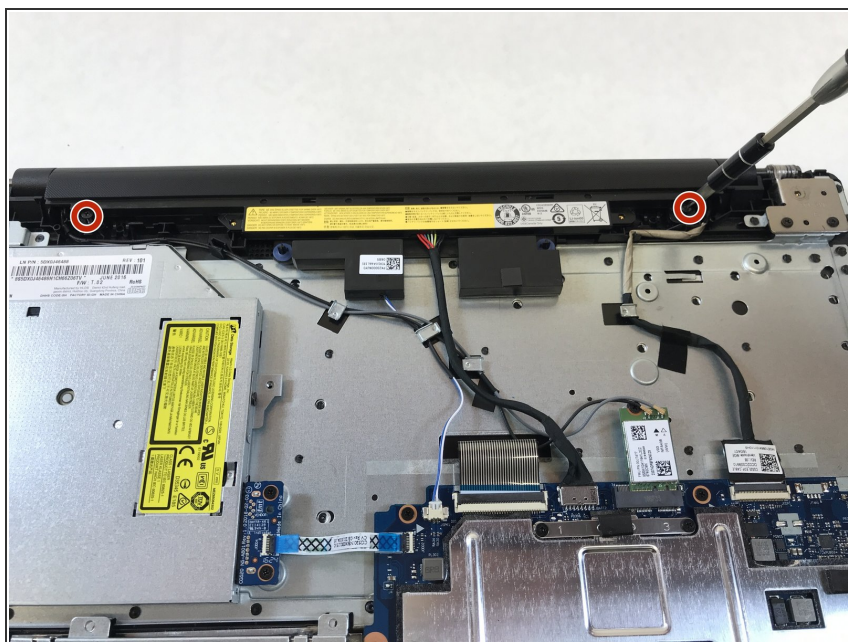

- Remove the two 9 mm Phillips #1 screws holding the battery.

Step 4

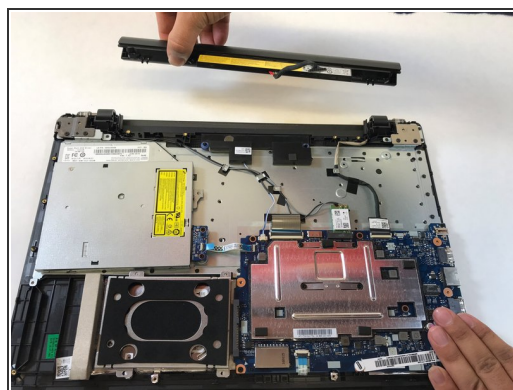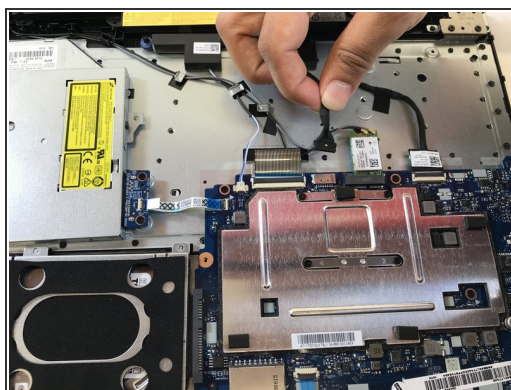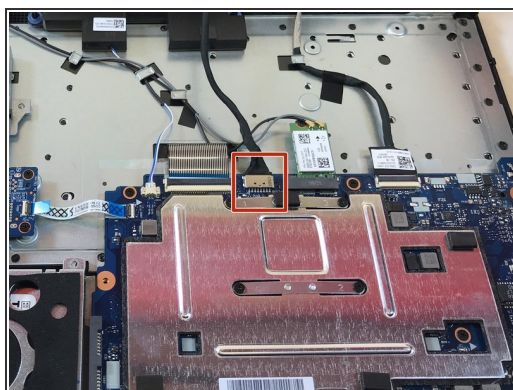

- Disconnect the battery cable connector from mother board.
- Remove battery from device.

To reassemble your device, follow these instructions in reverse order.