



# Direct-Drive Cleaner Head Brush Bar Replacement

Cleaning and replacement of the brush bar located inside the Direct-Drive Cleaner Head.

Written By: Saba G Arefaine



# INTRODUCTION

Sometimes the brush bar of the direct-drive cleaner head attachment for the Dyson V8 Absolute will discontinue rotating if caught with too much debris. This guide will show you how to remove the brush bar for cleaning or replacement. This device comes with two other attachment heads, a Mini Motorized Head and a Soft Roller Cleaner Heads, with brush bars that follow similar steps in locating the fastener to remove the brush bar.



## TOOLS:

 
- Coin (1)



## PARTS:


- Dyson V8 and V11 Brush Bar (1)

## Step 1 — Brush Bar

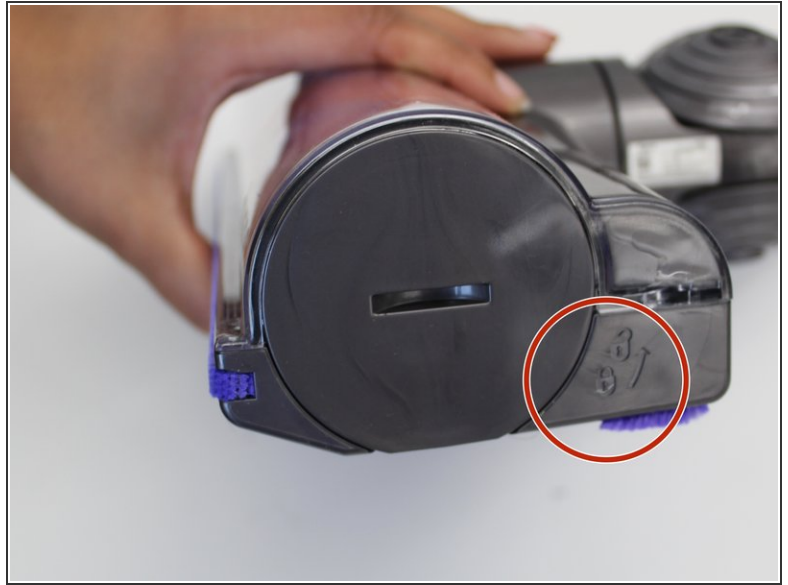

- ❗ First, make sure the device is unplugged and detached from the wand
- Use a quarter to unlock the fastener marked by padlocks, turning it counter clockwise
- Padlocks

## Step 2

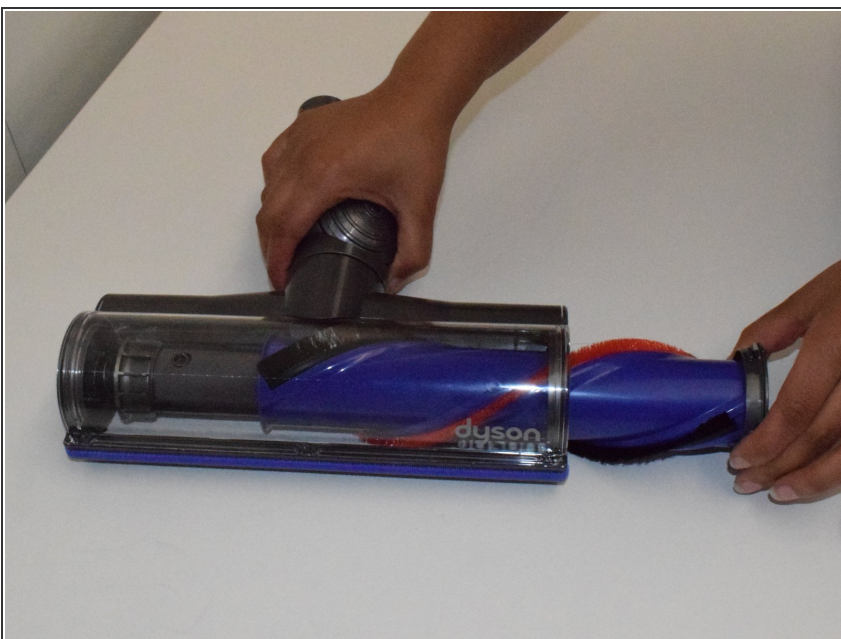 

- Slide the brush bar away from the cleaner head

To reassemble your device, follow these instructions in reverse order.