



Acer Chromebook CB5-312T-K 8Z9 Secondary Circuit Board Replacement

This guide will show how to remove and replace the secondary circuit board.


Written By: Cole O'Neal



 **TOOLS:**

- [iFixit Opening Tool](#) (1)
 - [Philips Head Screwdriver: Size J1](#) (1)
-

Step 1 — Acer Chromebook CB5-312T-K 8Z9 Back Cover

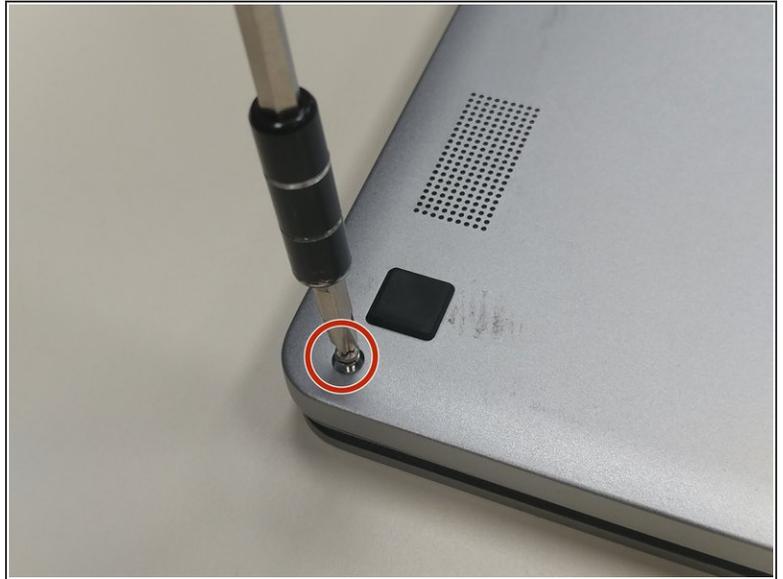


- First begin by flipping the laptop on its back and having the back cover face you directly.
- Then unscrew the ten Phillips head screws that hold down the back cover using a Phillips #0 Screw Driver.

Step 2



- Using a plastic spudger, open the back cover and remove it from the laptop.

Step 3 — Secondary Circuit Board

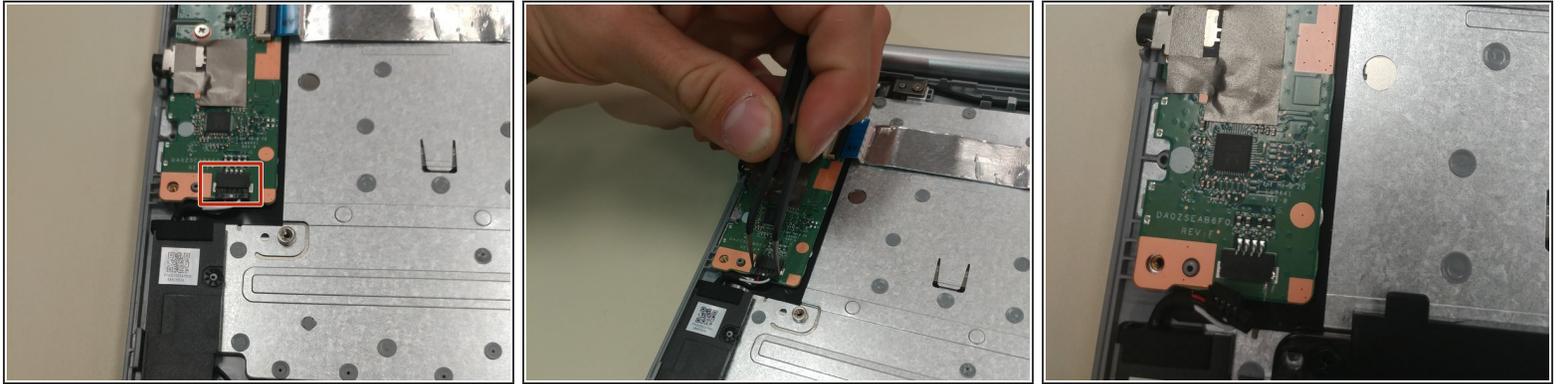

- Identify the port that is connected to the speaker.
- Using tweezers, separate the cable from the port.

Step 4



- Find and remove the blue tape from the circuit board.

Step 5



- Remove the black tape from the port.
- Using tweezers, separate the cable from the port.

Step 6



- Identify the two Phillips screws.
- Remove the two screws holding down the board with a J1 Phillips screwdriver.
- Gently lift the board from the Chromebook.

To reassemble your device, follow these instructions in reverse order.