



Sony Alpha NEX-C3 Top Panel Replacement

How to replace the top panel in the Sony Alpha NEX-C3.

Written By: Jonathan Chen



INTRODUCTION

The top panel can be cracked, and it's removal is often needed to access other parts under the top panel.

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Top Panel



- Turn the camera off by sliding the power switch.

Step 2



- Use a Phillips head 000 screwdriver to remove the 4.0mm screw inside the USB port.

Step 3



- Use a Phillips head 000 screwdriver to remove the one 4.0mm screw on the side opposite of the USB port near the shutter button.

Step 4



- Open the flap at the top of the camera.
- Use a Phillips head 000 screwdriver to remove the two 4.0mm screws inside.

Step 5



- Gently lift off the top panel with your hands.

To reassemble your device, follow these instructions in reverse order.