



Ring Video Doorbell Pro Housing Replacement

A step-by-step guide on how to get inside the Ring Video Doorbell Pro for internal component access.

Written By: Jake Dixon



INTRODUCTION

In this guide, you will learn how to take apart the Ring Video Doorbell Pro.



TOOLS:

- [Phillips PH000 Screwdriver](#) (1)
- [iFixit Opening Tool](#) (1)



PARTS:

- [Ring Video Doorbell Pro Housing](#) (1)
-

Step 1 — Housing




- Start by using the star-shaped end of the included Ring screwdriver to take out the 5 mm screw on the bottom of the device.

Step 2




- Use your thumbs to apply downward pressure on the glass part of the device while pulling the faceplate up and off of the device.

Step 3

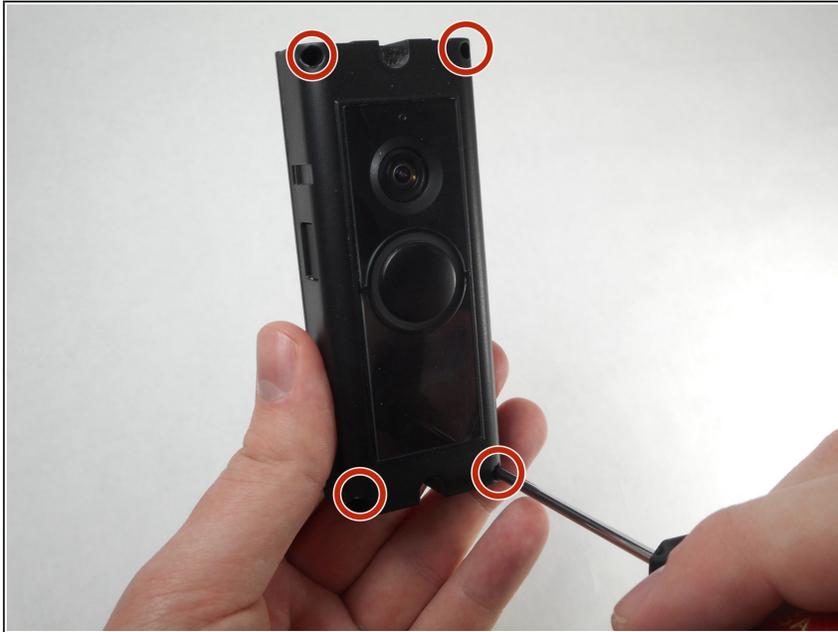

- Using a PH-000 screwdriver, unscrew and set aside all four of these 5.25 mm screws.

Step 4

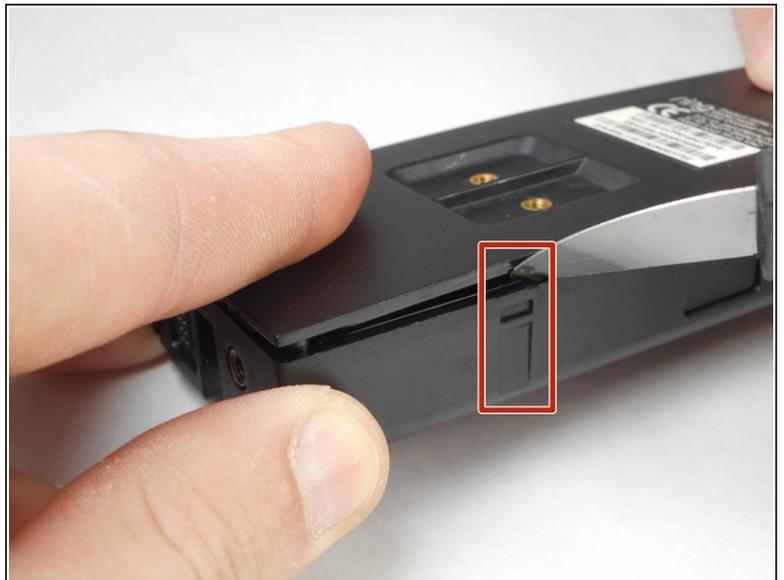

- Using a plastic pry tool, go along the edge of the device prying the device apart. While doing this, focus on the four clips, two of which are on either side of the device.

Step 5



- Remove the front of the device from the back plate.

To reassemble your device, attach the new housing and follow these instructions in reverse order.