



Dell Inspiron 17R-5737 RAM Replacement

The RAM must be removed before other steps to prevent damage to the RAM.

Written By: Mack Chabot






TOOLS:

- [JIS #00 Screwdriver](#) (1)
-

Step 1 — Battery



 Make sure the laptop is off before attempting to remove the battery.

- Flip over your laptop so that the battery faces you.

Step 2



- Slide each latch away from the battery to unlock it.

Step 3



- Lift the battery upwards to remove it.
- ❗ Continue holding the latches when removing the battery.

Step 4 — Access Panel



- Remove two 4.8mm screws with a JIS #00 screwdriver.
- Remove the access panel.

Step 5 — RAM



- Slide the two clips away from the RAM.
- Lift the RAM out.

To reassemble your device, follow these instructions in reverse order.