




# Acer Aspire 4520-5464 Keyboard Replacement

How to replace the keyboard of an Acer Aspire 4520-5464 laptop.

Written By: Hunter Gilcrease

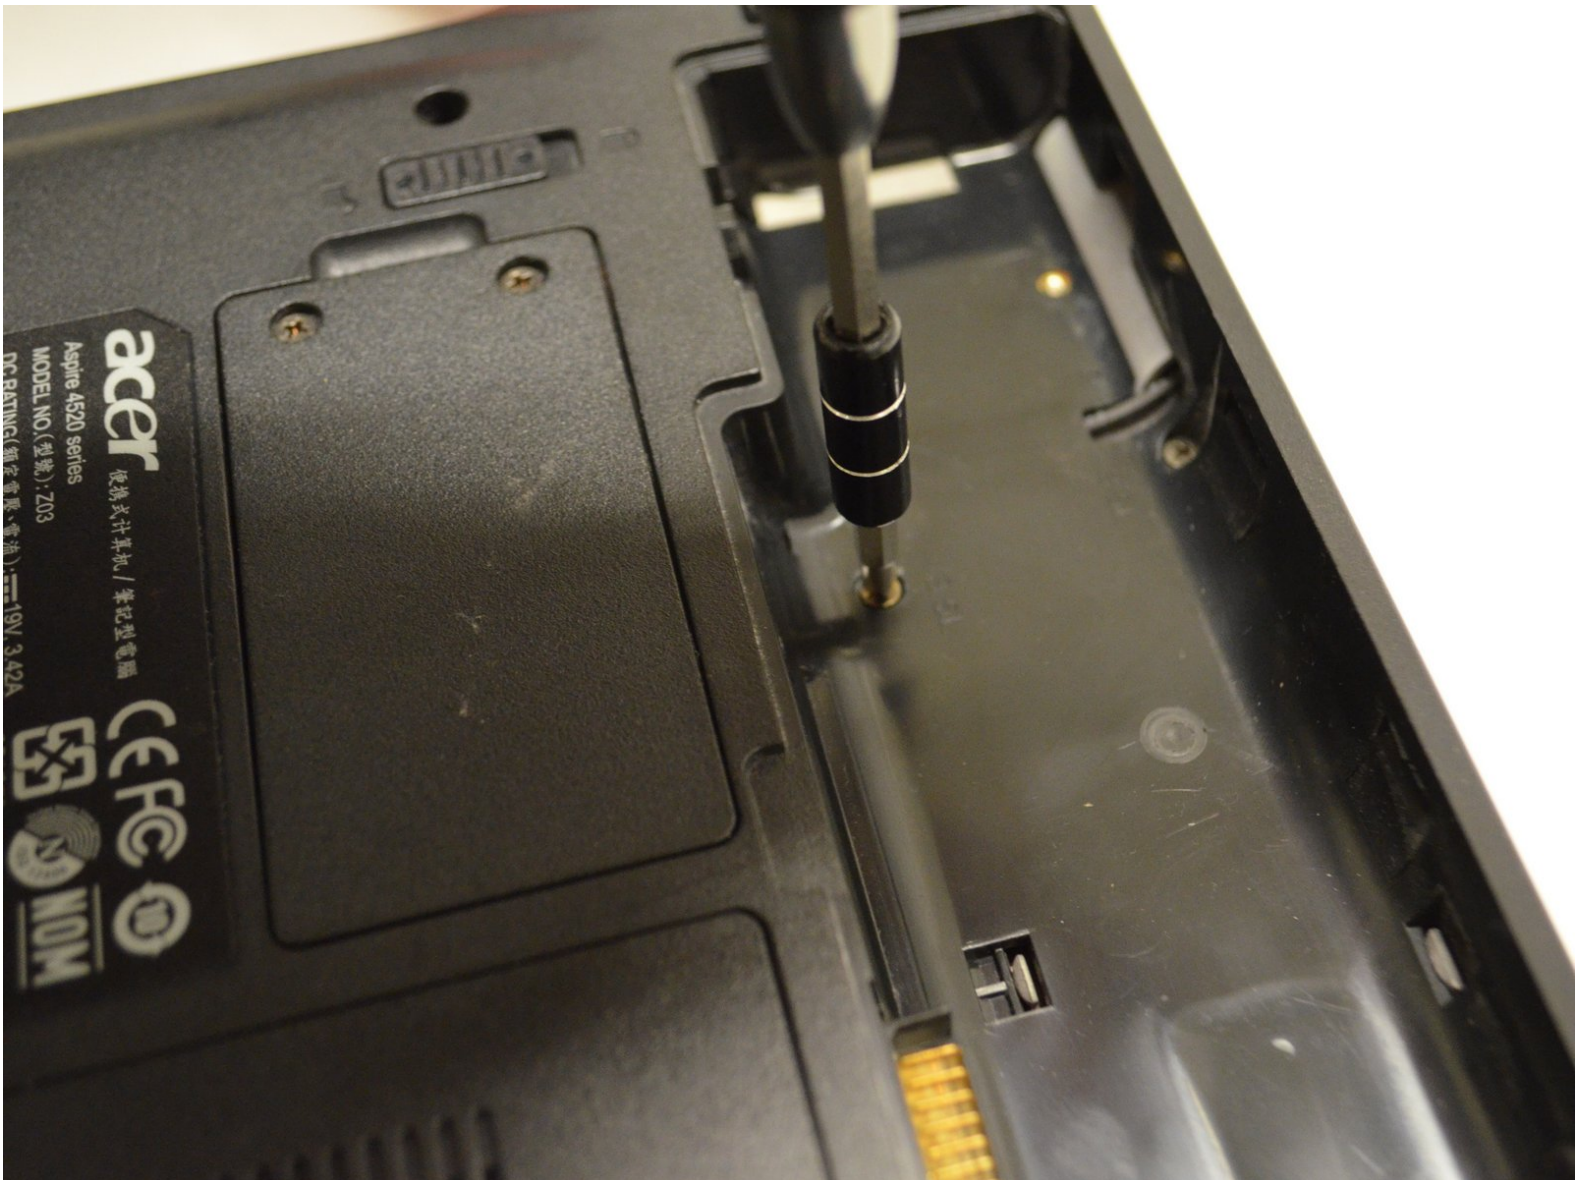

---

## INTRODUCTION

This guide will show you how to replace the keyboard of an Acer Aspire 4520-5464 laptop. The keyboard is used to type and use commands on the laptop.

---



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



- Shut down the computer and disconnect all external devices and cables.
- Flip the computer over.

## Step 2



- Ensure that the battery compartment lock tab is in the unlocked position.
- Slide the sliding black tab away from the battery compartment.
- The inside edge of the battery should be released, causing it to slightly pop out of the compartment.

This document was generated on 2020-11-28 06:20:08 AM (MST).



### Step 3



- Grasp the inside edge of the battery and lift to fully detach the battery from the computer.

### Step 4 — Keyboard




- Remove the five 1mm Phillips #1 screws located inside of the battery compartment.
- Remove the three 2mm Phillips #1 screws located at the top of the case's perimeter.

## Step 5




- Remove the gray plastic section located above the keyboard using the prying tool.
- Lift off of the keyboard.

## Step 6

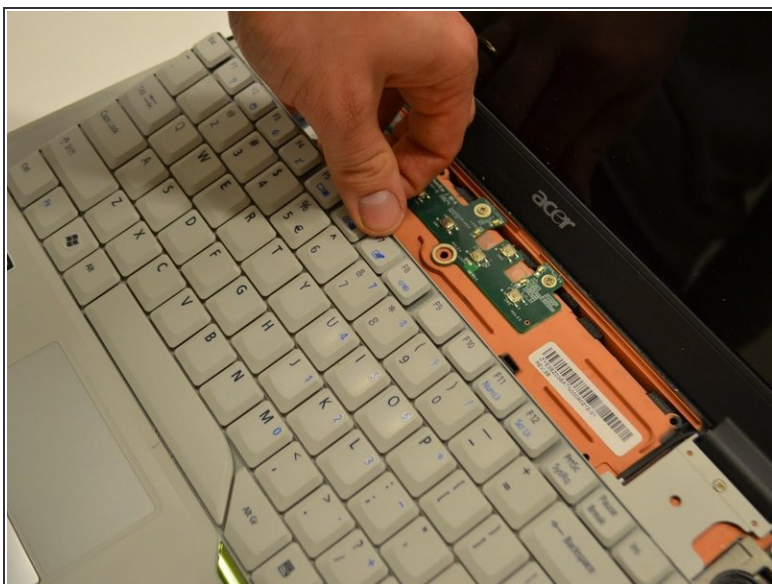


- Take hold of the keyboard behind the function keys and lift gently.

 Do not completely separate the keyboard from the laptop.



## Step 7

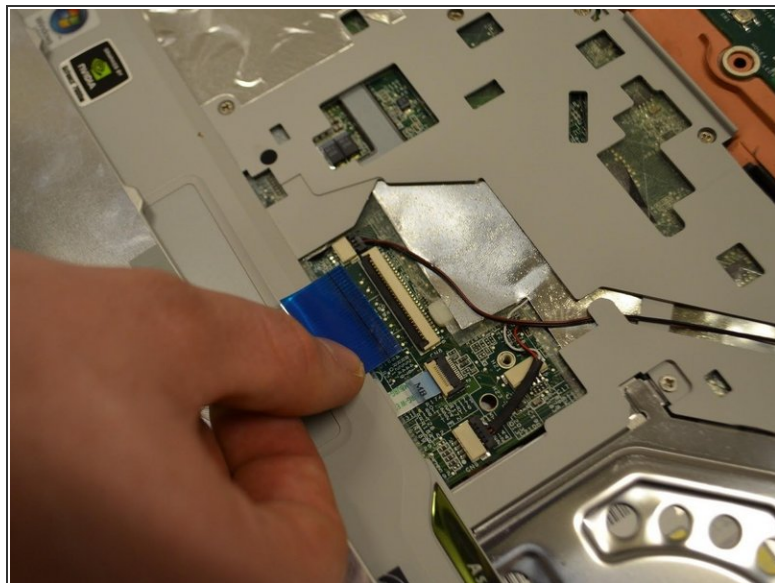

- Lift up the black locking tab located where the keyboard is attached to the laptop.
- Pull the keyboard cable towards the trackpad and remove the keyboard.

To reassemble your device, follow these instructions in reverse order using your new keyboard.