



Harman Kardon Esquire Mini External Stand Replacement

This guide helps you how to replace the external stand.

Written By: yousef aljeemaz



INTRODUCTION

This guide will help you how to replace the external stand. The stand may not support the device, this may be because of the spring being over-worn or because of some kind of debris on the surface of the stand. A plastic opening tool and PH0 screwdriver will be needed to accomplish this guide.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [P2 Pentalobe Screwdriver iPhone](#) (1)
-

Step 1 — Front Panel




- Using the plastic opening tool, to open the back panel of the device. Start on the longer sides to avoid bending the metal frame at the plug ports.
- Push down on the plastic opening tool, and push the back panel, repeat this for the 4 sides of the device.

Step 2

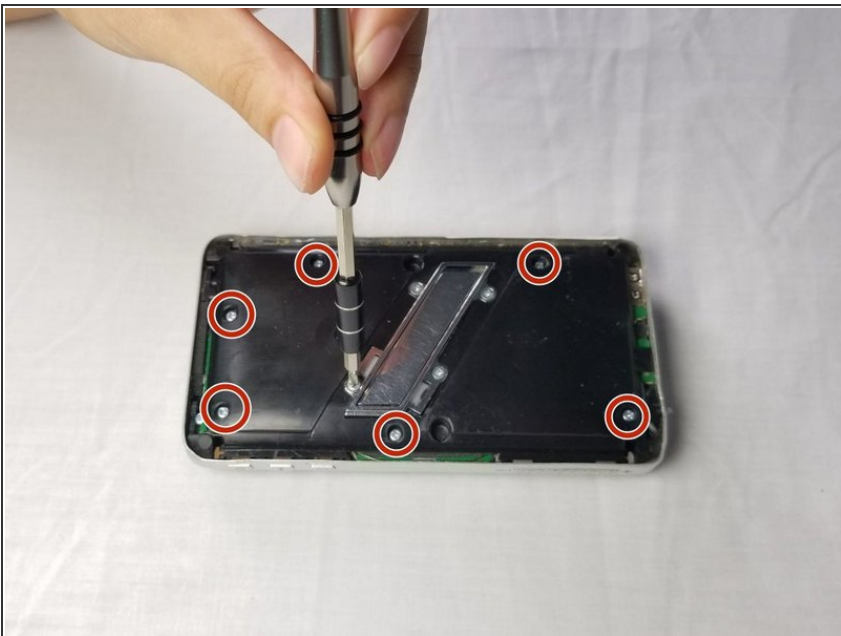

- Using the PH0 screw driver, remove the 7.5 mm screws by turning in a counter-clockwise direction. There are 6 screws on the front panel.
- Remove all of the 7.5 mm screws, by repeating the same step above. It is not necessary to remove the stand-leg.
- After unscrewing the 7.5 mm screws, just lift the plastic and you will see the motherboard.

Step 3 — External Stand

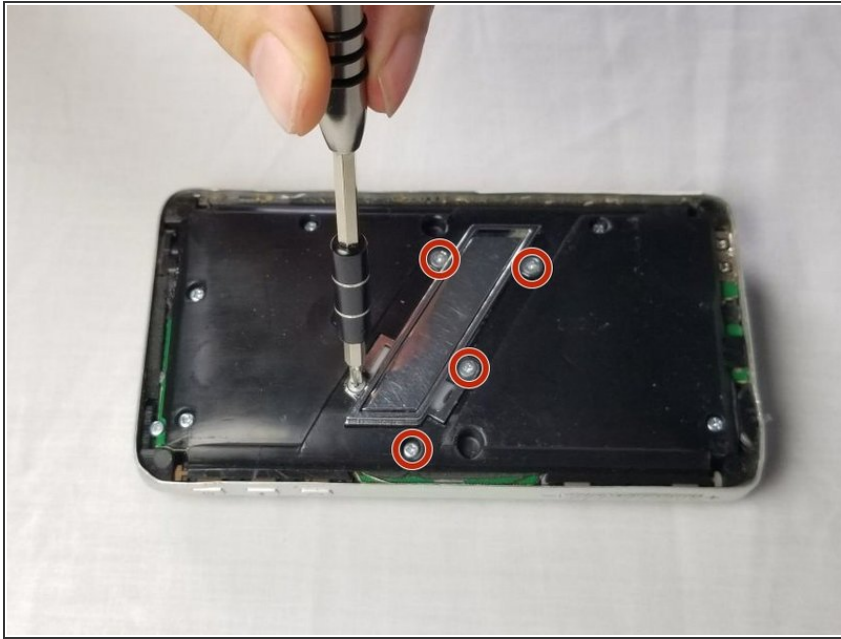

- Using the Pentalobe screw driver, unscrew the 5.1 mm screws by applying a clockwise force.
- Remove all of the 5.1 mm screws, and slowly lift the stand. There are 4 screws on the stand.
- After the stand is removed, replace the stand with a new one.

To reassemble your device, follow these instructions in reverse order.