

Asus X200CA-HCL 1104G Speaker Replacement

Written By: Svetlana Pimentel



🖌 TOOLS:

Phillips #0 Screwdriver (1) Tweezers (1) iFixit Opening Tool (1)

Step 1 — Speaker



- Using the Phillips 1 screwdriver, remove the laptop's back panel.
- Pry open the Keyboard/Touch pad.
- Use a plastic or metal spudger to separate the keyboard from the back panel and lift the keyboard out of place.

Step 2




- Detach keyboard and touch screen cables
- These are the cable that are holding the keyboard and touch screen together

Step 3



• Unclip the connector that is located above touch screen

Step 4

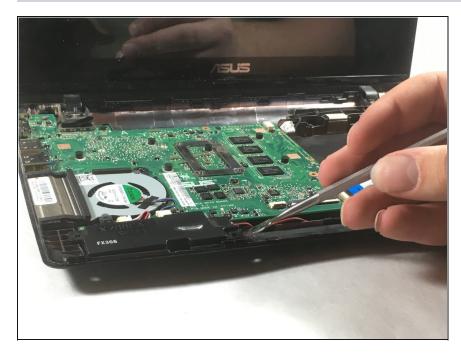

- Use <u>tweezers</u> to remove the speaker bar that is located beneath the touch screen.
- Once removed carefully disconnect the clip to the left of the speaker.

To reassemble your device, follow these instructions in reverse order.