


HP 15-ay014dx Hard Drive Disk Replacement

Hard Drive Disk replacement for HP-15ay014dx

Written By: Jimmy Huynh

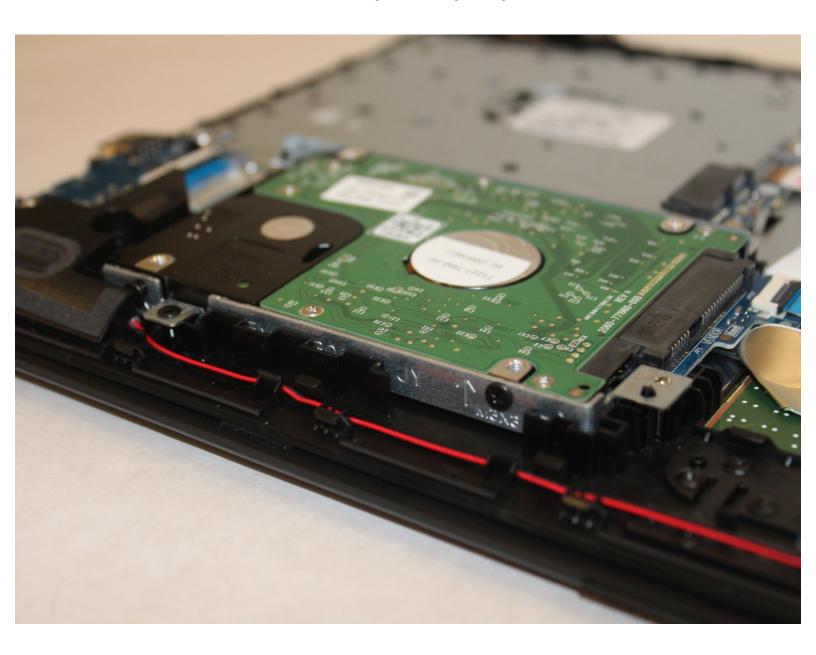

INTRODUCTION


This guide will provide simple, easy to follow instructions for replacing the Hard Drive Disk for HP-15ay014dx



TOOLS:

- Phillips #00 Screwdriver (1)
- Spudger (1)
- Tweezers (1)
- iFixit Opening Tools (1)

Step 1 — Battery

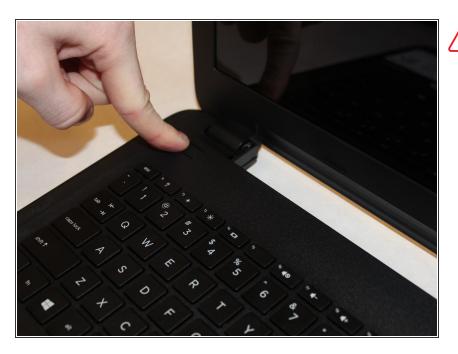

♠ Disconnect device from power source and power down.

Step 2



 With the device turned upside down, use your index fingers to push the battery latches in towards each other.



- The latch on your left will stay at the inward position, while the latch on the right will slide back out.
- Gently grasp the battery and pull it back away from the device and yourself.

Step 4 — Optical Drive



- Close the laptop and lay it down with the bottom facing up.
- Using a size #00 Phillips screw drive remove the screw holding in the optical drive.



 Grip the optical drive and gently pull it out.

Step 6 — Hard Drive Disk





 Remove the highlighted screws holding the body of the laptop together with a size #00 Phillips screwdriver.







- Using the spudger, push in the tabs in the back that hold the body together. Carefully pry the body apart by working the spudger around the body.
- Pull the back cover off.

Step 8









- Pry up on the clamp holding the SATA power ribbon using the plastic opening tool.
- Pull out the SATA power ribbon using the tweezers.



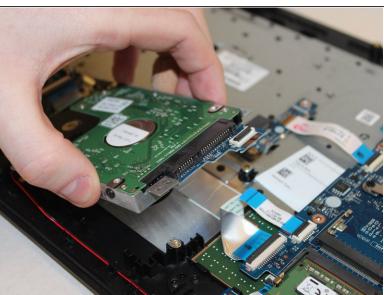

- Remove the highlighted screws holding the hard drive to the body using the Philips #00 screwdriver.
- Remove the hard drive.

Step 10

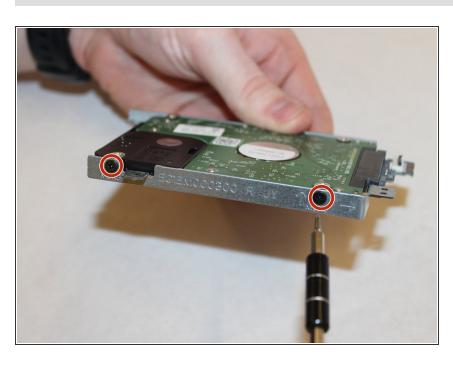

 Remove the 4 screws holding the hard drive to the hard drive cage using the Philips #00 screwdriver. To reassemble your device, follow these instructions in reverse order.