


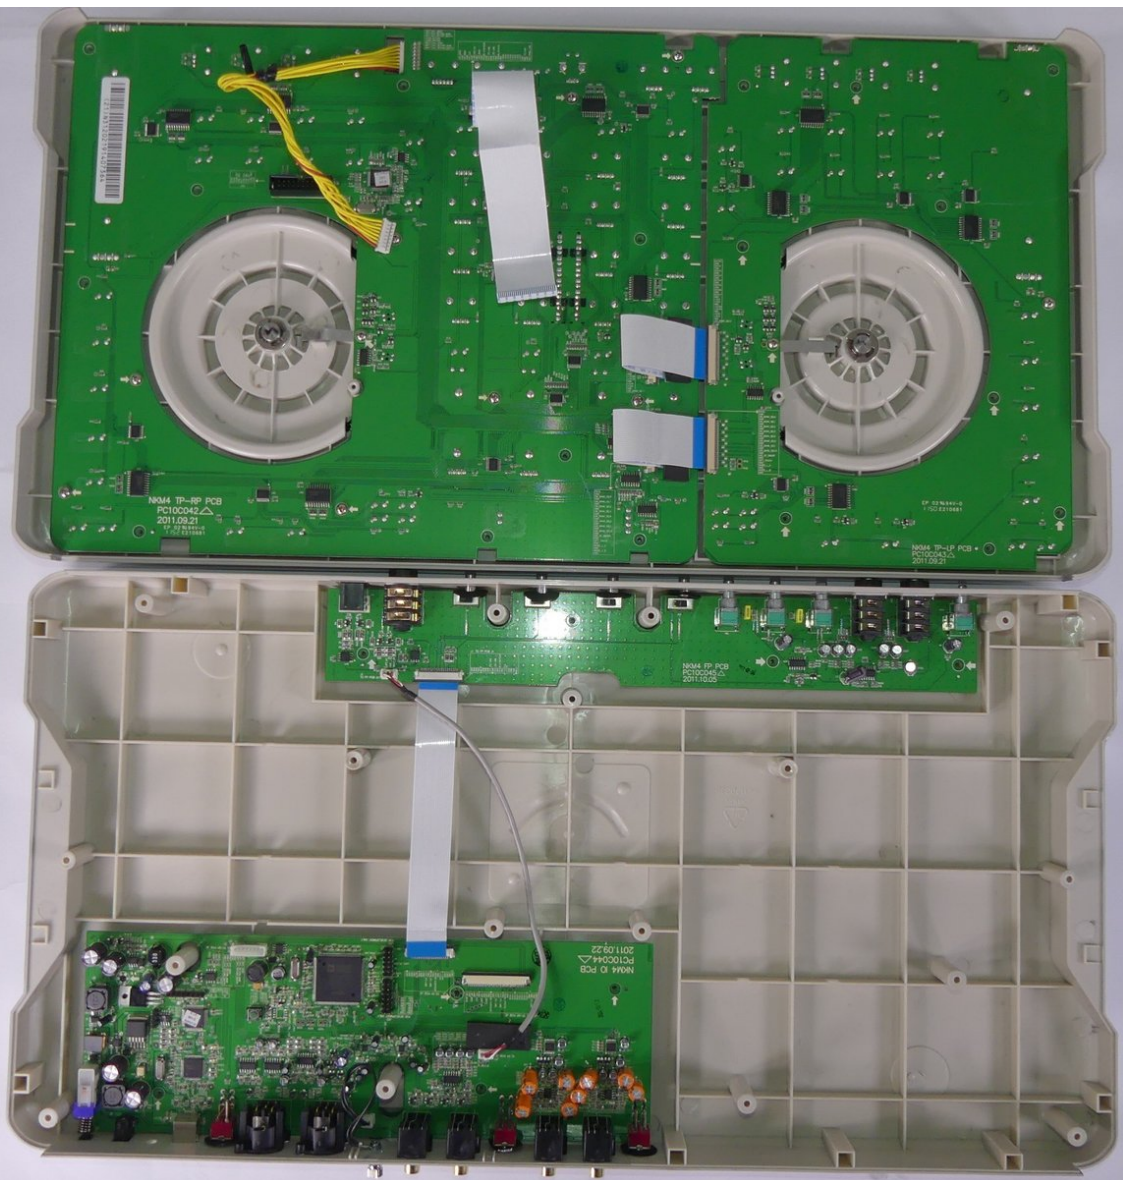

Numark N4 Disassembly

This guide details how to open the Numark N4 safely so that you can perform any necessary repairs.

Written By: Hunter Bassett



INTRODUCTION


This method of opening your Numark N4 only requires removing screws and prepares it for the repair guides featured here.



TOOLS:


- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Numark N4 Disassembly

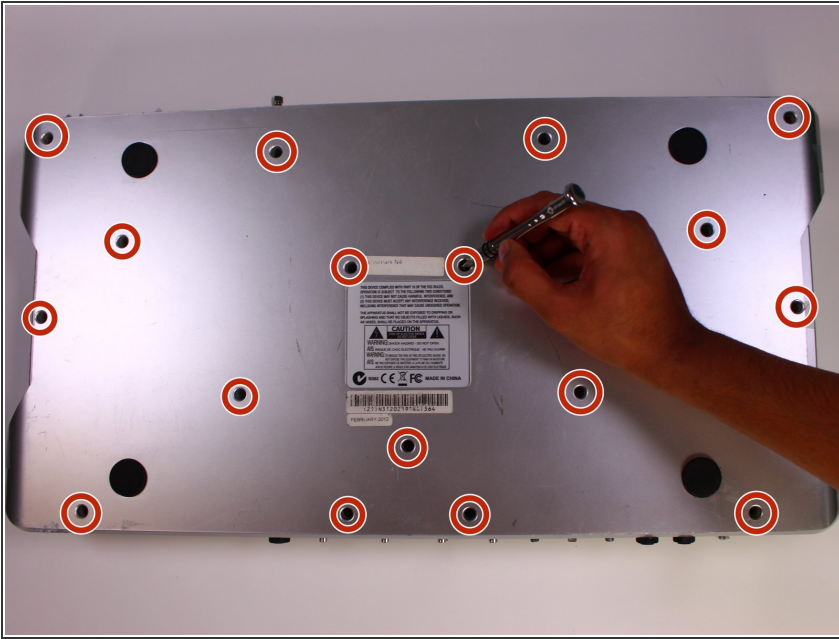


- Turn the Numark N4 over so that the bottom panel is facing upwards.
- Loosen and remove the 17 12mm screws from the bottom panel using a Phillips #2 screwdriver.

Step 2

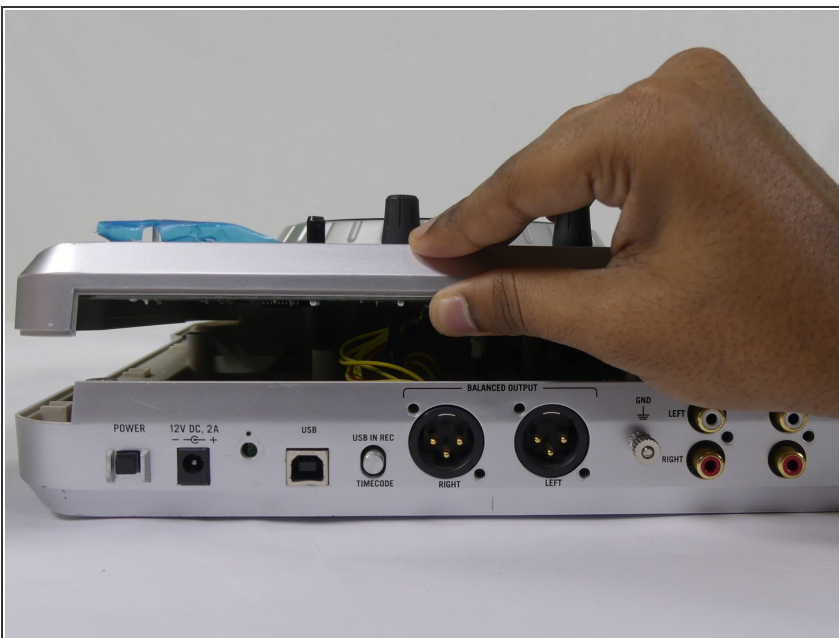


- Using your fingers, gently pull apart the two panels of the device until you feel resistance from the cables.

Step 3

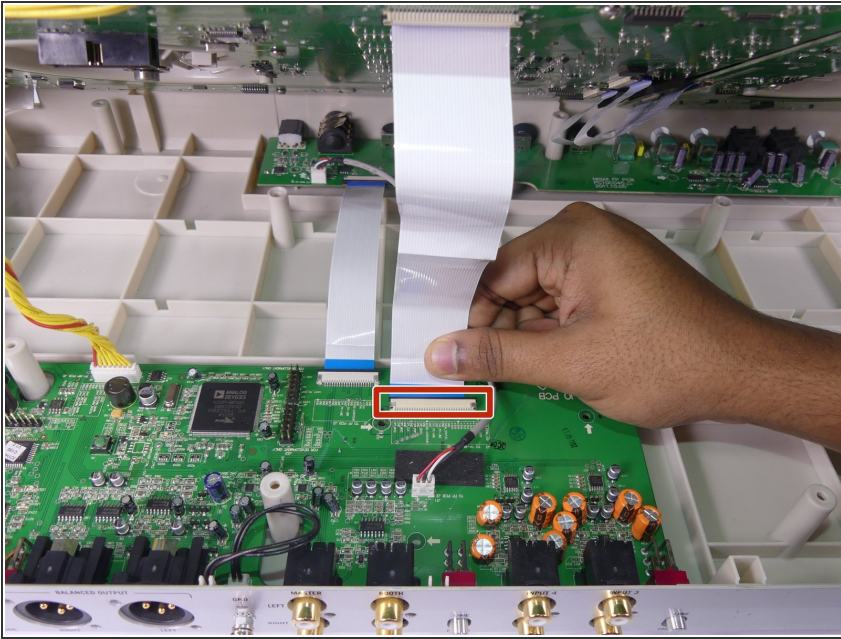


- Using your fingers, gently unplug the larger ribbon cable as pictured.

Step 4

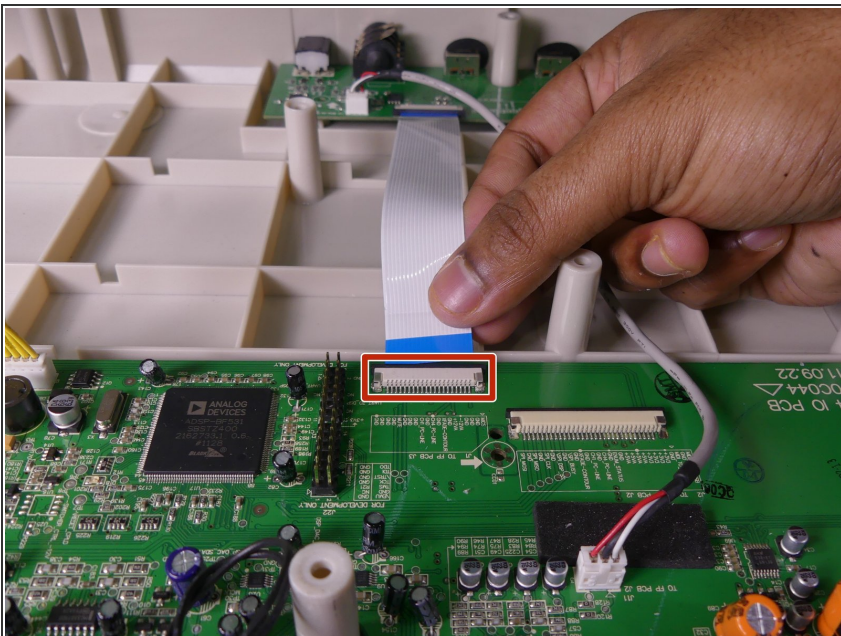


- Using your fingers, gently unplug the smaller ribbon cable as pictured.

Step 5

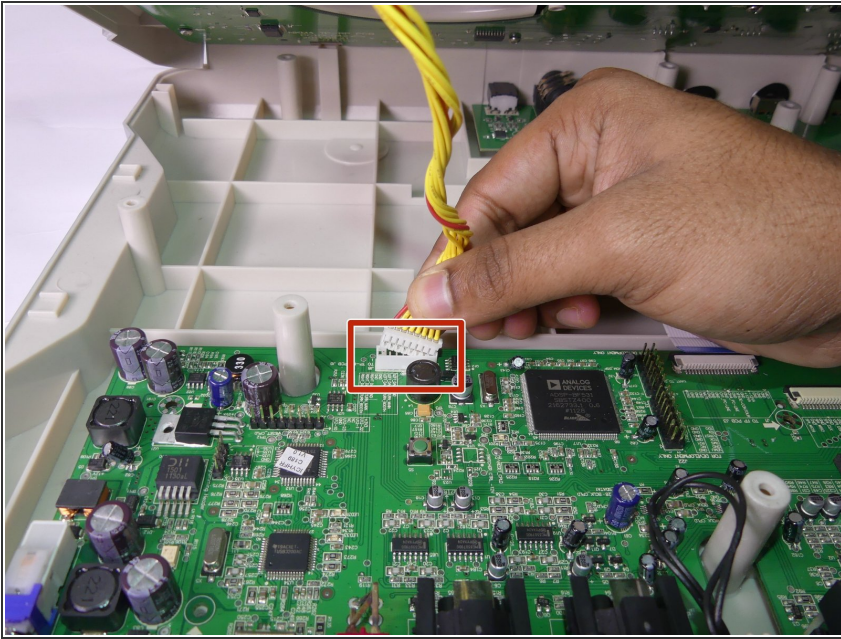

- Using your fingers, gently unplug the yellow and red cable as pictured.

Step 6

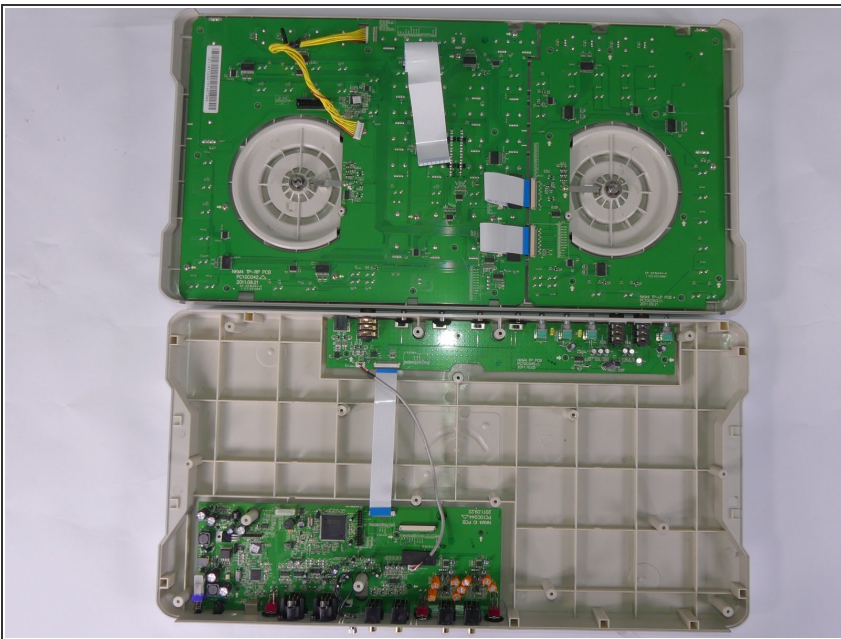

- Open the two panels completely, gently placing each side on your working area to avoid damage to the buttons on the outside face.

To reassemble your device, follow these instructions in reverse order.