



LENOVO G70-35 RAM Replacement

This guide will show you how to replace the RAM in Lenovo G70-35 Laptop.

Written By: [abdualmjeed Alabdurazzaq](#)



INTRODUCTION

This guide will walk you through replacing the RAM sticks of your device.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Back Cover




- Unscrew the two screws using a Phillips #0 screwdriver.

Step 2



- Use a spudger to lift the back cover and remove it from the device.

Step 3 — RAM

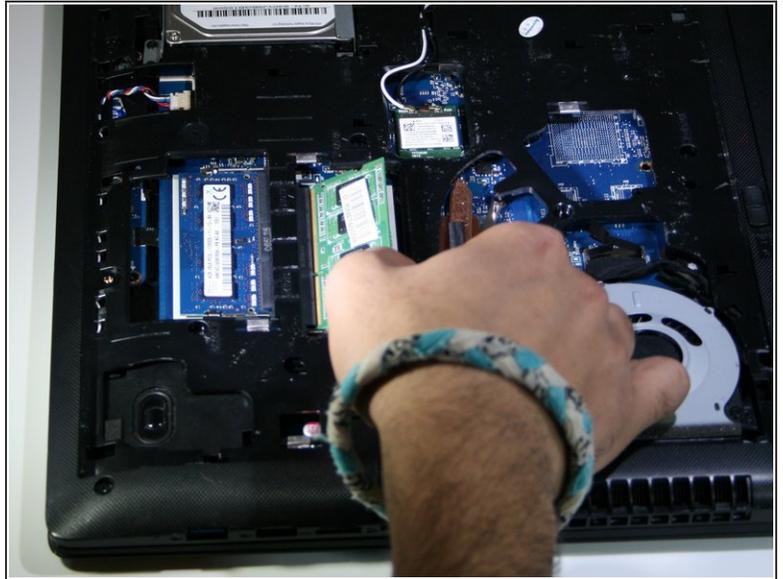

- Using your fingers, remove the RAM from the device.
- ⓘ When creating our guide, we did not have access to RAM in the device.

To reassemble your device, follow these instructions in reverse order.