



# Alienware M15x Compartment Door Replacement

This guide will explain how to remove the compartment door to the Alienware M15x.

Written By: Jake Alexander



---

## INTRODUCTION


Use this guide for help on removing the compartment door. This is necessary for other replacement guides such as the GPU and the hard drive.



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Battery

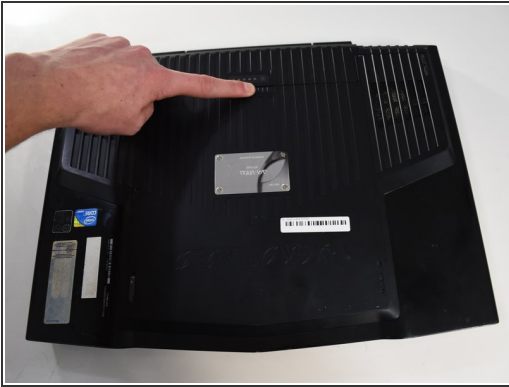

- Remove the battery by sliding the latch to the left and pulling the battery up.

## Step 2 — Compartment Door



- Remove the two 4-mm screws that hold the compartment door to the rest of the computer using a PH#0 screwdriver tip.

## Step 3



- Slide the compartment door towards the front of the computer and lift.

To reassemble your device, follow these instructions in reverse order.