

# **PlayStation 4 Slim Power Supply Replacement**

Use this guide to remove or replace your...

Written By: Hernan Rodriguez



#### **INTRODUCTION**

Use this guide to remove or replace your PlayStation 4 Slim's power supply.

#### TOOLS:

TR8 Torx Security Screwdriver (1) Metal Spudger (1) Phillips #1 Screwdriver (1) iFixit Opening Tool (1)

### PARTS:

PlayStation 4 Slim N15-160P1A Power Supply (1)
PlayStation 4 Slim ADP-160CR Power Supply (1)
PlayStation 4 Slim N16-160P1A Power Supply (1)
PlayStation 4 Slim ADP-160ER Power Supply (1)
PlayStation 4 Slim ADP-160FR Power Supply (1)

#### Step 1 — Bottom Cover







- Locate the plastic warranty sticker next to the three ports on the side of the console.
- Remove the warranty sticker by peeling it off with any kind of spudger.

A Removing the warranty sticker will NOT cause your warranty to be null and void.





• Unscrew and remove the now exposed 5.0mm screw using a T8 security Torx screwdriver with a counter-clockwise motion.

### Step 3







- Place the Playstation 4 Slim upside down with the side of the screw you just removed facing you.
- Pry up on the two corners that are facing you with your fingers.
- (i) This may take a bit of force to open up and you will hear a fairly loud click when the bottom cover detaches.
- Remove the bottom cover by sliding it towards the back corners and lifting up.

#### Step 4 — Power Supply







- Place the Playstation 4 Slim right side up, with the PS logo on top and the side with the words "SONY" and "PS4" facing you.
- Pry up on the two corners that are facing you with your fingers.
- (i) This may take a bit of force to open and you will hear a fairly loud click when the top cover detaches.
- Remove the top cover by sliding it towards the back corners and lifting up.

### Step 5








- Unscrew and remove the two screws (left one 31.0mm and right one 24.0mm) using a T8 screwdriver with a counter-clockwise motion.
- Unscrew and remove the 3.0mm screw using a Phillips #1 screwdriver with a counterclockwise motion.




 Remove the four 16mm Philips screws holding the power supply in place.

# Step 7

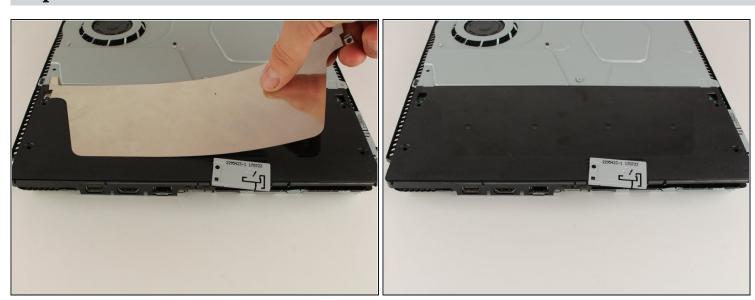


 Remove the metal sheet from the top of the power supply by grabbing and lifting up with your hands.

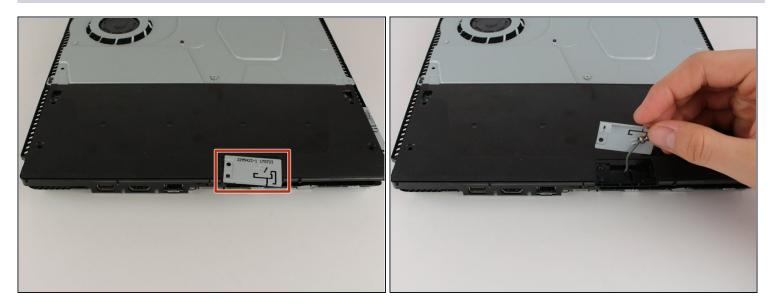

• Remove the antenna from the top of the power supply by guiding the wire with your fingers through the groves underneath the metal panel.

# Step 9

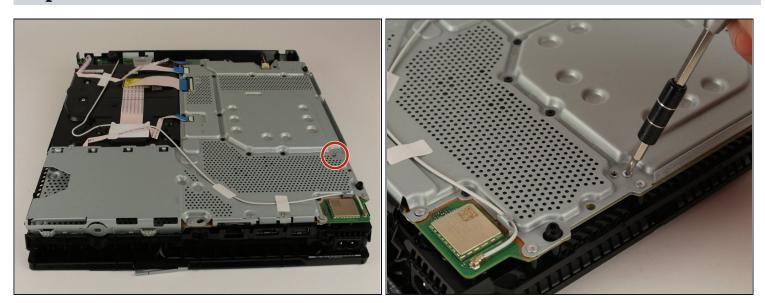

- Flip the Playstation 4 Slim onto its back.
- Unscrew and remove the 4.0mm screw using a Phillips #1 screwdriver with a counterclockwise motion.








- Use a plastic opening tool to make space between the power supply and console by wedging and wiggling it in-between the two.
- Lift the power supply up and onto its back on the metal sheet using your hands.

### Step 11





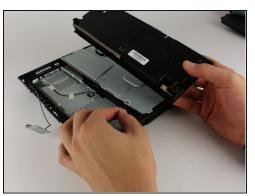

- Disconnect the wire connection from the power supply by firmly gripping it with your fingers or tweezers and pulling out.
- Remove the power supply completely by grabbing and lifting up with your hands.

To reassemble your device, follow these instructions in reverse order.