



# Alienware M15x Hard Drive Replacement

Upgrade or replace the hard drive in an Alienware M15x.

Written By: David Sann



## INTRODUCTION

This guide provides instructions on how to upgrade or replace the hard drive in an Alienware M15x.

---

### TOOLS:

- [Fingers](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Battery



- Remove the battery by sliding the latch to the left and pulling the battery up.

## Step 2 — Compartment Door



- Remove the two 4-mm screws that hold the compartment door to the rest of the computer using a PH#0 screwdriver tip.

### Step 3




- Slide the compartment door towards the front of the computer and lift.

### Step 4 — Hard Drive




- Use Phillips #1 screwdriver to loosen the four screws on the hard drive enclosure.

## Step 5

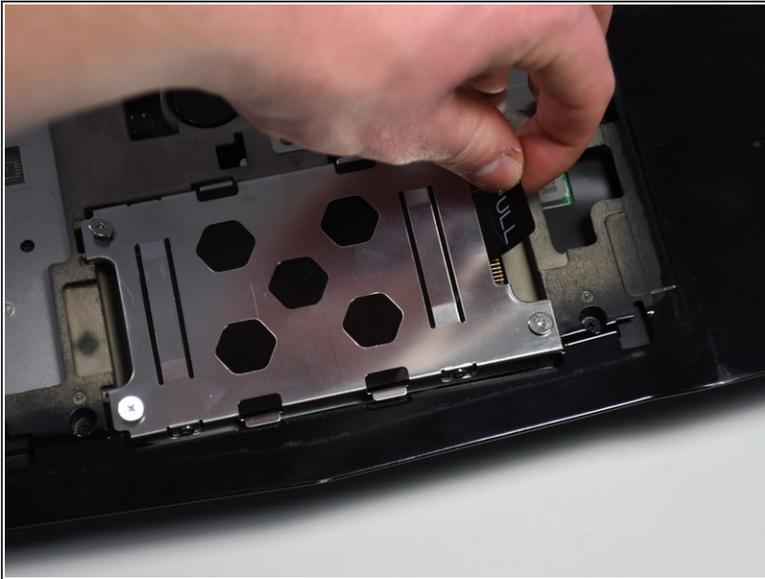

- Once the screws are loosened use the "PULL" tab to remove the current hard drive from the computer.

## Step 6

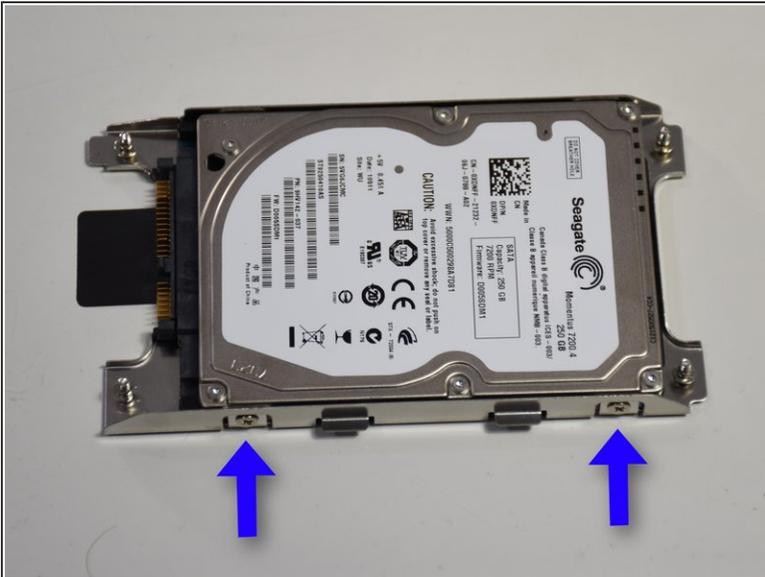

- Remove the four small screws indicated to remove the casing to the hard drive.

## Step 7



- Now take off the SATA converter and then connect it to the drive you would like to replace it with.

To reassemble your device, follow these instructions in reverse order.