



Asus ROG G751JL-DS71 CD-ROM Player Replacement

This guide will show the user how to safely remove and replace the CD-ROM Player.

Written By: Aurora Rios



INTRODUCTION


This guide will show the user how to safely remove and replace the CD-ROM Player.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — CD-ROM Player

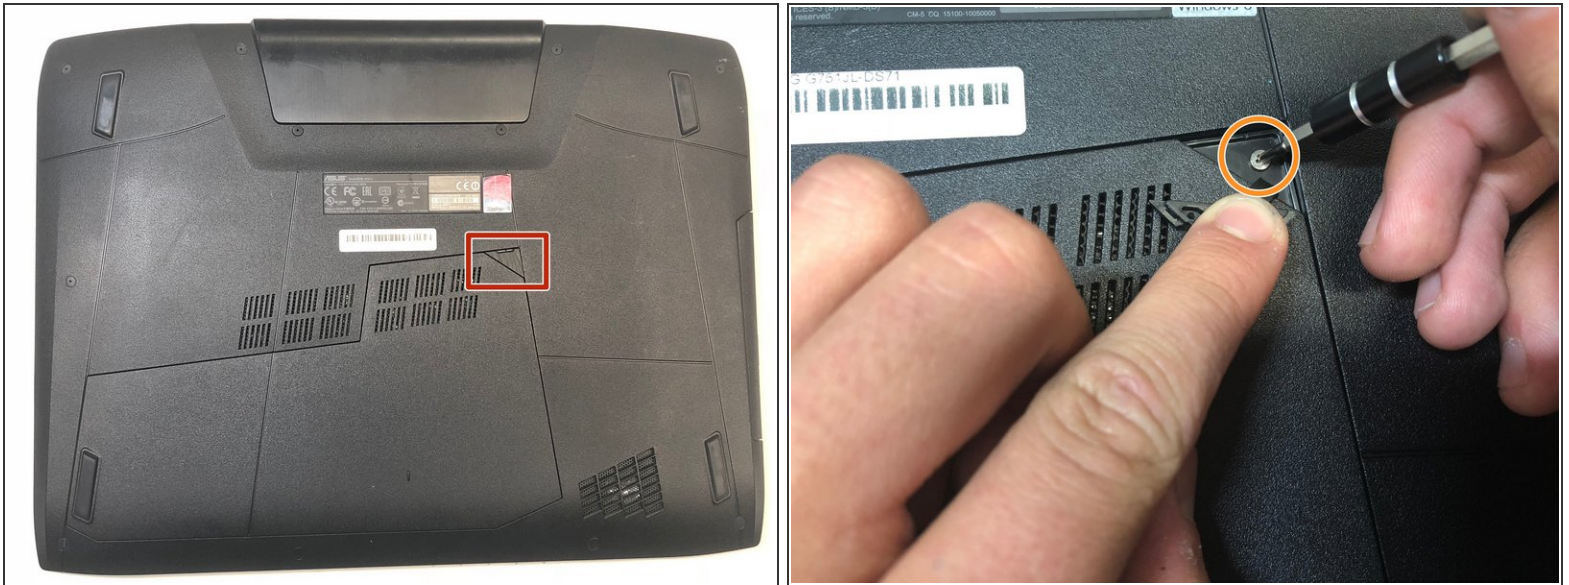


- Lift the rubber cover found on the bottom of the laptop.
- Remove the 5.2 mm screw with a Phillips 1 Screwdriver.

Step 2



- Use the nylon spudger to remove the back center panel.

Step 3

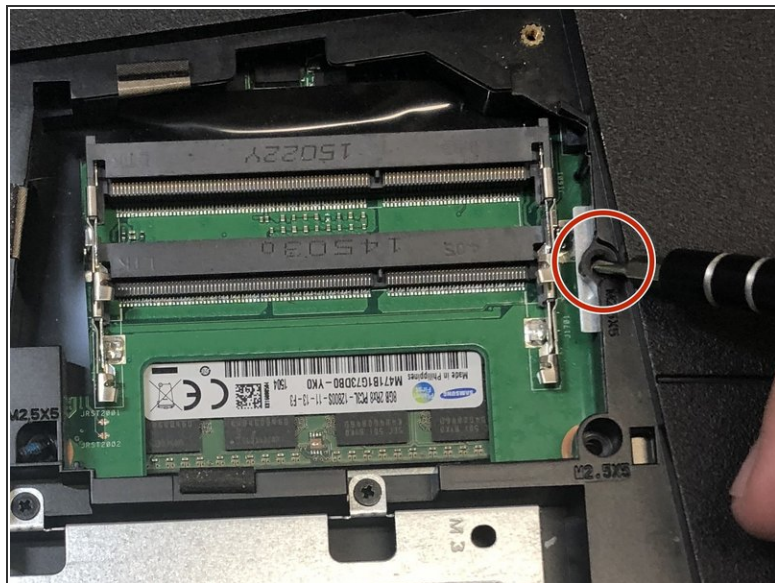

- Use a Phillips 1 Screwdriver to remove the 5 mm screw that is located underneath the back panel.

Step 4



- Pull out the optical drive found on the side of the laptop.

To reassemble your device, follow these instructions in reverse order.