



Insignia Ice Maker NS-IMP26SS7 Drain Plug Replacement

Replace Drain Plug on Insignia Ice Maker

Written By: Evan Taylor



INTRODUCTION


How to replace the Drain Plug on Insignia Ice Maker.



TOOLS:

- [Phillips #3 Screwdriver](#) (1)
-

Step 1 — Drain Plug

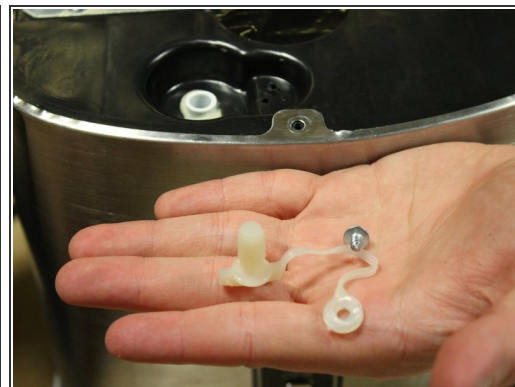

- Remove the screw fixing the plug to the Ice Maker.
- Remove the Drain Plug.

To reassemble your device, follow these instructions in reverse order.