



Bissell OptiClean Cyclonic Vacuum Nozzle Replacement

Replace broken nozzle to remove any debris that may be in the way and to restore proper suction.

Written By: Jorden Carroll



INTRODUCTION

The vacuum comes with three hose attachments. To clean or remove blockages from hose attachments, it may be necessary to remove the hose and wand attachments.

Step 1 — Nozzle



- Place the vacuum upright and locate the nozzle attachment you want removed.

Step 2



- Slide the attachment off of the end of the wand.

Step 3



- The brush nozzle attachment has two parts, which can be separated and replaced.
- ⓘ The front of the vacuum has slots to hold up to two vacuum attachments. To store, simply place the attachment in the framed slots.

To reassemble your device, follow these instructions in reverse order.