



OnePlus 5T Speaker Replacement

Use this guide to remove or replace the speaker...

Written By: Dominik Schnabelrauch



INTRODUCTION

Use this guide to remove or replace the speaker in your OnePlus 5T.

TOOLS:

- [Tweezers](#) (1)
 - [SIM Card Eject Tool](#) (1)
 - [Spudger](#) (1)
 - [iFixit Opening Tool](#) (1)
 - [iFixit Opening Picks \(Set of 6\)](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [T2 Torx Screwdriver](#) (1)
-

Step 1 — Back Cover



- Before you begin, switch off your phone.
- Remove the SIM card tray.

Step 2



- Remove the two Torx T2 screws (2.5 mm length).
- The OnePlus 5T doesn't use a lot of adhesive to secure the backcover, however the clamps are very strong and require some force during the opening procedure.

Step 3



- Insert an opening tool between the display and the backcover at the bottom end of the phone.
- Use the opening tool to create a gap between back cover and display.
- Insert an opening pick in the gap you created with the opening tool.

Step 4



- Slide the opening pick to the bottom right corner of the phone.
- Insert a second opening pick and slide it to the bottom left corner of the phone.

Step 5



- Slide the opening pick around the bottom left corner and then up along the left edge of the phone to open the plastic clamps that secure the backcover.

Step 6




- Slide the opening pick around the bottom right corner and then up along the right edge of the phone to open the plastic clamps that secure the backcover.

Step 7



- Try not to remove the backcover all the way yet. The fingerprint and the charging port and headphone flex cables are still connected to the motherboard.
- Flip your phone and carefully lift the bottom end of the backcover away from the phone assembly. Fold it to left and hold it at an 80° angle.

Step 8

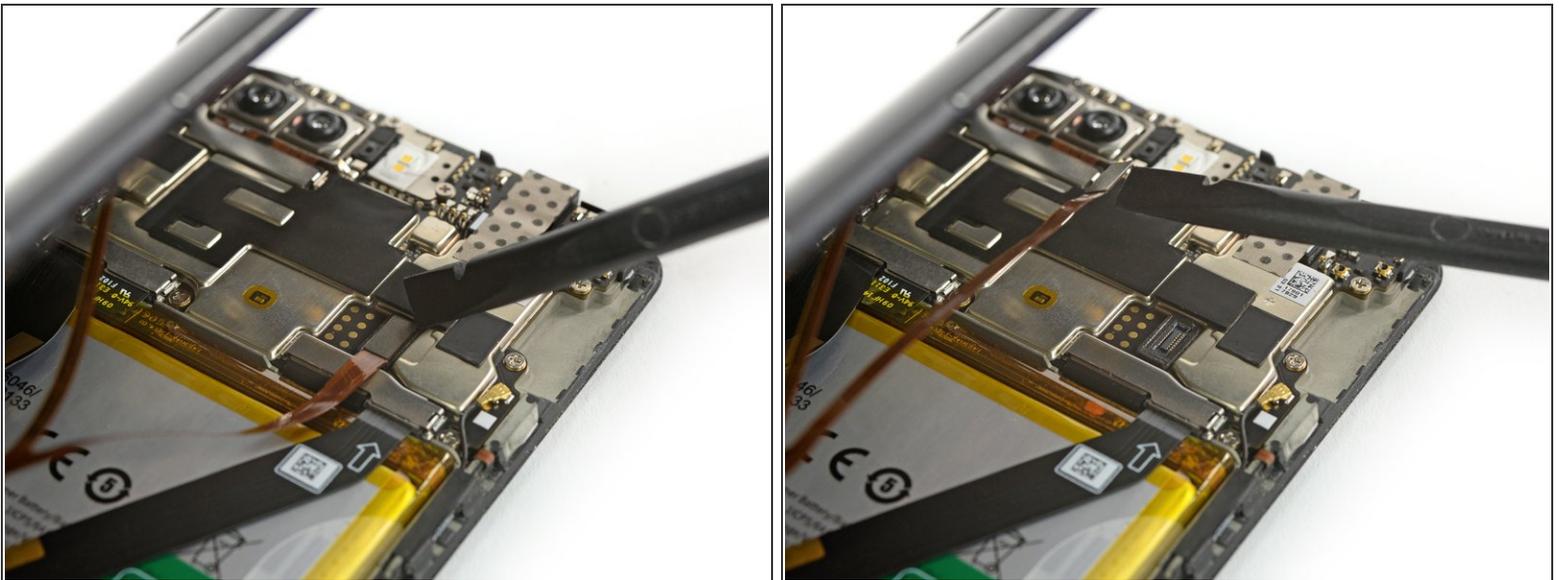


- Use a spudger to pry up and disconnect the fingerprint flex cable.

Step 9




- Twist the backcover around 180° and lay it down to align the bottom end of the backcover the top edge of the battery.

Step 10

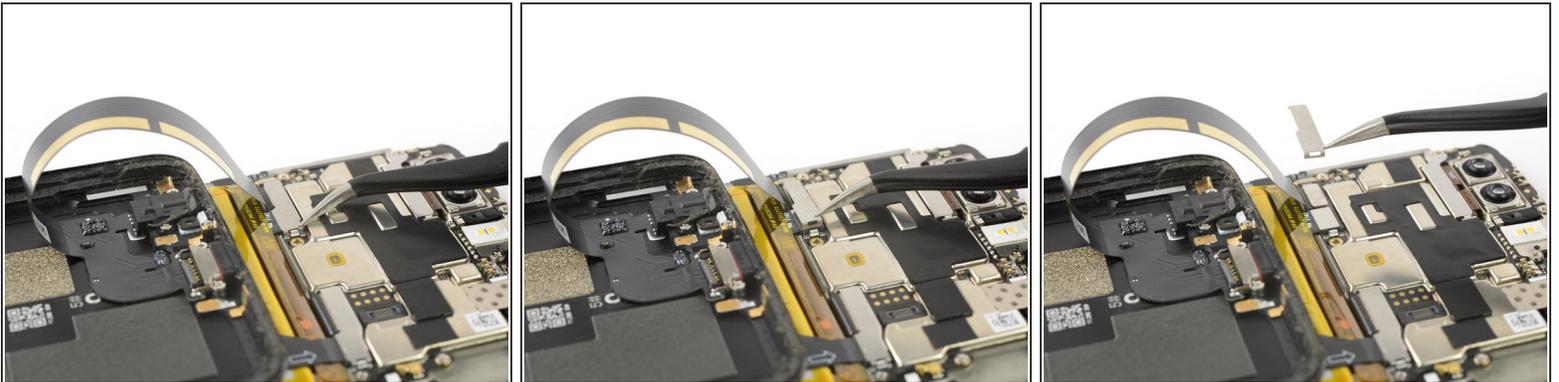


- Use a pair of tweezers to remove the small metal shield which covers the battery and the charging port and headphone jack flex cable connectors.

Step 11

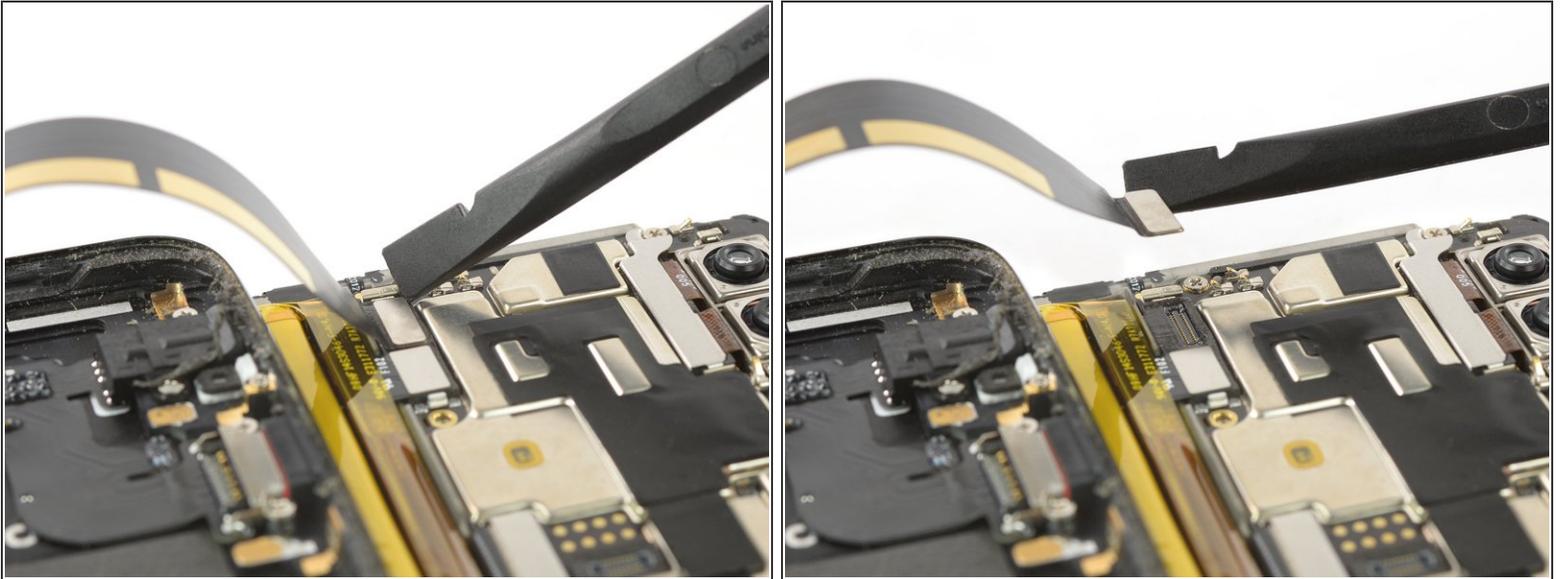

- Use a spudger to pry up and disconnect the charging port and headphone jack flex cable.

Step 12

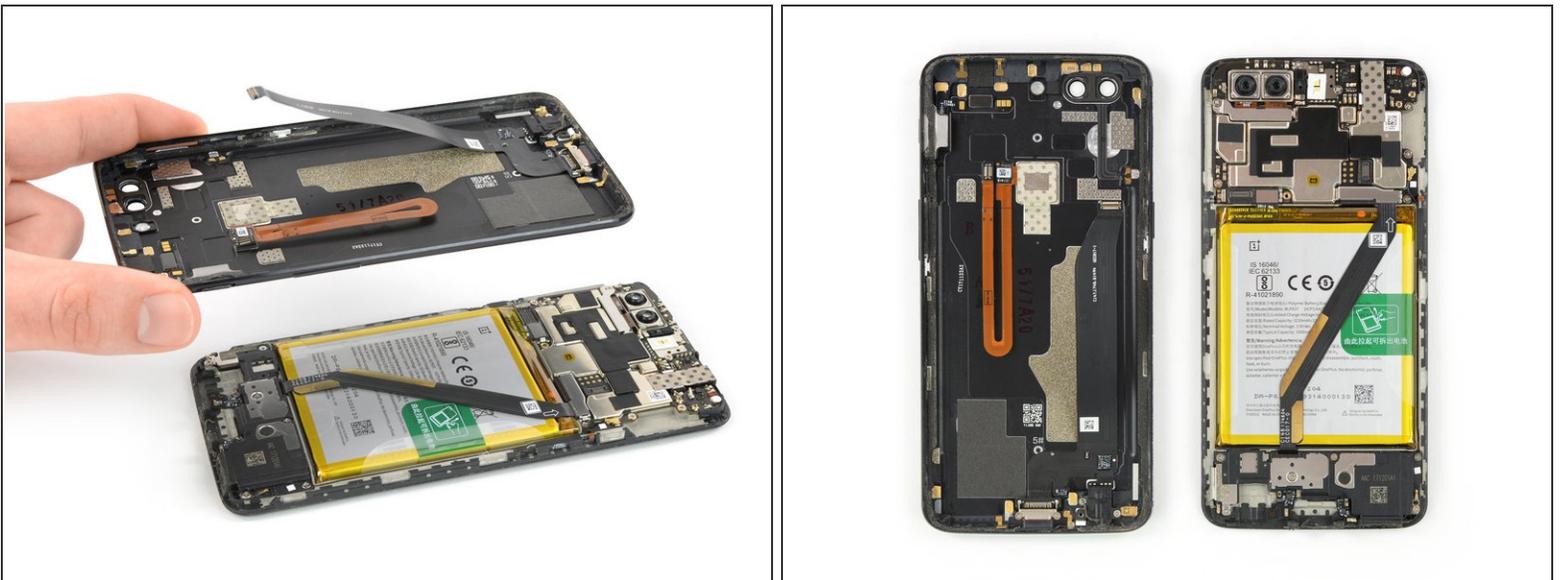

- Remove the backcover.

Step 13 — Battery Disconnect



- Use a spudger to pry up and disconnect the battery flex cable.

Step 14 — Speaker



- Remove the six Phillips #00 screws (2.9 mm length).

Step 15



- Slide an opening pick underneath the left side of the speaker.
- Use the opening pick to pry the speaker up and out of its recess.

Step 16



- Remove the speaker.

To reassemble your device, follow these instructions in reverse order. Apply new adhesive where necessary after cleaning the relevant areas with isopropyl alcohol (>90%).

Take your e-waste to an [R2 or e-Stewards certified recycler](#).

Repair didn't go as planned? Check out our [Answers community](#) for troubleshooting help.