



ASUS N550JK-DS71T Laptop Battery Replacement

This guide will show you how to remove and replace the battery on the device.

Written By: Steven Hahn



INTRODUCTION

The removal of the battery is an essential bit of knowledge, since you will have to do this before most other repairs. Removing the battery first creates a safe environment to work in, which will eliminate most shock hazards.

TOOLS:

- [T5 Torx Screwdriver](#) (1)
 - [JIS #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Back Case





- Turn the laptop off and unplug all cables.
- Flip over so the bottom is facing you.
- Remove the ten 3mm Torx T5 screws from the bottom cover.

Step 2




- Use a spudger to wedge between the laptop and bottom cover—lift upwards to pry open.
- Run the spudger along the perimeter of the bottom cover to remove.

Step 3 — Battery

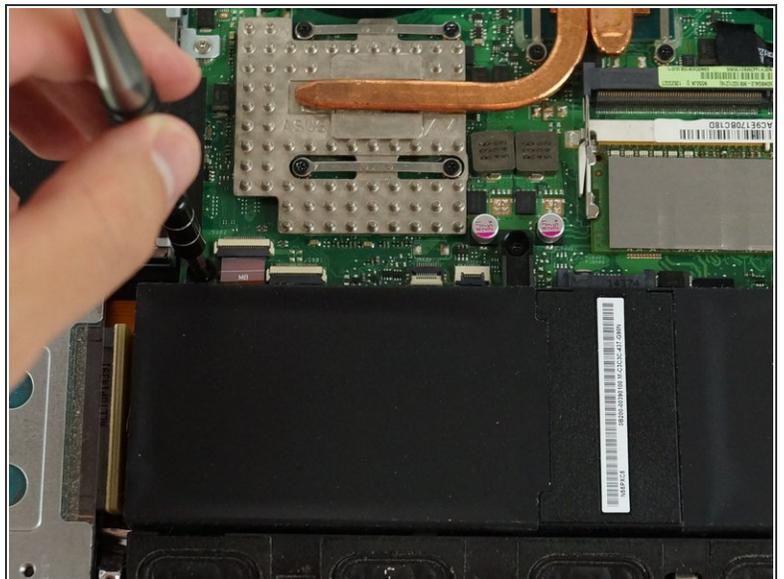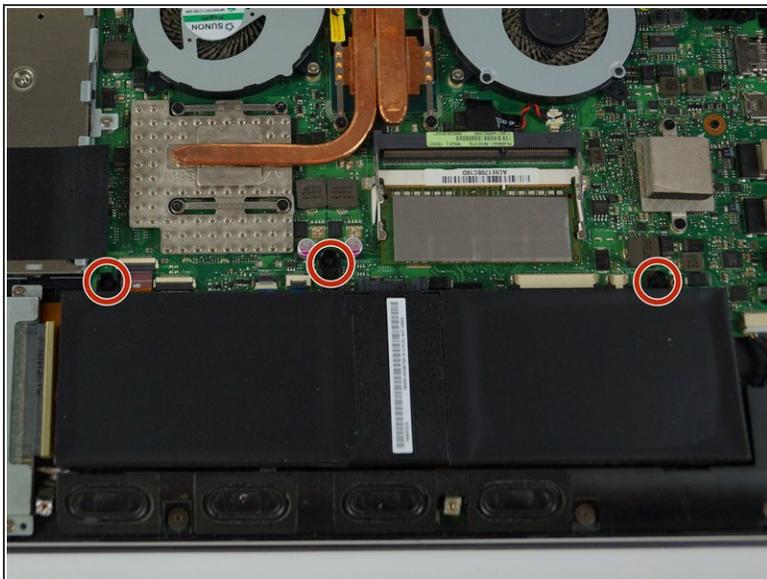

- Remove the three 4mm JIS #0 screws from the battery.

Step 4

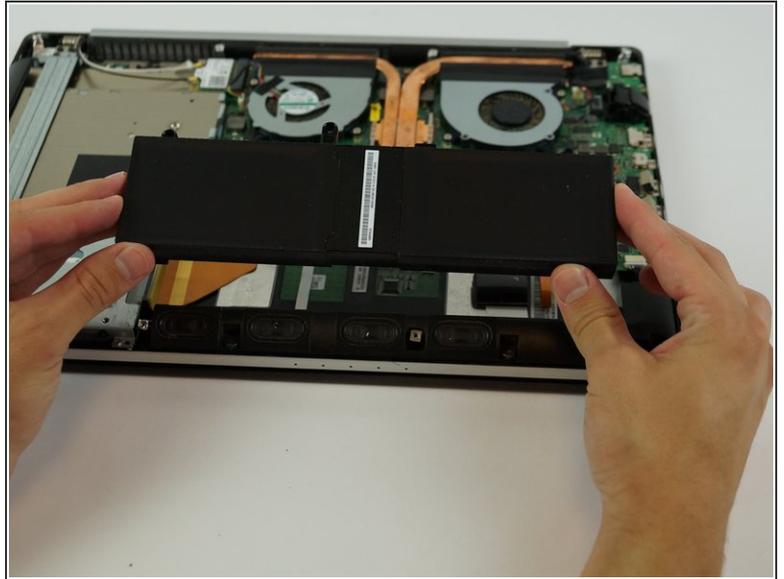

- Using both hands, lift the battery vertically out of the device.

To reassemble your device, follow these instructions in reverse order.