



Best Budget Sandwich Maker Disassembly


Written By: Bas



 **TOOLS:**

Pro Tech Toolkit (1)

Step 1 — Best Budget Sandwich Maker Disassembly

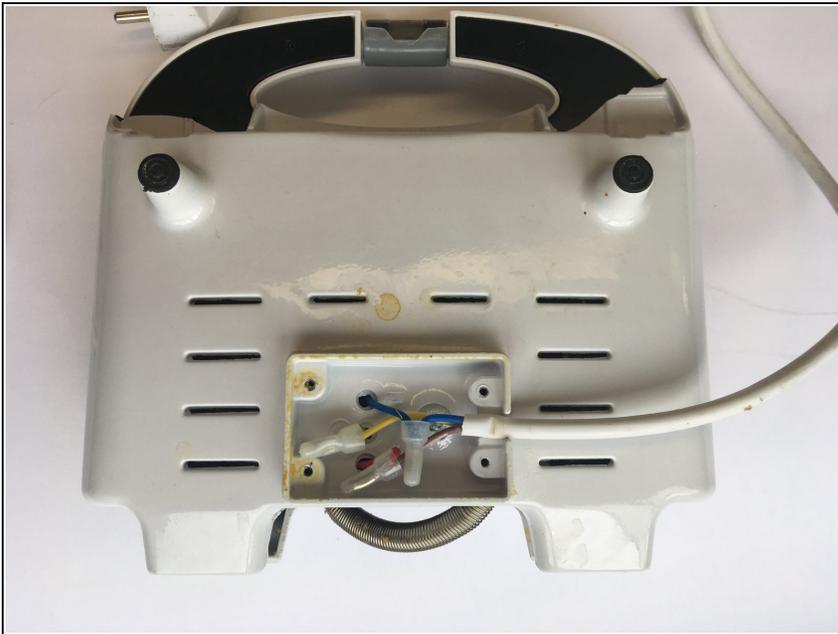


- Remove screws from cable housing and remove housing.

Step 2




- Remove screws from aesthetic handle cover and remove cover.

Step 3

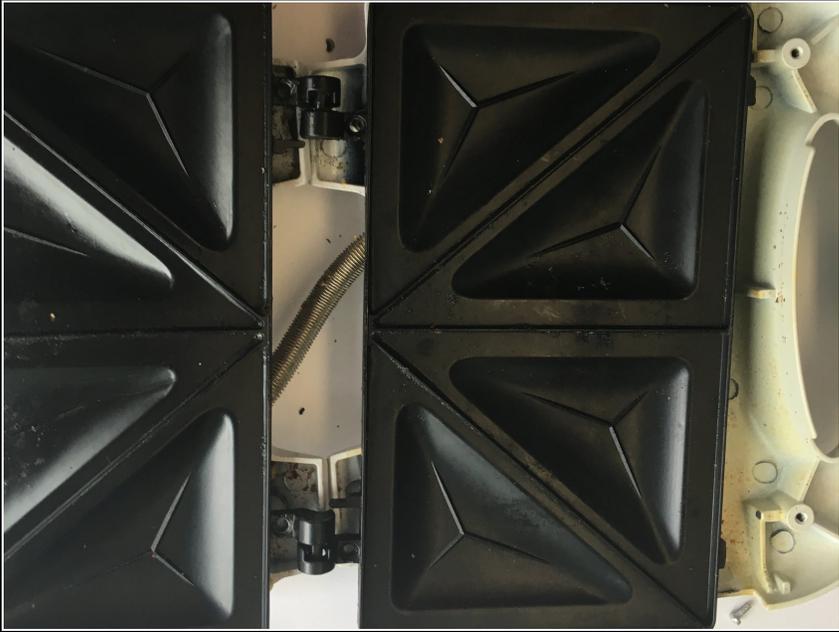

- Unscrew the waffle iron from its hinges.

Step 4

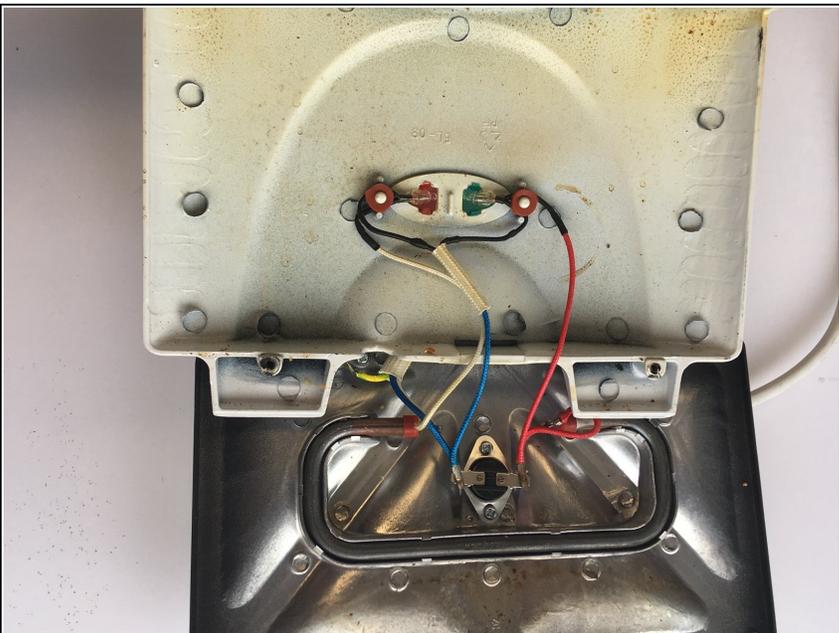


- Remove the red rubber insulation rings.

Step 5




- Remove top casing.

Step 6

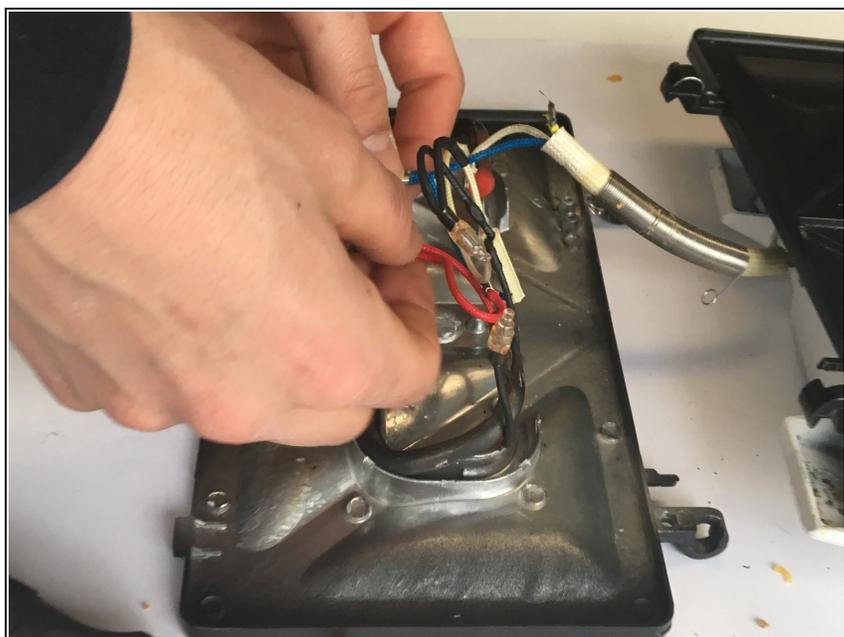

- Unscrew and remove the cable harness.

Step 7

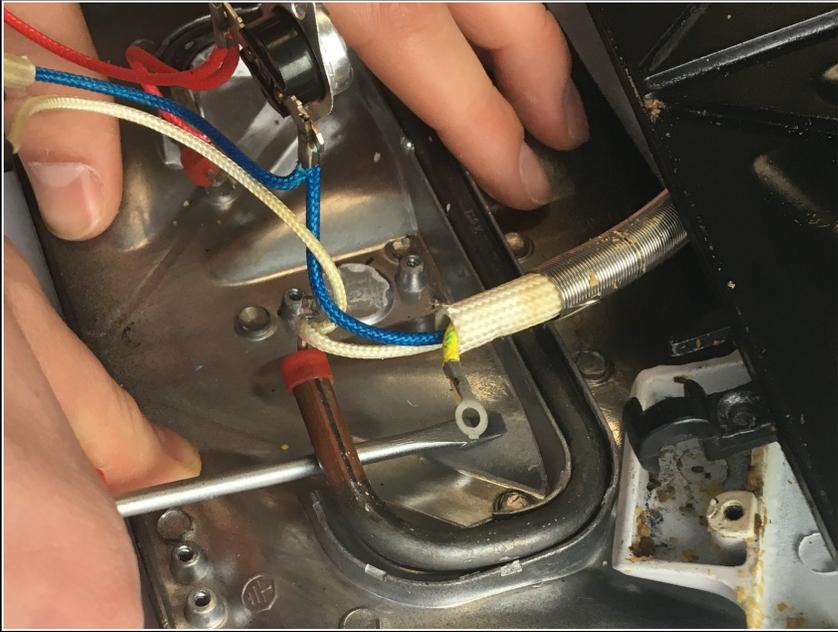

- Unscrew and remove the heat sensor.

Step 8



- Separate the snap fits of the coloured light caps and remove them.

Take great care in disassembling if you wish to reassemble all parts into a functioning product.