



Oster Expressbake CKSTBRTW20 Inner Chamber Replacement

Replace the inner cooking chamber to bring your breadmaker back to breadmaking glory.

Written By: Megan Saunders



INTRODUCTION

The inner cooking chamber may get dirtied or broken with use. This guide will show how to remove the inner chamber in order to properly replace it.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [grounding strap](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Top Panel Removal



- Remove the bread pan.

Step 2



- Remove the eight 22mm Phillips #1 screws from the grey lining.
- Remove the grey liner.

Step 3



- Remove the two 11mm Phillips #1 screws from the back of the device.

Step 4



- Pop off the top case using a spudger.
- ⓘ Keep the spudger away from the control panel.
- ⚠ Be aware of wires connecting the microcontroller to the panel when removing the top lining.

Step 5 — Inner Chamber



- Disconnect microcontroller and top lining.
- ⓘ Ground yourself prior to disconnecting in order to avoid harming the inner electronics.

Step 6




- Remove the four 11mm Phillips #1 screws holding from the guard and inner lining.
- Remove small rectangular guard from bottom of liner

Step 7



- Remove the inner liner.
- ⓘ The inner liner will be connected to the outer chamber with wires.

Step 8

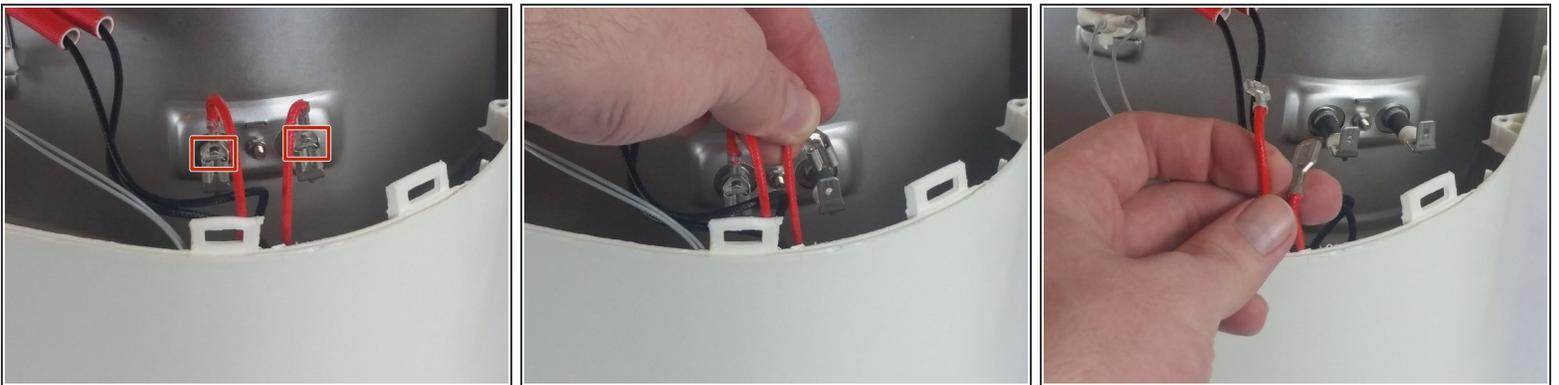

- Disconnect the red wires from the inner liner.

Step 9




- Remove the single 11mm Phillips #1 screw that's holding the inner lining in place.

Step 10



- Use a spudger to push out the connector found on the inner lining.

Step 11

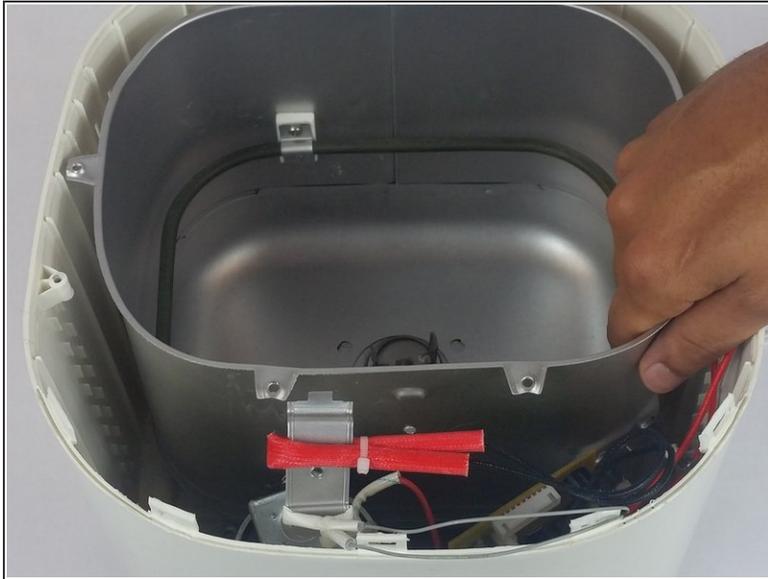

- Remove lining.

To reassemble your device, follow these instructions in reverse order.