



# Dell Alienware 14 Base Cover Replacement

Remove and replace the base cover for a Dell Alienware 14.

Written By: Terrence15



---

## INTRODUCTION


In this guide, we will show you how to remove and replace the Base Cover.

---

### TOOLS:

- [Pro Tech Toolkit](#) (1)
-


## Step 1 — Close the Display

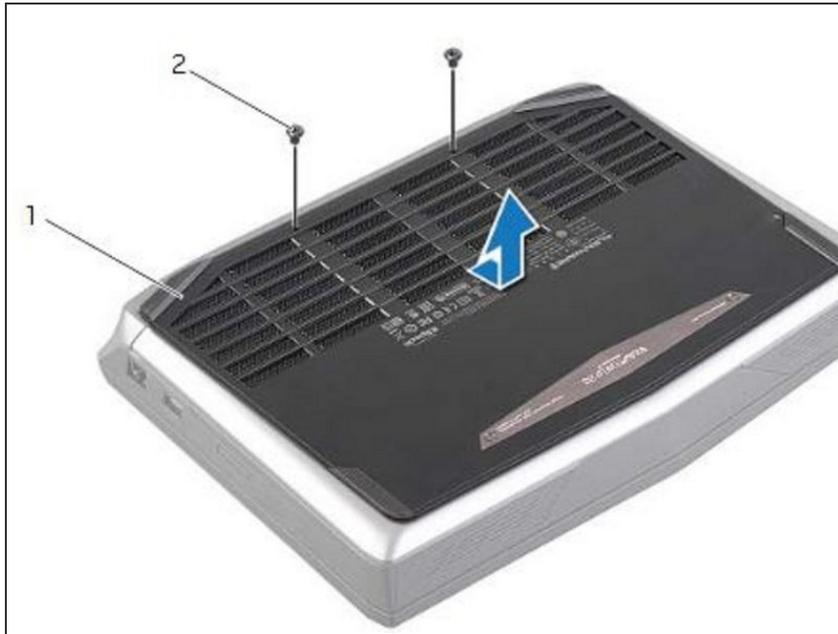

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before You Begin](#). After working inside your computer, follow the instructions in [After Working Inside Your Computer](#).


- Close the display, and turn the computer over.

## Step 2 — Remove the Screws

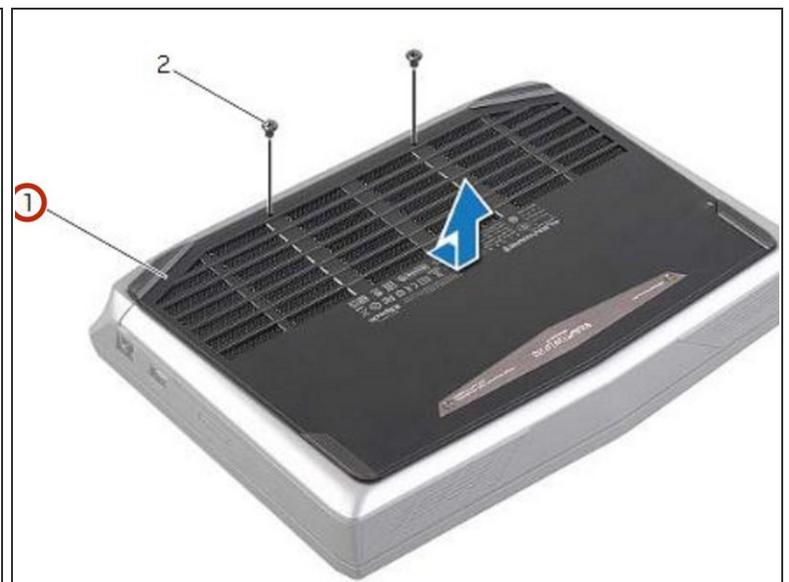

- Remove the screws that secure the base cover to the computer base.

### Step 3 — Slide and Lift the Base Cover

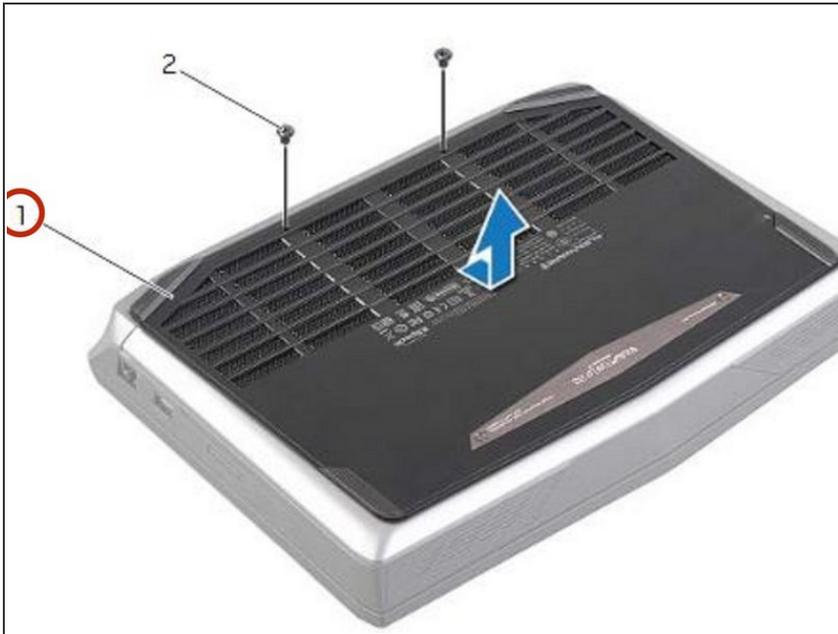

- Slide and lift the base cover off the computer base.

### Step 4 — Align the Tabs




- Align the tabs on the **NEW** base cover with the slots on the computer base and slide the base cover into place.

## Step 5 — Replace the Screws



- Replace the screws that secure the base cover to the computer base.

## Step 6 — Turn the Computer Over

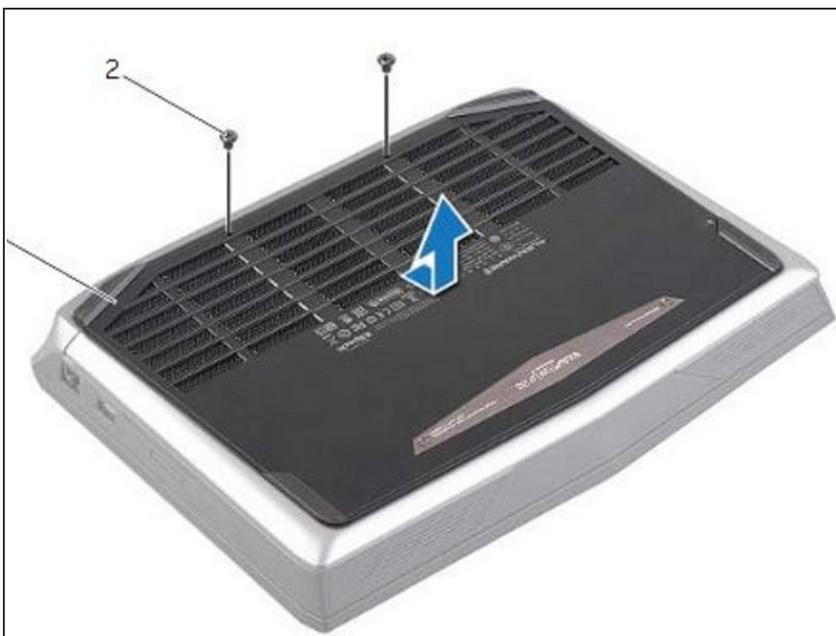

- Turn the computer over and open the display.

To reassemble your device, follow these instructions in reverse order.