



# INTRODUCTION

Are you experiencing issues powering on your flip book? Is it losing its charge very quickly? If so, this guide will help you replace a faulty battery in a few easy steps.

---

## TOOLS:

JIS #000 Screwdriver (1)

Metal Spudger (1)

Tweezers (1)

---

## Step 1 — Battery




- Remove the back 6mm and 8mm screws with a J000 screwdriver.

## Step 2




- Remove the back cover of the flip book by gently using a metal spudger.

## Step 3

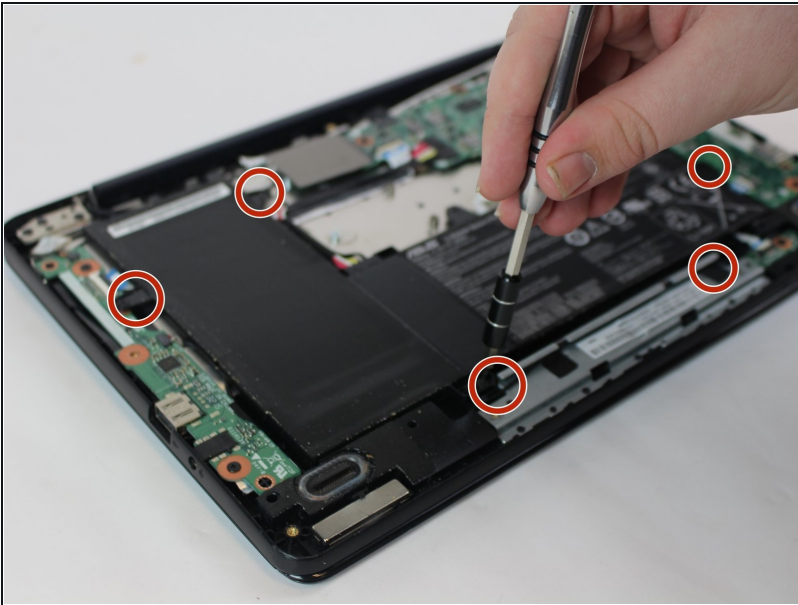

- Unscrew the battery from the motherboard using a J000 screwdriver on the 3mm screws.

## Step 4

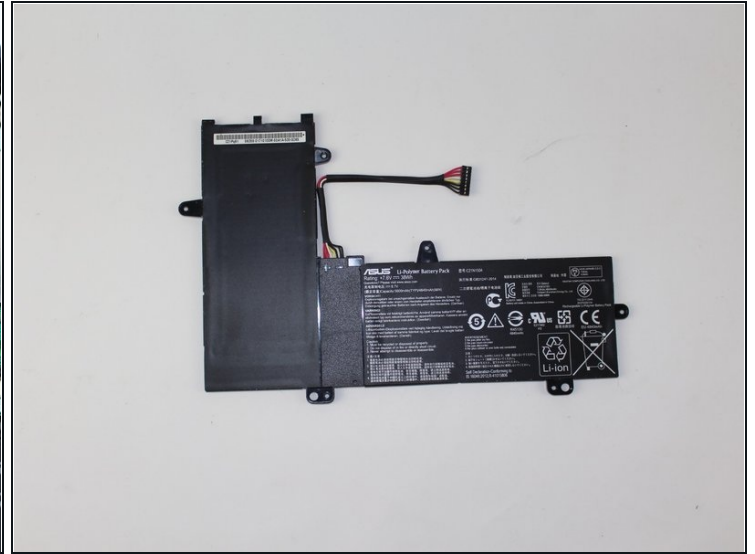

- The battery comes attached to the motherboard and needs to be disconnected before you can remove it.
- Disconnect the battery from the motherboard by gently pulling out the connection with [tweezers](#).
- Gently remove the Wifi cables hooked to the rim of the battery
- Remove the battery

---

To reassemble your device, follow these instructions in reverse order.