



ZTE Lever Battery Replacement

This guide will describe and show how to replace ZTE Lever lithium ion battery.

Written By: Michael Gonzalez



INTRODUCTION

This guide will describe and show how to replace ZTE Lever lithium ion battery.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [iFixit Pro Tech Toolkit](#) (1)
-

Step 1 — Battery




- Remove the SD card and the Sim card from the device.
- ⓘ The Sim and SD cards are not shown here as our device did not come with them.

Step 2



- Use an iFixit opening tool to separate the back from the device.

Step 3

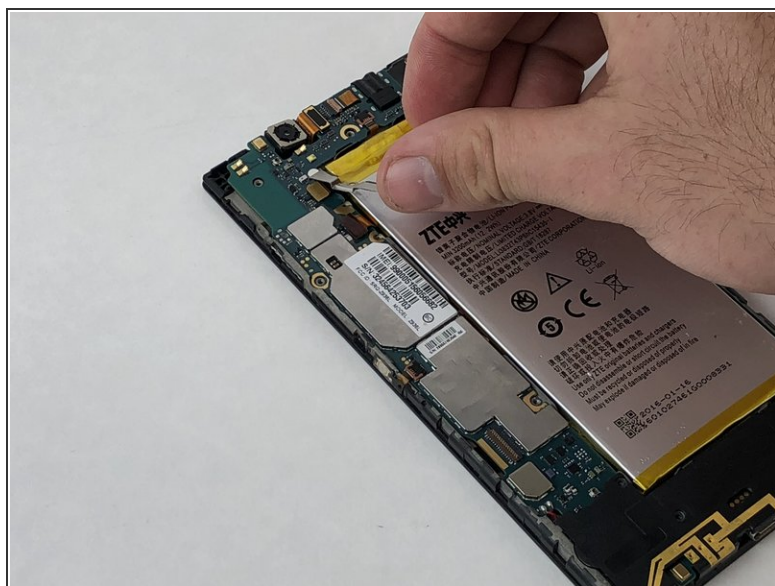

- Remove the two 1.6mm Phillips #0 screws from the battery plug cover.
- Remove the cover.

Step 4



- Disconnect the battery cable from the motherboard with a plastic opening tool.

Step 5



- Use your hands, or a plastic opening tool, to pry the battery from the phone.

To reassemble your device, follow these instructions in reverse order.