



# Dell Alienware 17 Base cover Replacement

Written By: Terrence15



---

## INTRODUCTION

Remove and replace base cover

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — turning the computer over



**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before Working Inside Your Computer](#). After working inside your computer, follow the instructions in [After Working Inside Your Computer](#).

- Close the display and turn the computer over

## Step 2 — removing screws



- Remove the screws that secure the base cover to the computer base.

### Step 3 — slide base cover



- Slide the base cover toward the front of the computer.

### Step 4 — remove the base cover



- Lift the base cover off.

## Step 5 — replacing base cover



- Align the tabs on the **new** base cover with the slots on the computer base

## Step 6 — placing screw



- Slide the base cover toward the back of the computer and align the screws holes on the base cover with

the screw holes on the computer base.

## Step 7 — secure base cover



- Replace the screws that secure the base cover to the computer base.

To reassemble your device, follow these instructions in reverse order.