




Dell Alienware 18 Base Cover Replacement

Written By: darrius

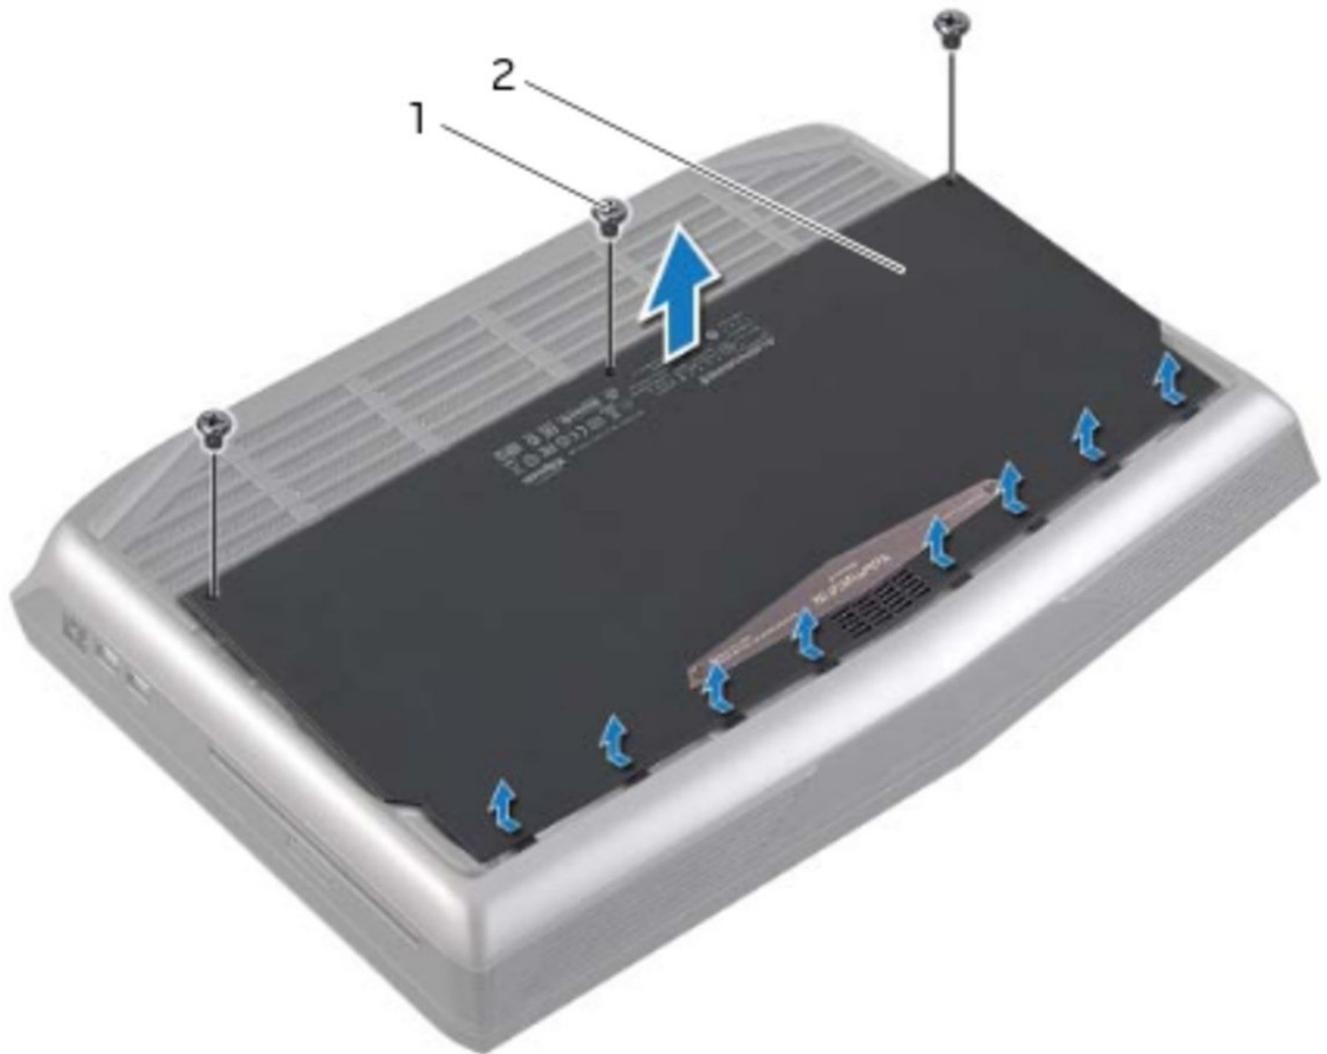

INTRODUCTION

In this guide, we will be showing you how to remove and replace the Base Cover.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Before You Begin



⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before You Begin](#).

Step 2 — Remove the base cover screws



- Use a Phillips screwdriver to remove the three screws securing the base cover.

Step 3 — Slide the Cover



- Slide the base cover towards the rear of the computer and lift it off the computer base.