




# Lenovo IdeaPad U530 Touch Battery Replacement

Replacement of the battery in the case of damage or defection.

Written By: Robert Perry

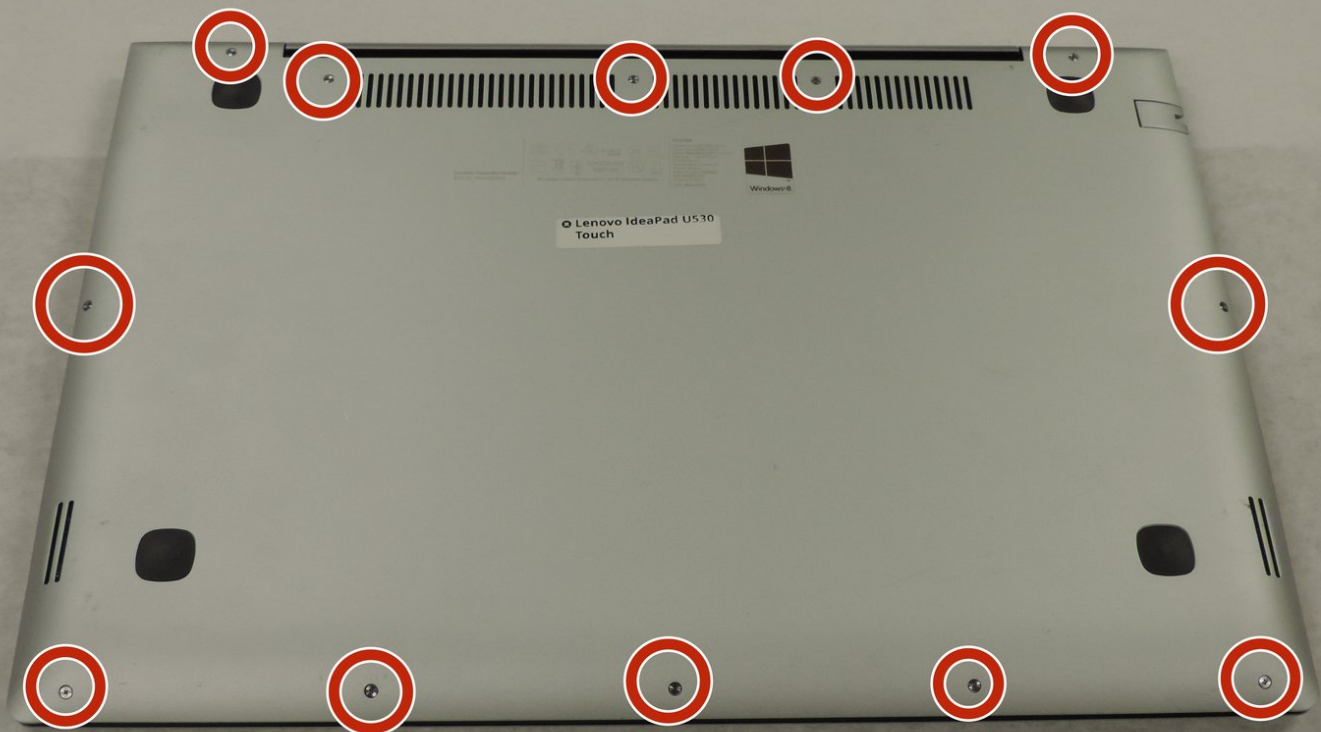

## INTRODUCTION

This guide will assist with the replacement of the battery. The user should be familiar with using a screwdriver, and should be able to keep track of all removed screws. Be careful of any sharp edges within the computer itself.



### TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [JIS #1](#) (1)



### PARTS:


- [Replacement Battery](#) (1)

## Step 1 — Battery




- Remove the back panel by removing all screws. Use a PH000 screwdriver head.
- Make sure to also remove the hinge screws.

## Step 2

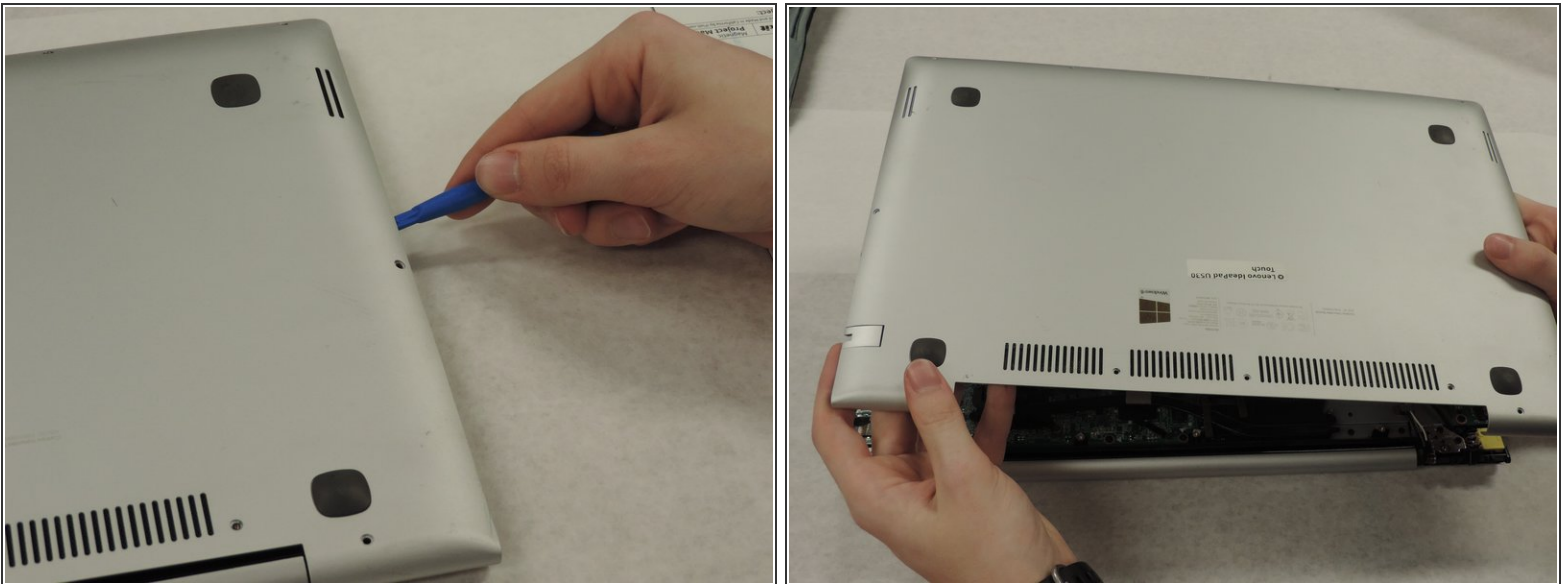



- To remove the panel, use a plastic opening tool to prevent any damage.

## Step 3

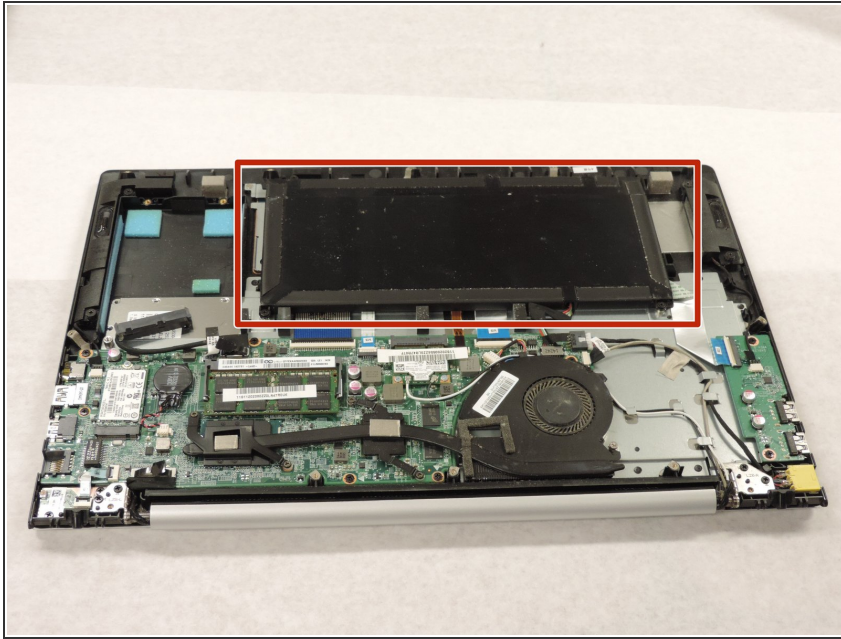

- Locate and assess the battery. Pictured in the upper right area of the computer.


## Step 4

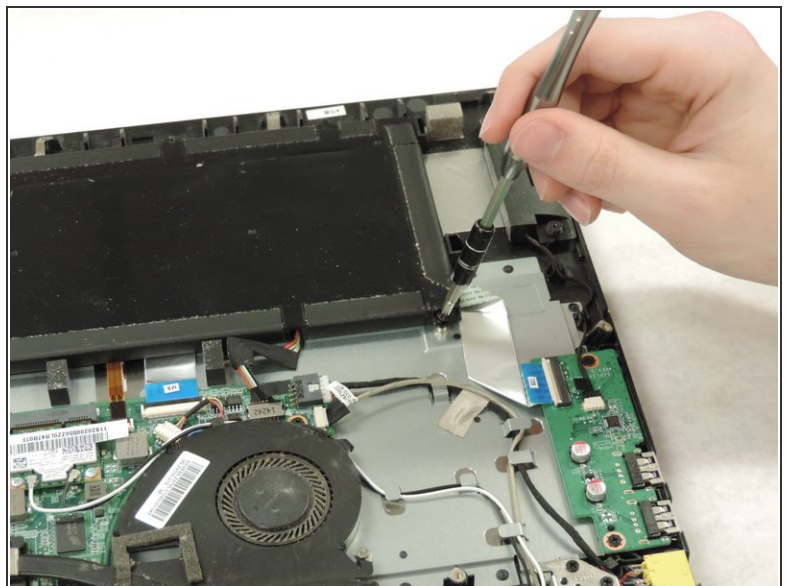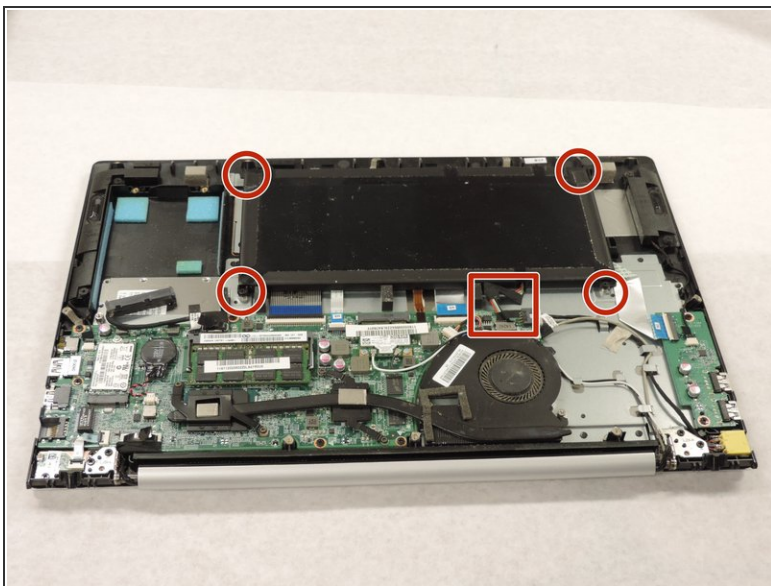

- Locate and remove all screws attaching the battery to the hull of the computer. It is recommended that you use a JIS #1 screwdriver head for this task.
- Be careful to keep track of all removed screws.




## Step 5

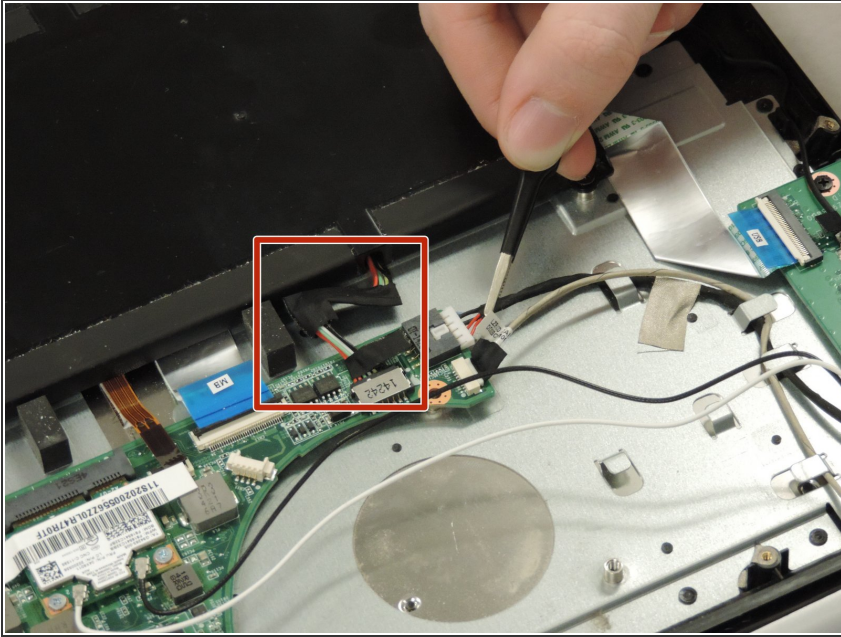

- Detach the connection from the battery to the motherboard. This is the only connection that needs to be disconnected for the battery.
- To remove the connection, please pull firmly, as it well secured.

## Step 6

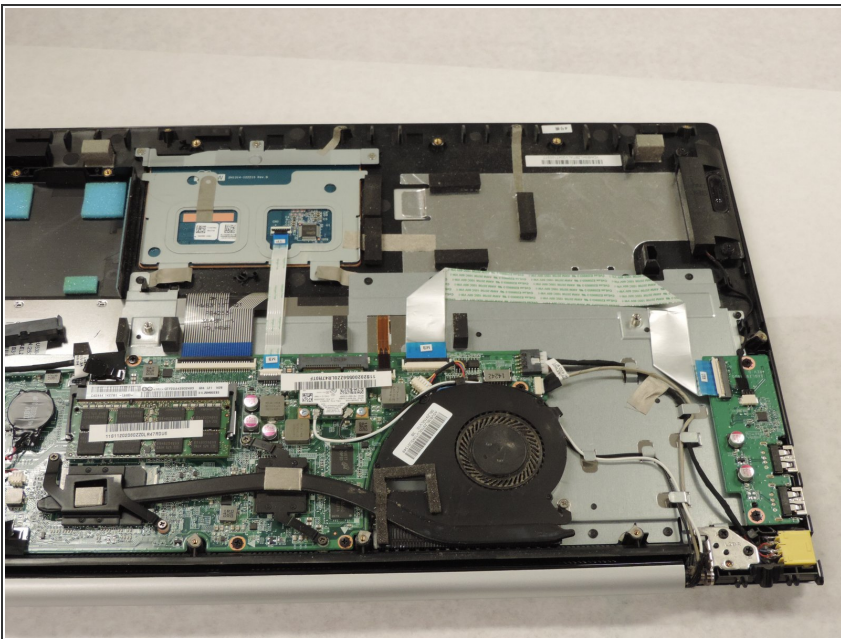

- Simply lift the battery out of the computer, and acquire a replacement.

To reassemble your device, follow these instructions in reverse order.