


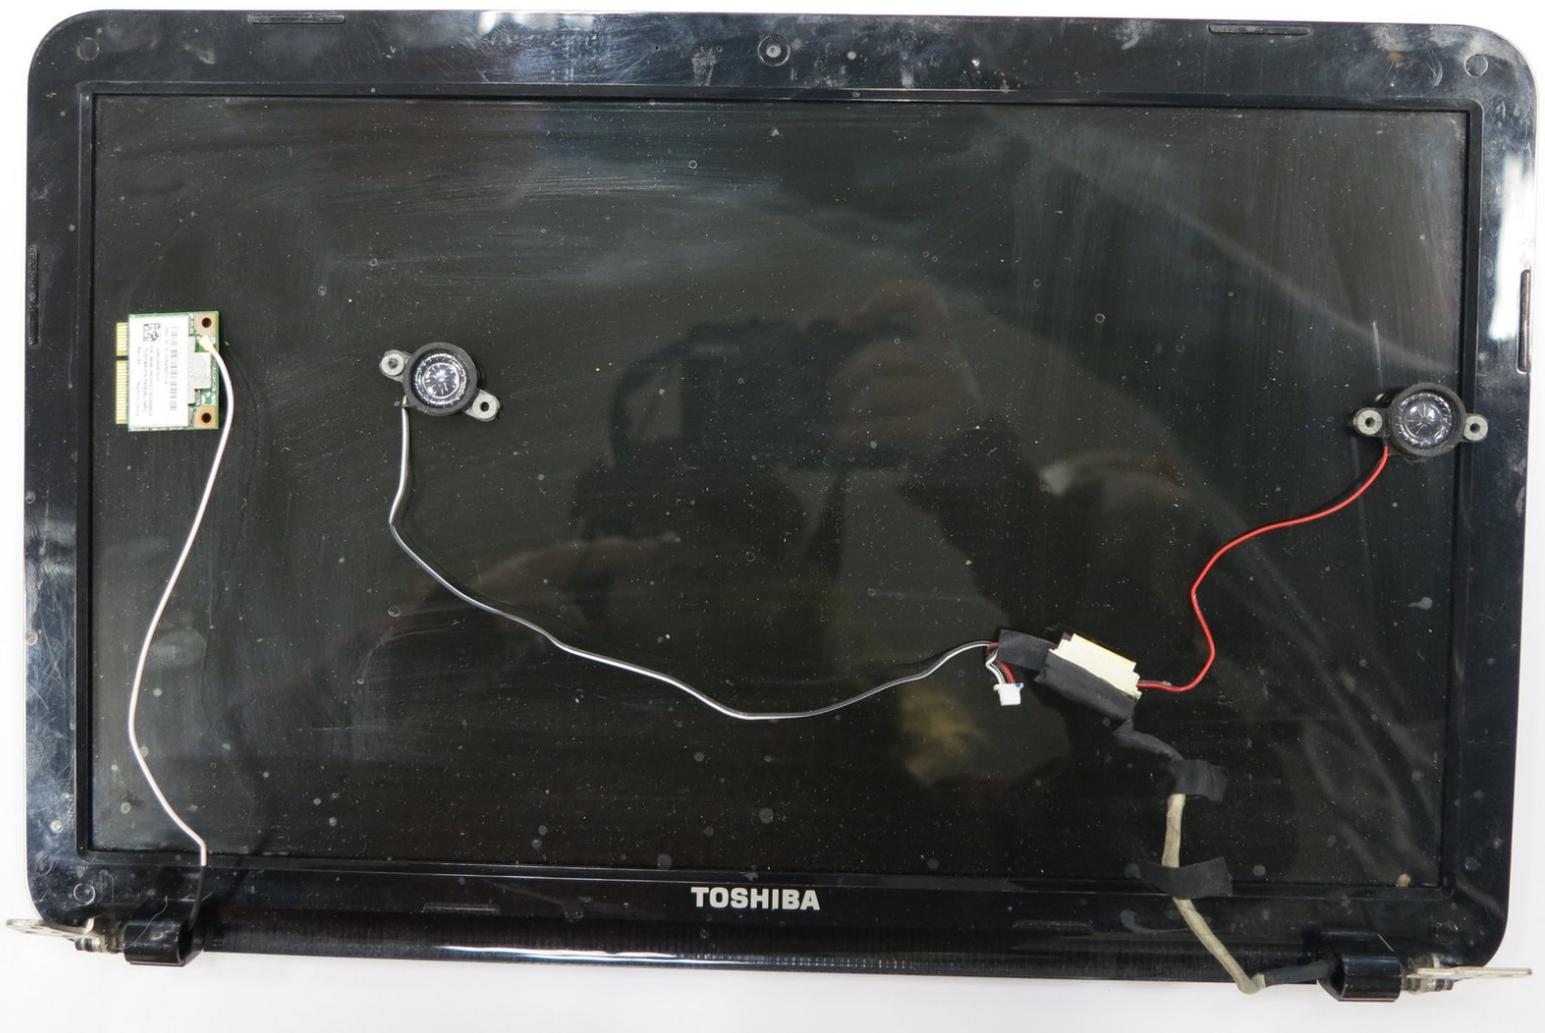

# Toshiba Satellite L855-S5119 Laptop Screen Replacement

Remove and replace the Toshiba Satellite L855-S5119 Laptop Screen.

Written By: Monte Roden



---

## INTRODUCTION


This guide will inform readers on how to replace the screen which may stop working.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [Dust Blower](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Back Plate Removal

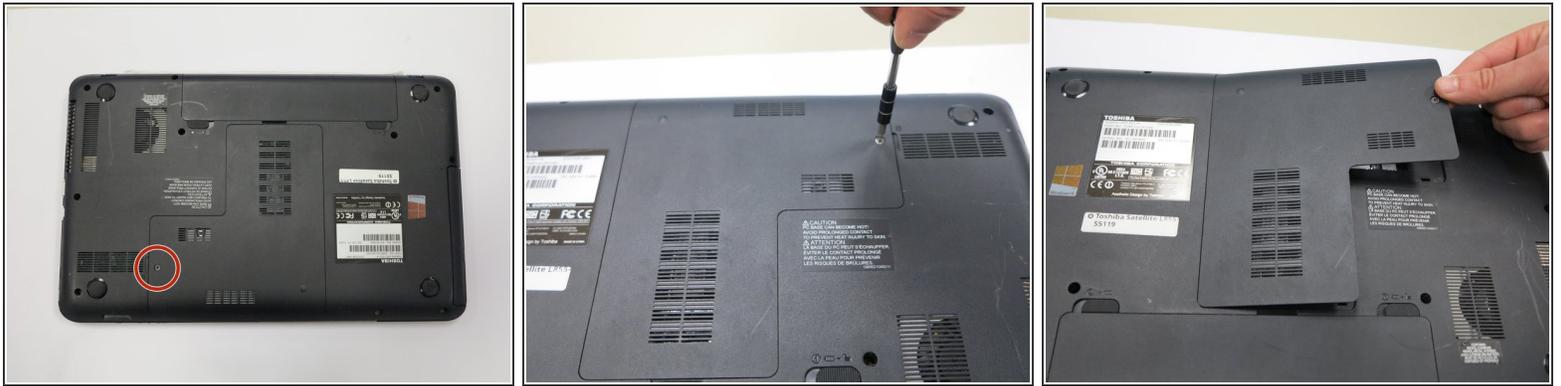

- Turn the laptop over to place it top down.
- Use a Phillips #1 screwdriver to remove the screw holding in the back plate. This screw does not come out of the plate.
- Lift the back plate off the laptop, exposing the RAM and Hard Disk.

## Step 2 — Battery



- Turn the laptop face down to expose the back.
- Locate the battery.

### Step 3



**i** Locate the battery latches. The battery latch mechanism can be compared to a door -- The right latch, when pushed right, unlocks the battery, while the left latch, when pushed left, releases the battery, pushing it out from its container.

- Push the latch on the right to the right to unlock the battery latch locking mechanism.
- Push the battery latch on the left to the left to unlock the battery.

### Step 4



- With the left battery latch pushed left, remove the battery from its port by lifting the battery from the middle of the battery.
- The battery will come free.


This document was generated on 2020-11-28 06:33:24 AM (MST).

## Step 5 — Optical Drive




- Using a Phillips #0 screwdriver, remove the single 3mm screw.

## Step 6

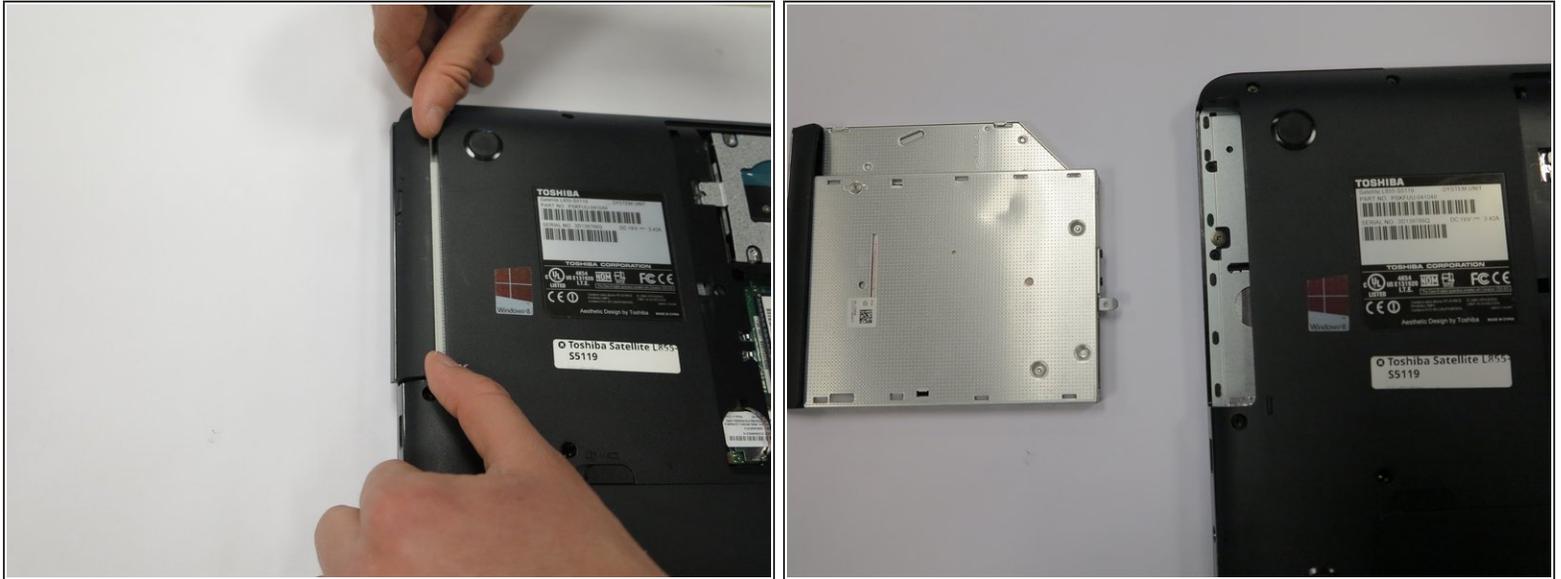


- Rotate the laptop so that you have access to the optical drive.
- ⓘ The optical drive is now only attached by a port in the drive's back. The optical drive can be pulled straight out of its housing.
- Remove the drive.

## Step 7 — Hard Drive

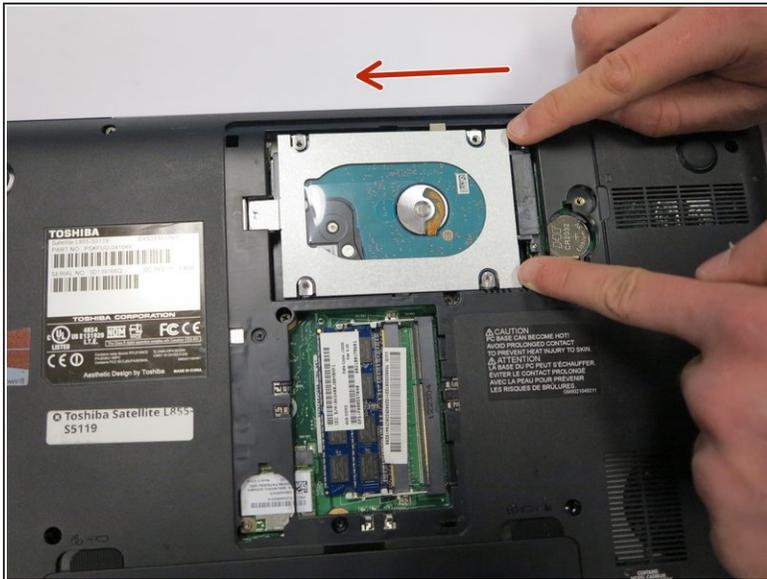

- Unscrew the hard drive.
  - ⓘ There could be up to five 3mm screws - One on each corner of the hard drive, and one at one end of the hard drive, attaching the drive to the laptop's frame.
- Carefully push the hard drive away from its port. This should not require substantial force.
- Lift the hard drive out.
  - ⓘ Some hard drives have a plastic tab, which can be lifted from to remove the hard drive.
  - ⓘ Otherwise, take hold of opposite sides of the hard drive and lift the drive straight up.

## Step 8 — Back Cover Removal

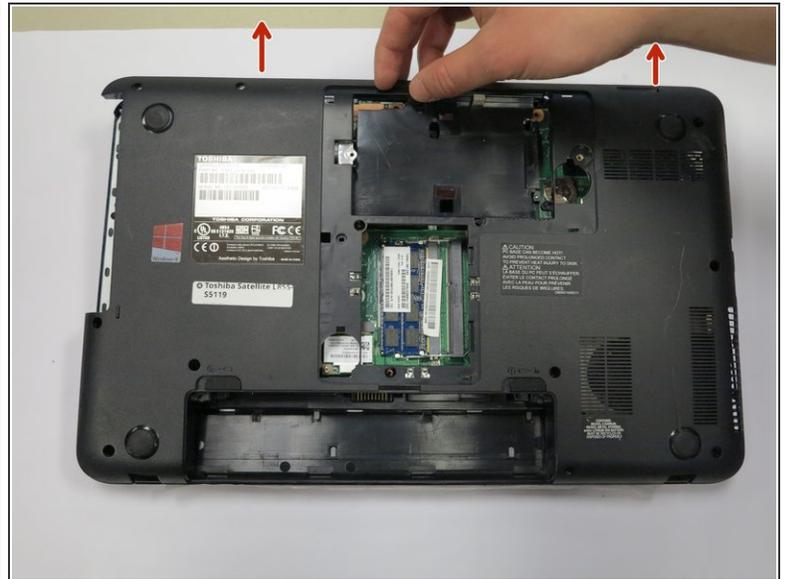


- Unscrew the screws circled in red. This includes eleven 6mm screws, and one 5mm screw underneath where the optical drive was housed. All screws can be removed with a Phillips #0 screwdriver.
- Carefully remove the back cover. The battery holder contains notches that help hold the case in place, so take care not to break those.

## Step 9 — Fan



- Remove the two 5mm screws on the fan assembly using a Phillips #0 screwdriver.

## Step 10

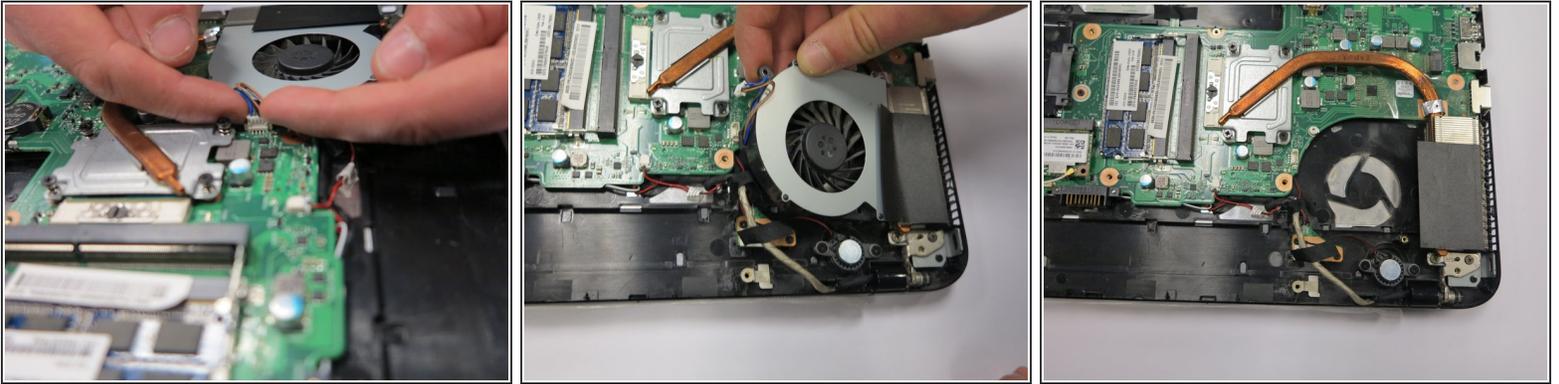

- Unplug the fan's connection to the motherboard.
- Lift the fan from the laptop.
- Use a soft cloth to clean the dust away from where the fan was.

## Step 11 — Laptop Screen





- Remove the two screws in each speaker using the Phillips #0 Screwdriver.
- Gently lift out the speakers out of the chassis.

## Step 12



- Using the Phillips #0 screwdriver, remove the 3mm retention screw from the display connector.
- Unplug and remove the display connector by pulling the connector free.

## Step 13

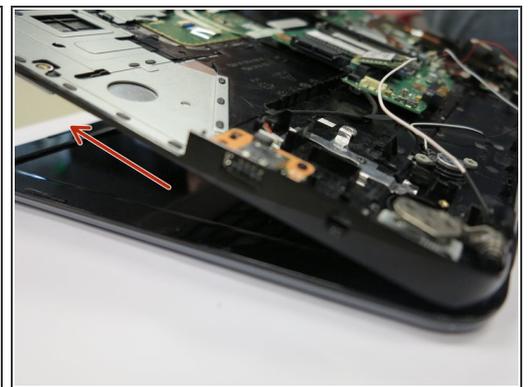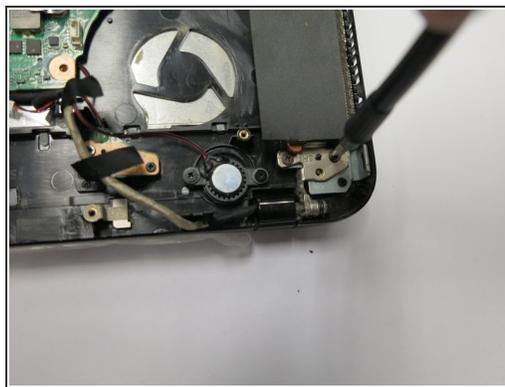

- Remove the screen by removing two screws from both hinges using the #0 Phillips screwdriver.
- Once the hinges have been unscrewed separate the screen from the body containing the motherboard.

## Step 14



- The removed laptop screen should have the daughterboard and speakers attached to it via wires upon removal.

To reassemble your device, follow these instructions in reverse order.