



# HP Elitebook 820 G1 Battery Replacement

This guide explains how to replace a faulty battery.

Written By: Eugenia Lara Martinez



---

## INTRODUCTION

Batteries become consumed over time and hold less of a charge. After running diagnostics, follow this replacement guide.

---



### TOOLS:

- [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



⚠ Ensure the laptop is completely powered off and power adapter is unplugged before removing the battery.

- Turn over laptop so that the bottom is showing.
- Unlock the latch.

## Step 2



- Remove the back cover and you will then be able to see the battery.



### Step 3



- Unlatch the two latches securing the battery in the case.

### Step 4



- Use a plastic opening tool to lift and remove the battery.

To reassemble your device, follow these instructions in reverse order.