



# Altec Lansing Mini Lifejacket 2 Battery Replacement

This step-by-step guide will show you how to replace the battery in your Altec Lansing Mini Lifejacket 2.

Written By: Stephen Albrecht



---

## INTRODUCTION


If the battery in your Altec Lansing Mini Lifejacket 2 isn't holding a charge or is showing signs of failure, use this guide to replace it.

---

### TOOLS:


- [Metal Spudger](#) (1)
  - [Phillips #2 Screwdriver](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
  - [Tweezers](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Back Panel

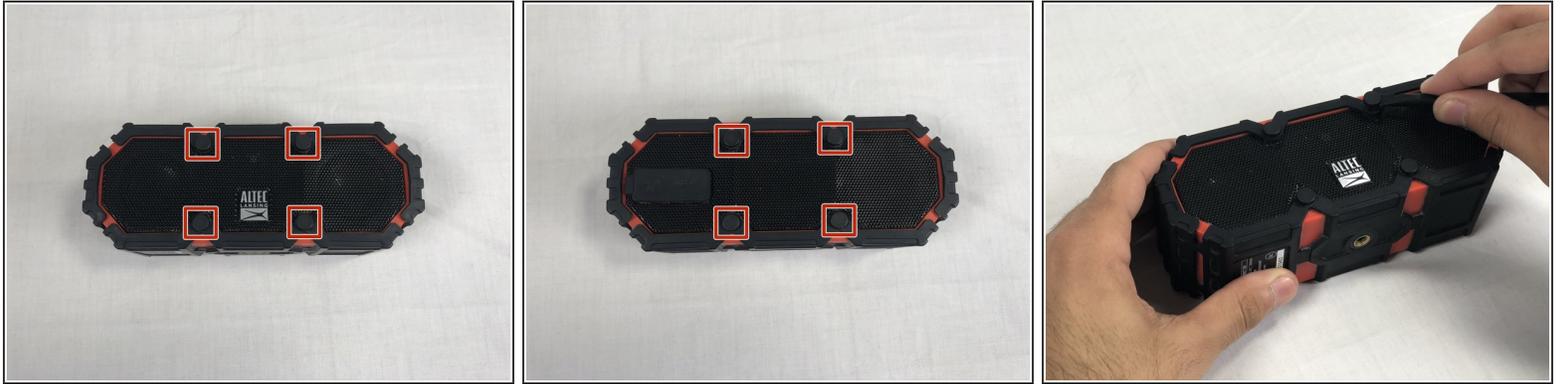

- Use the spudger to remove the eight black pins from the front and back of the wire screens.

## Step 2

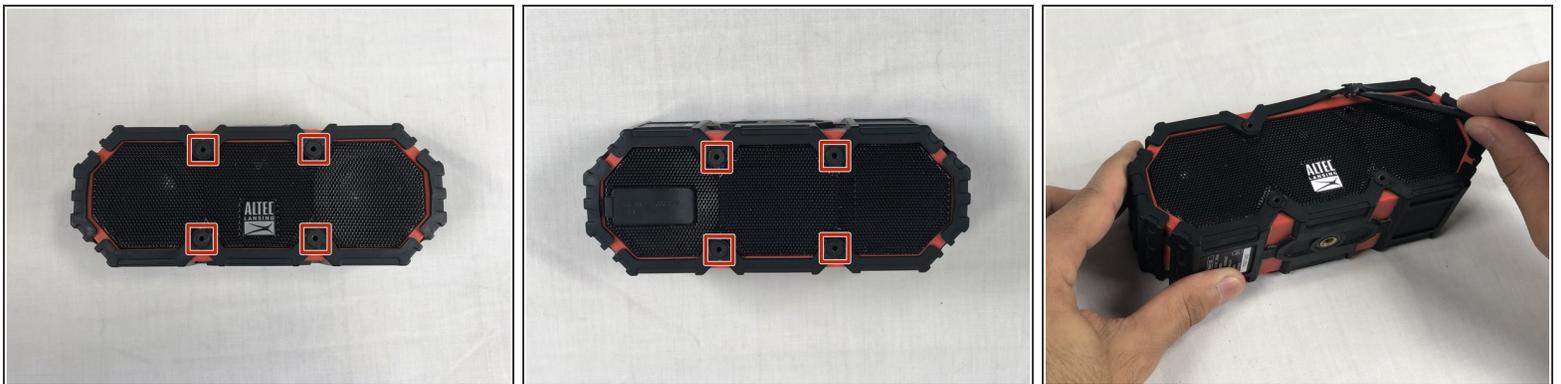

- Detach the eight secondary pins from the front and back of the wire mesh plates with a spudger.

**i** Removing the secondary pins from the rubber casing is optional.

### Step 3



- Remove both black and orange layers from the speaker body.

### Step 4



- Remove the single 7.8mm Phillips #2 screw from the mounting plate located under the device.
- Slide the mounting plate out to remove it.


## Step 5



- Pry off the wire mesh on both sides using a metal spudger.

⚠ Be gentle to avoid bending the mesh.

## Step 6

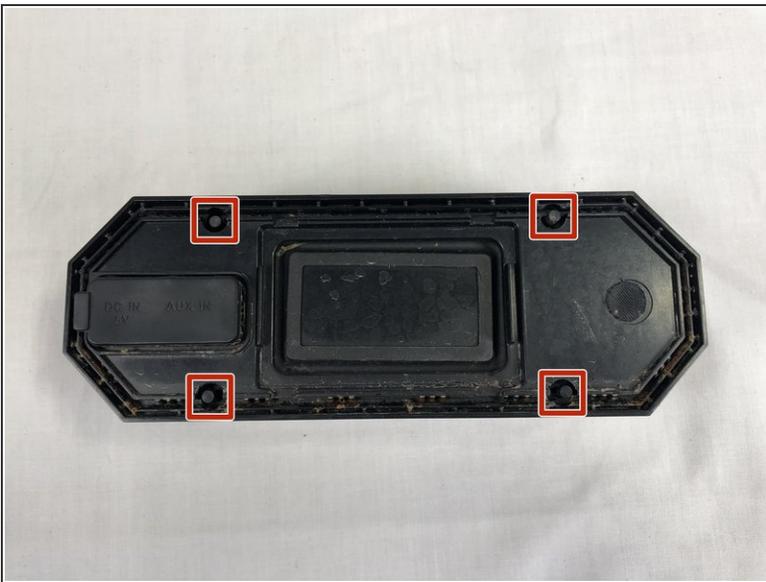

- Using tweezers, remove the four rubber stoppers in each corner of the rear panel.

## Step 7





- Remove the four 13.7mm Phillips #1 screws located underneath the rubber stoppers.

## Step 8



- Pull the case apart to access the interior components.

## Step 9

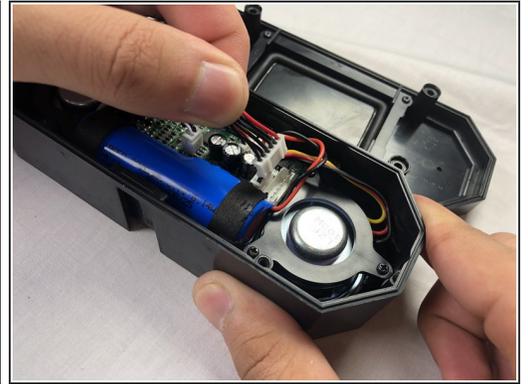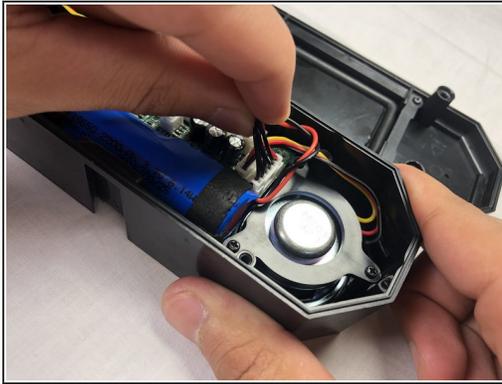

- To remove the back panel, gently pull out its wire harness.

## Step 10 — Battery



- Disconnect the battery from the motherboard.
- ⓘ The battery is not secured within the case and can be removed after detaching its wiring from the circuit board.

To reassemble your device, follow these instructions in reverse order.