



Sony Cyber-Shot DSC-W50 Wrist Strap Replacement

Use this guide to replace the wrist strap on you Sony Cyber-shot DSC-W50.

Written By: travis fraser



INTRODUCTION


This guide will walk you through the process of changing the wrist strap on a Sony Cyber-shot DSC-W50.

Step 1 — Wrist Strap



- Pull the small loop of the strap up the strap.
- Pull strap all the way through.

Step 2

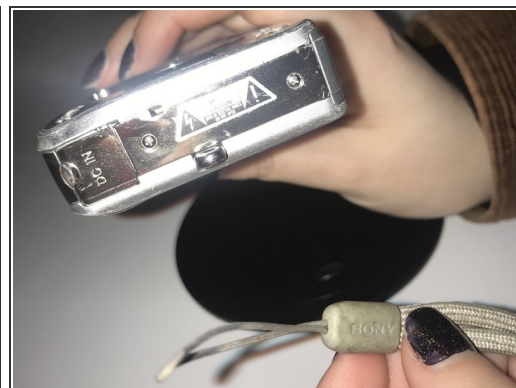

- Pull the strap all the way out of of the camera.

To reassemble your device, follow these instructions in reverse order.