



# Acer Aspire R5-571T-59DC Display Replacement

Replace the display in your Acer Aspire R5-571T-59DC (Aspire R15) if it's cracked, blacked out or not responding to touch.

Written By: Star Matthew



## INTRODUCTION

This guide will show the reader how to replace the display in their Acer Aspire R5-571T-59DC.

It may be necessary to replace this component if the screen is physically damaged or incorrectly displaying images.



Please take care to be gentle when releasing the snaps in the cover lining the display - gentle prying with a credit card or spudger should be sufficient to loosen the cover.



### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Back Cover Panel

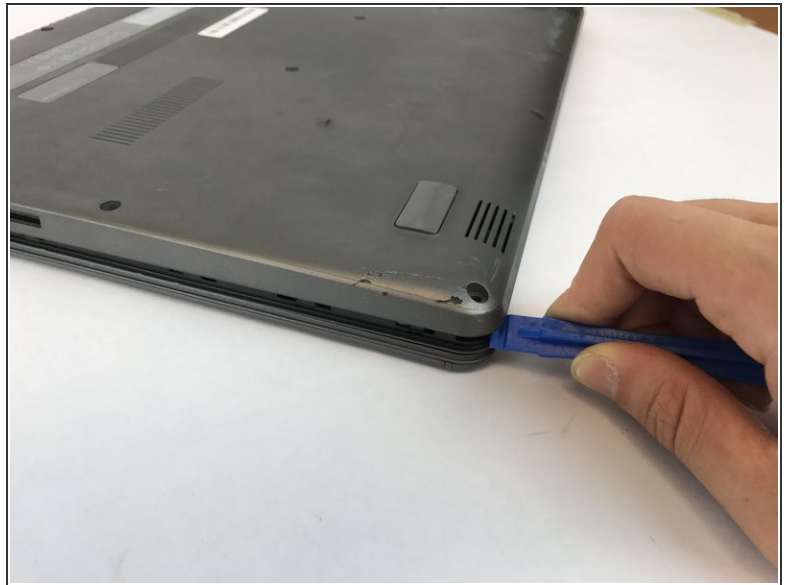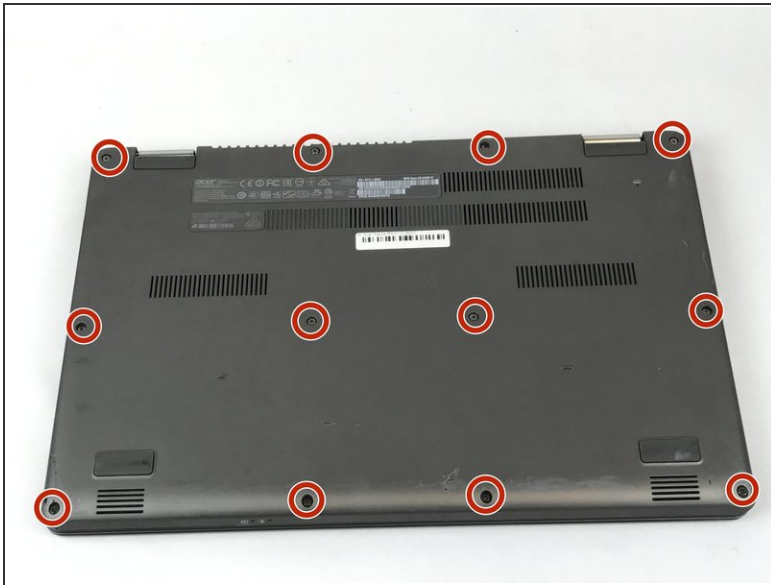

- Disconnect all power from the laptop and turn over so the bottom is facing you.
- Remove the twelve 07.7mm Phillips #0 screws from the back cover.
- Work a plastic opening tool underneath and around the perimeter of the bottom cover.
- Once unclipped, remove the bottom cover.

## Step 2 — Battery



- Remove the two 0.7mm Phillips #00 screws from the battery and unplug the battery from the motherboard.
- Lift the battery out of the case.



## Step 3 — Display




- Using a plastic opening tool, pry the back cover away from the screen.

## Step 4



- Remove the tape covering the connector cables once the screen is separated from the display board.

## Step 5

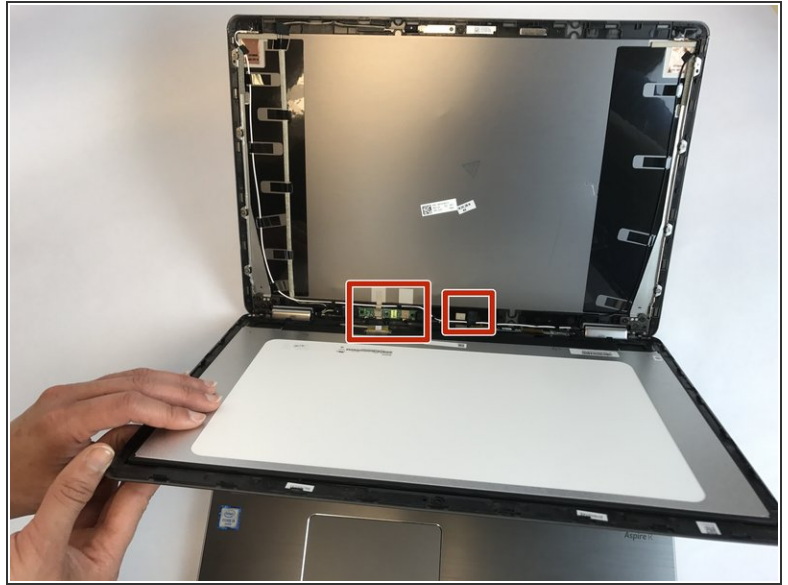

- Use a spudger to flip up the retaining flap on the display ribbon cable [ZIF](#) socket.
- Pull the ribbon cables out of the sockets.

To reassemble your device, follow these instructions in reverse order.