



HUAWEI HONOR 5X Battery Replacement

Follow this guide to replace the battery on a Huawei Honor 5X smartphone.

Written By: Klara Asllani



INTRODUCTION

The battery should be inspected if the phone is constantly overheating and powering off.



TOOLS:

- [iOpener](#) (1)
 - [SIM Card Eject Tool](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [T3 Torx Screwdriver](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — HUAWEI HONOR 5X Disassembly



- Turn off your cell phone before disassembling.

Step 2



- Remove the two 1.17mm Torx T3 screws from the bottom of the phone.

Step 3



- Use the Sim card ejection tool to remove both the sim card trays.

Step 4



 
- To prepare the iOpener insert it in the microwave for 30 seconds and apply it on the side edges of the phone so that the glue underneath will soften.

Step 5



- Pry off the back with a plastic opening tool.

Step 6 — Battery

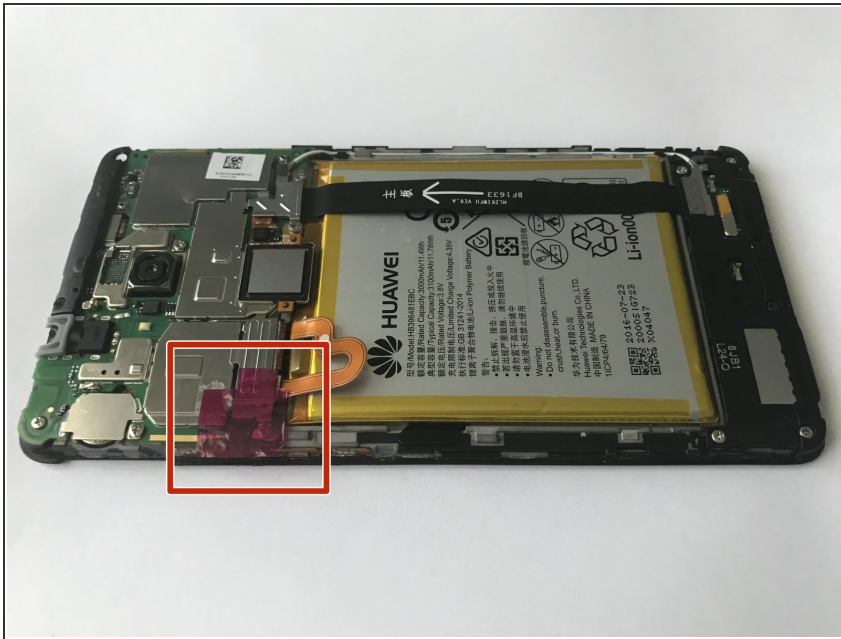


- Remove the pink sticker.

Step 7



- Remove the three 1.5mm Phillips #000 screws.

 Step 8

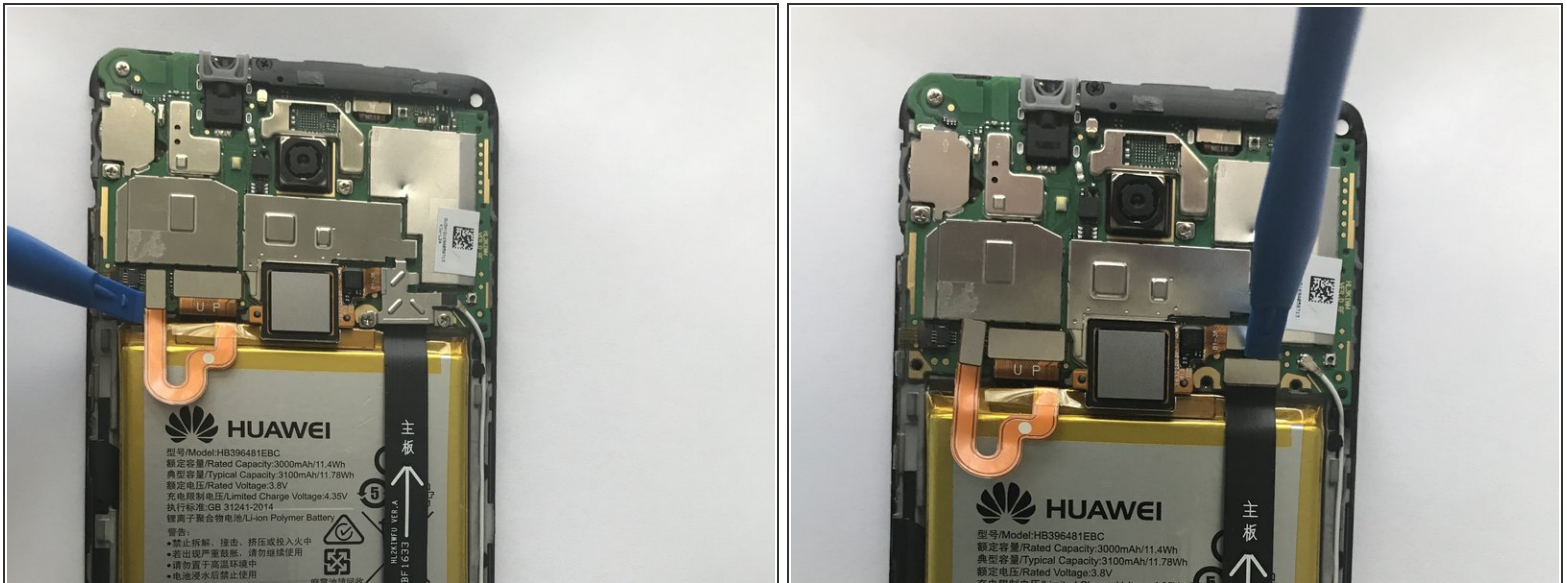

- Use a plastic opening tool to disconnect the orange and black battery cables from the motherboard.

Step 9



- Remove the battery from the phone.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 06:35:30 AM (MST).

