

Dell Vostro 1540 Battery Replacement

In this guide, we will be showing you how to...

Written By: Johnathan Hammond



INTRODUCTION

In this guide, we will be showing you how to remove and replace the Battery.

PARTS:

Dell DL-I13R Battery (1)

Step 1 — Unlocking the Battery



• Slide the release latches to unlock the battery.

Step 2 — Sliding the Battery



• Slide the battery and remove it from the computer.