



HP ProBook 455 G1 DVD/CD Drive Replacement

This guide will assist you in safely and properly removing the DVD/CD drive in your HP ProBook 455 G1.

Written By: Jennifer Sexton



INTRODUCTION

Your computer's DVD/CD drive may become damaged after prolonged use or age. One of the ways you can fix this is by replacing the drive itself.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery



- Turn the computer upside down on a flat side, so that you are seeing the underside of the laptop.
- ⚠ Before removing the battery, make sure that the computer is turned off and that the power cord is not plugged into the computer.

Step 2



- Slide the two battery release latches towards the center of the laptop to release the battery.

Step 3



- Tilt the battery upward.
- Remove it from the laptop.

Step 4 — Service Panel




- Slide the two release latches that were mentioned in the battery removal process to release the service panel.

Step 5



- Slide the service panel toward you using your thumbs.
- Lift it to remove the panel and reveal inner components of the computer.

Step 6 — DVD/CD Drive

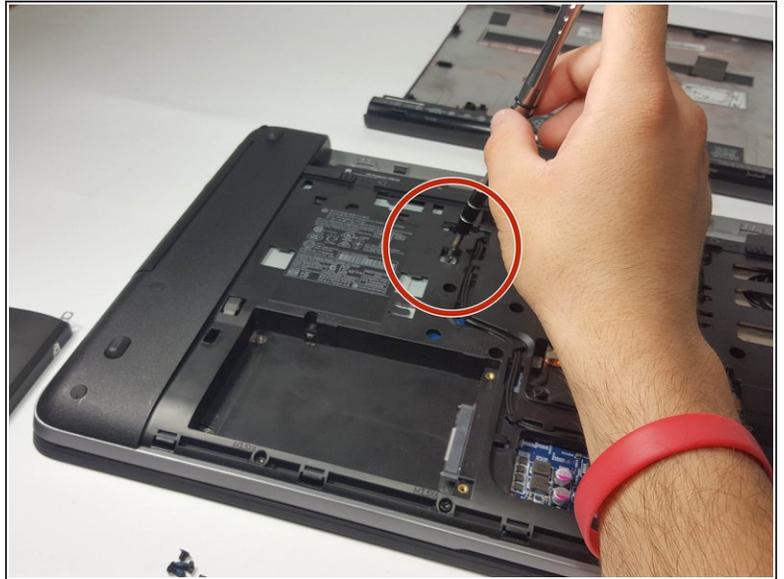


- Using a Phillips P0 Screwdriver, remove the 6 millimeter screw that secures the DVD/CD drive to the computer.
- ⓘ It will be located in the upper left section of the computer, housed in a small square hole in the computer frame.
- ⓘ The Phillips head screwdriver is the screwdriver with a "+" shaped tip. P0 refers to the name/size of this particular Phillips head screwdriver.

Step 7



- Using the screwdriver, gently push the silver tab that the screw secured to the left to release the DVD/CD drive from the computer.

Step 8

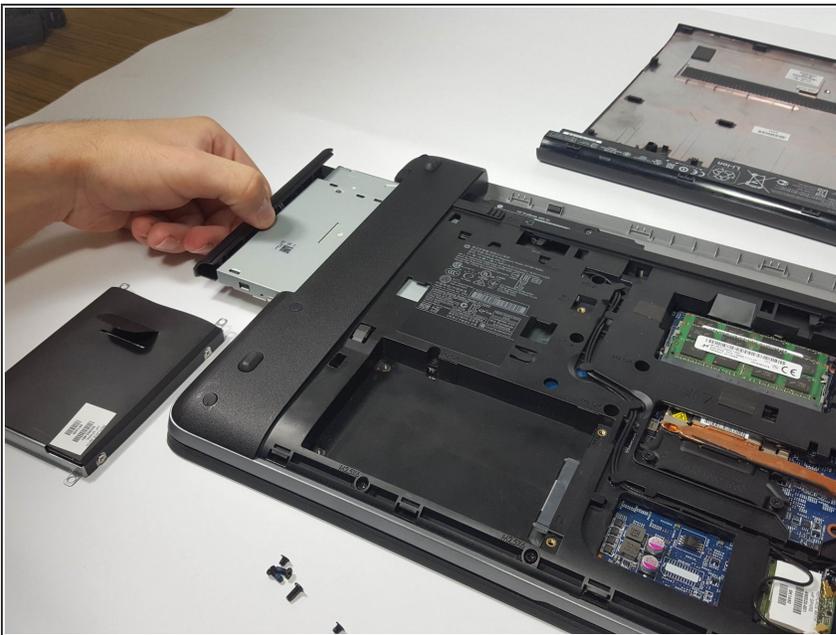

- The DVD/CD drive will be extended from the side of the laptop. Slowly remove it from the computer.

To reassemble your device, follow these instructions in reverse order.