



# Sony Cyber-Shot DSC-H1 Back Panel Replacement

This guide will walk you through replacing the back panel of your Sony Cyber-Shot DSC-H1 camera.

Written By: Trystan Jasperson



---

## INTRODUCTION


Keeping the back panel in good condition is key to extending the lifetime of the camera.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Back Panel

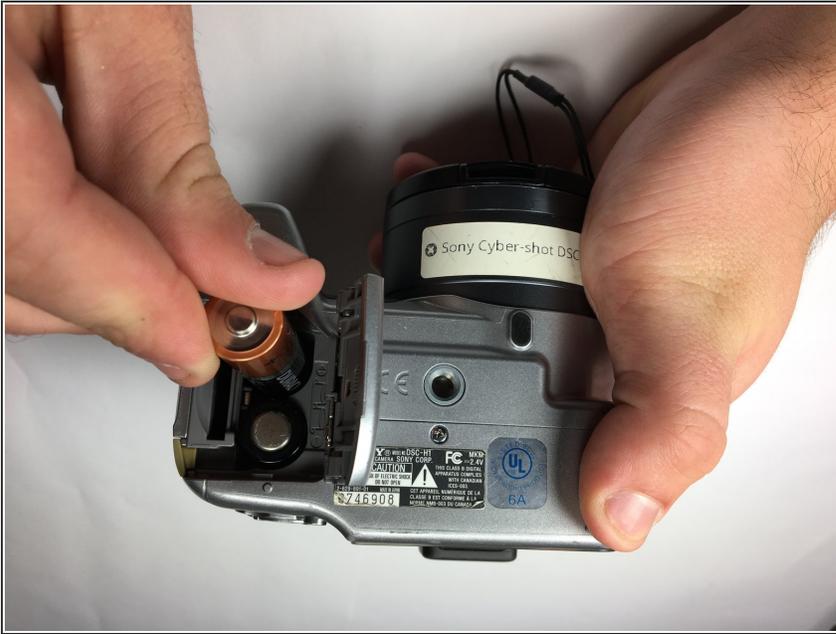

- Power down the camera and remove the batteries.

## Step 2



- Using a Phillips #0 screwdriver, remove all of the screws from the back panel casing.
- ⓘ There are six 5.22mm long, 3.00mm head diameter screws total.
- ⓘ The left side is not shown but there should be 1 screw on that side.

### Step 3



- Remove the back casing.
- ⓘ The casing itself is sturdy so don't be afraid to remove it forcefully.

To reassemble your device, follow these instructions in reverse order.