




Sungale Cyberus ID707WTA Speaker Replacement

This guide will allow the user to successfully replace a nonworking speaker on the Sungale Cyberus id707wta.

Written By: Austin_Parkes

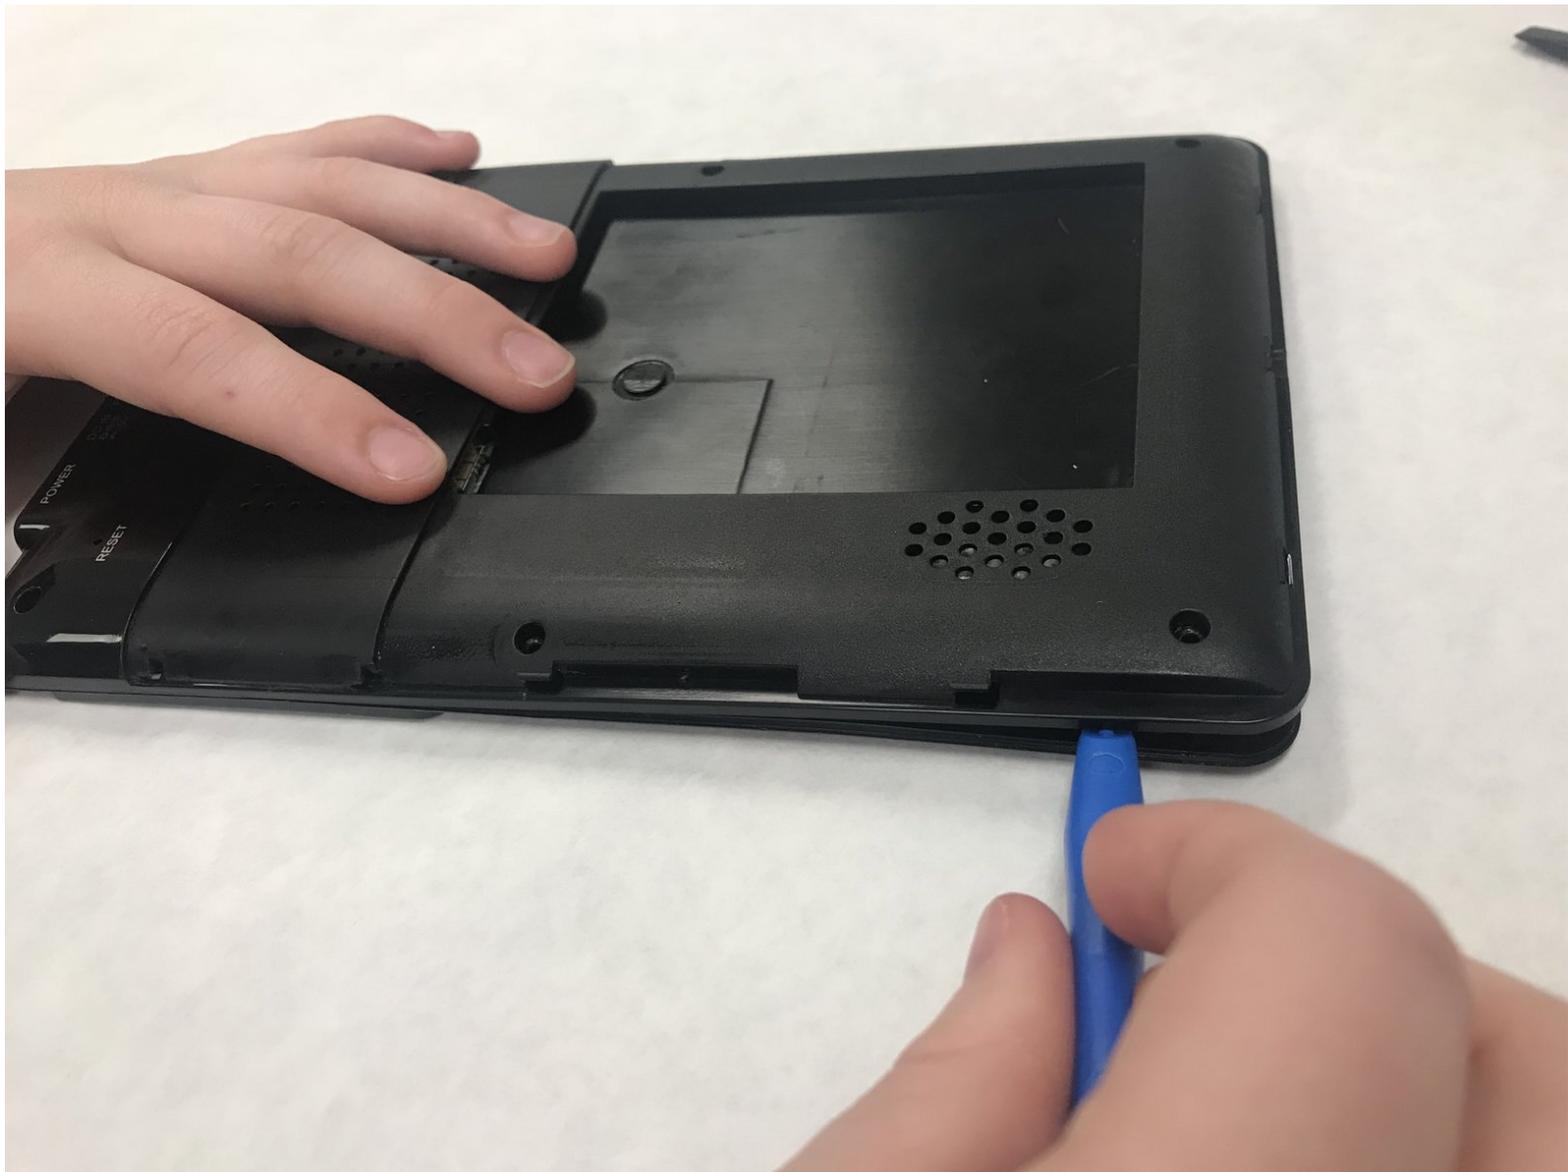

INTRODUCTION

This guide will show the steps involved in replacing the speaker.

TOOLS:

- [Fingers](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Pry Bar](#) (1)
-

Step 1 — Battery



- Press firmly on lower portion of the back cover and slide the cover towards the bottom to remove cover.

Step 2



- Pull on the plug carefully until it releases from the port and simply pull the battery out after.

Step 3 — Speaker




- Pry open the casing with a plastic opening tool .

Step 4




- Unscrew the five 4.5 mm screws to allow access to the motherboard.
- Lift the motherboard and set it onto the backside of the screen.

Step 5

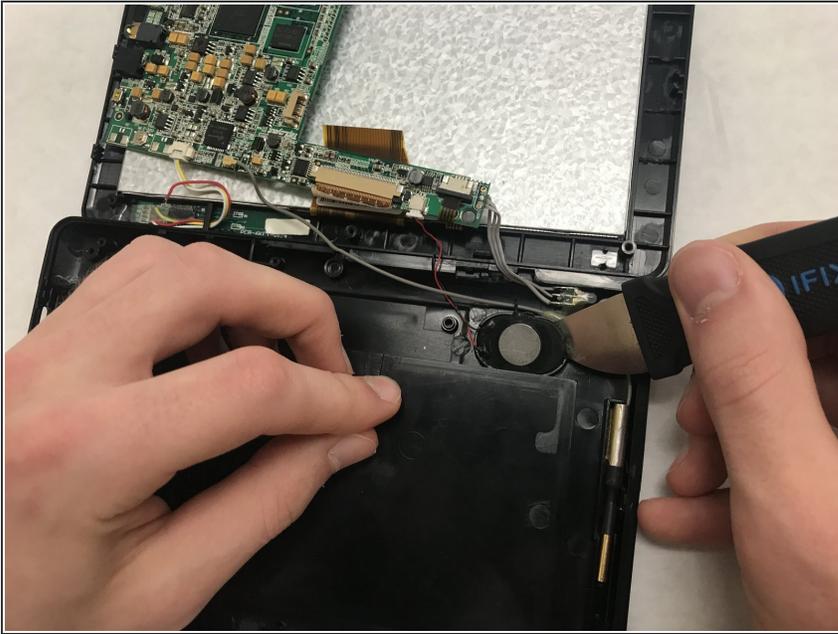

- Pry the speaker out of retainer clip with iFixit pry tool.

Step 6

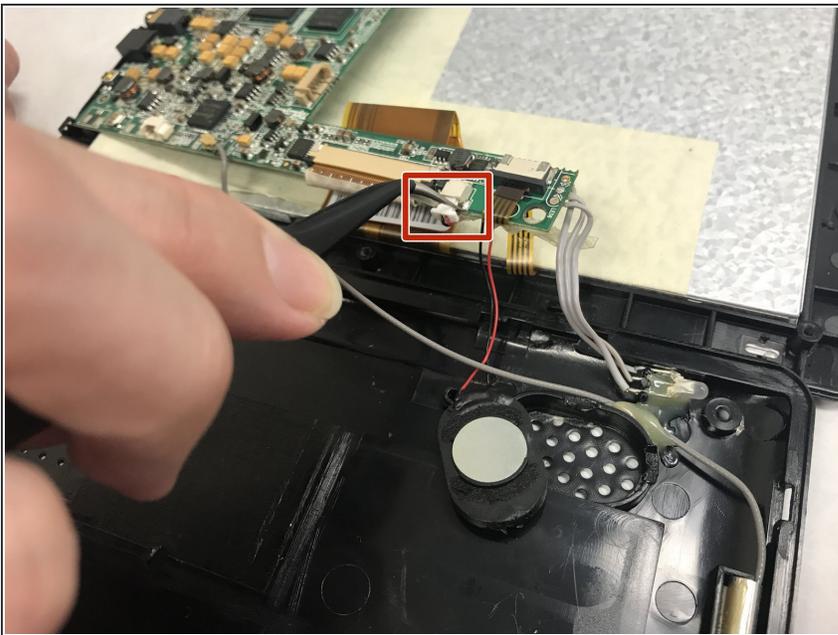

- Pry the speaker clip from the motherboard using tweezers.

To reassemble your device, follow these instructions in reverse order.