



HP Mobile Thin Client mt41 Battery Replacement

This guide will show you how to replace a faulty battery.

Written By: Raul Rodriguez



INTRODUCTION

This outline will teach you how to unlock the battery to easily slide out of place without damaging the laptop.

Step 1 — Battery



- Locate the two slots on the bottom of the laptop to unlock the battery.

Step 2



- Pull on both slots outwards as shown in the images to unlock the battery. The battery will not come out if the slots are locked. The battery should easily slide out without much force.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 06:37:21 AM (MST).

