


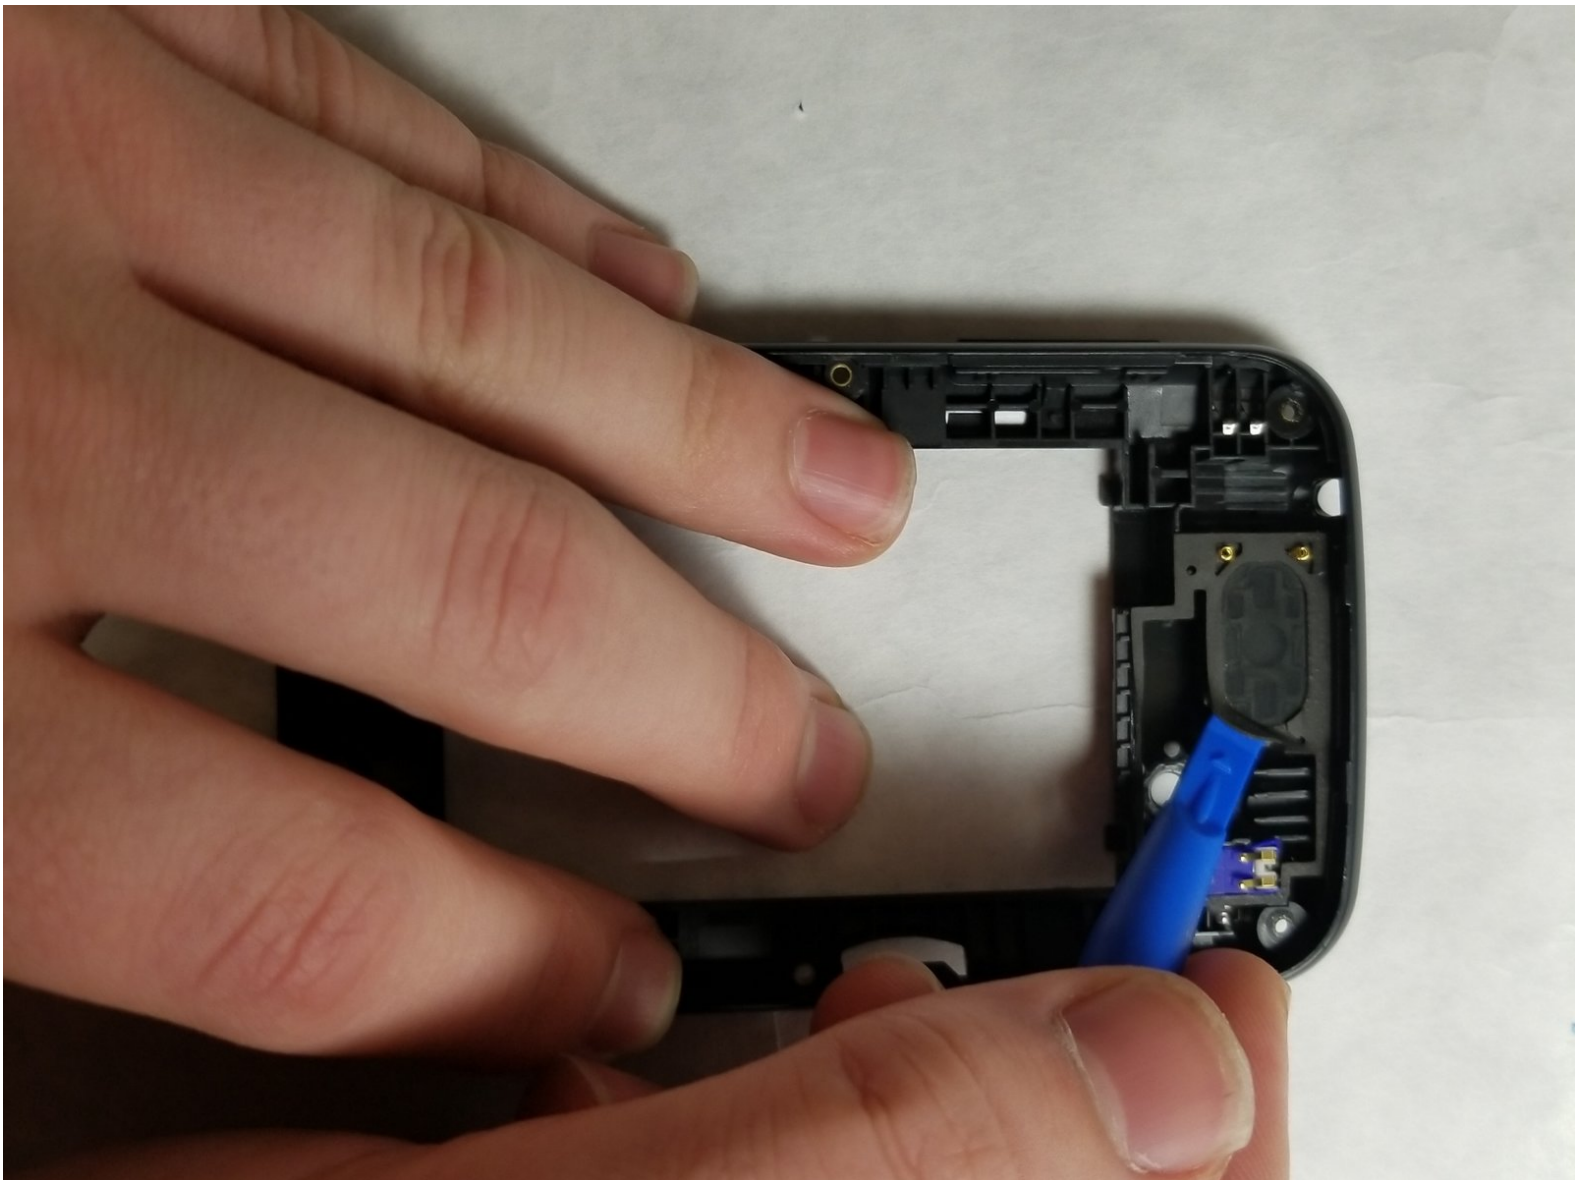

LG 305C Speaker Replacement

This replacement guide will show how to replace the speaker in the LG 305C.

Written By: Joaquin Garcia



INTRODUCTION

Before completing this replacement guide, it is important to unplug the device. This replacement guide will show how to replace the speaker in the device.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [JIS #000 Screwdriver](#) (1)
-

Step 1 — Battery



- Pry open the back case on the device with a plastic opening tool and remove it.

Step 2



- Pry the battery out of the device with a plastic opening tool and remove it.

Step 3 — Internal Casing




- Remove the three 4 mm screws using a JIS screwdriver with a J000 head from the bottom part of the internal casing.

Step 4




- Pry open the bottom part of the internal casing with the plastic opening tool and remove it.

Step 5

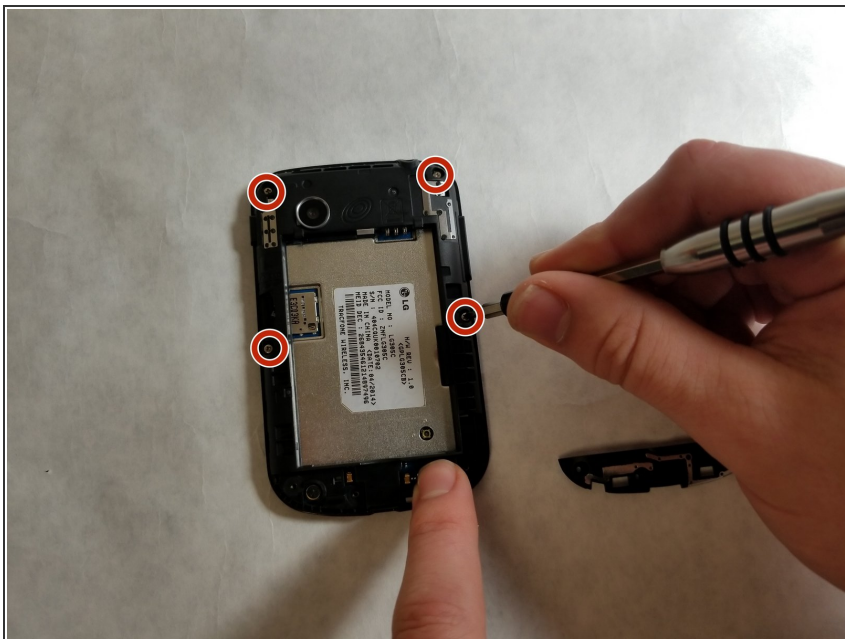


- Remove the four 4 mm screws using a JIS screwdriver with a J000 head from the top part of the internal casing.

Step 6

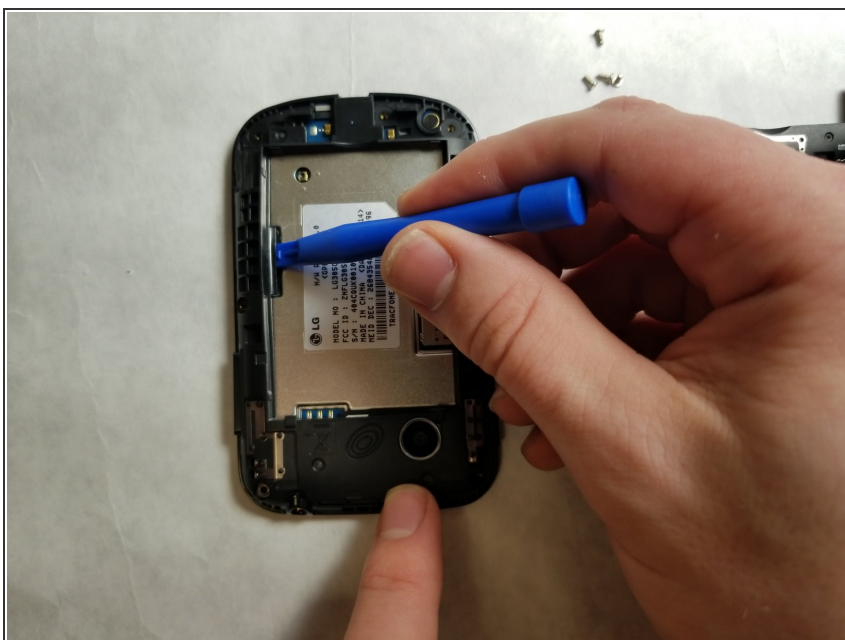

- Pry open the top part of the internal casing with the plastic opening tool and remove it.

Step 7 — Speaker

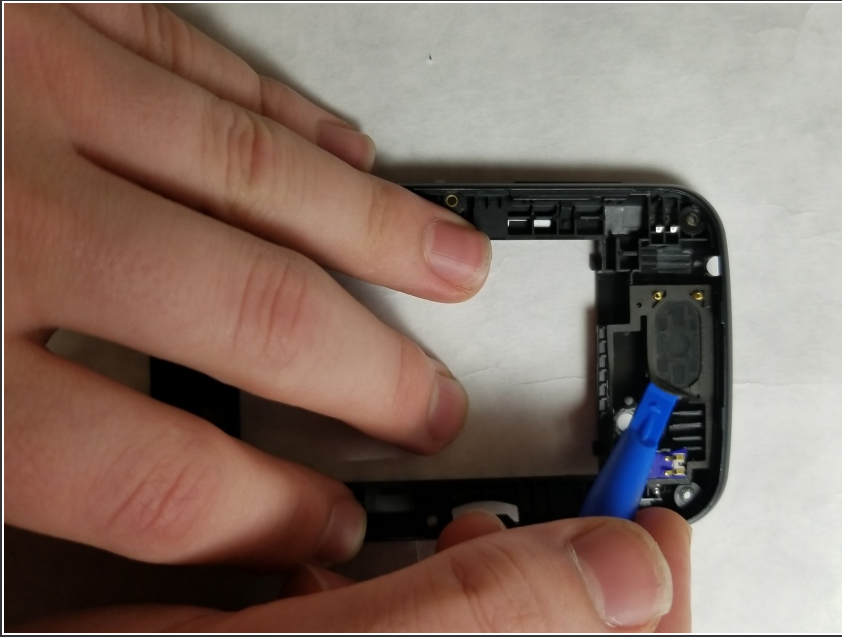

- Insert plastic opening tool under the plastic flap and lift the speaker out.

To reassemble your device, follow these instructions in reverse order.