



Alcatel Fierce 4 Battery Replacement

A guide on how to replace the battery in Alcatel Fierce 4 smartphone.

Written By: Abdulla Alkhaldi




INTRODUCTION

If you are noticing that Alcatel Fierce battery life is reduced and you need to recharge your phone more often but you are not ready to upgrade your phone and you like it. It's the time to replace the battery. Follow this guide from start to finish!

TOOLS:


- [Tweezers](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery

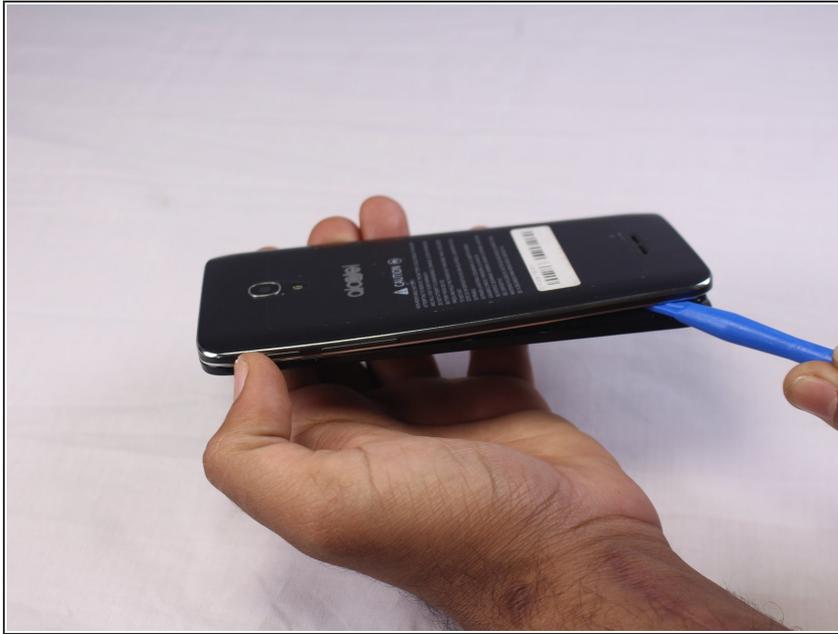


- Using a plastic opening tool, pry the back cover off of the phone.

Step 2

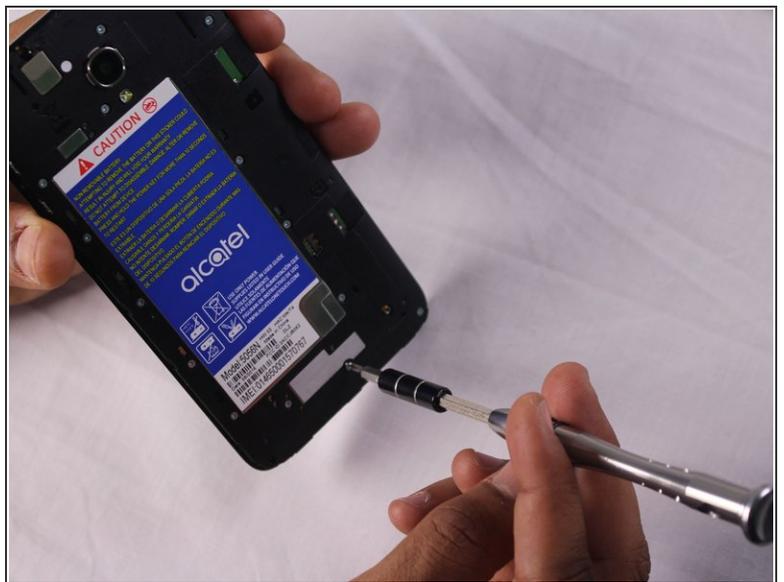



- Remove the seventeen Phillips #000 screws from the mid-frame.

Step 3

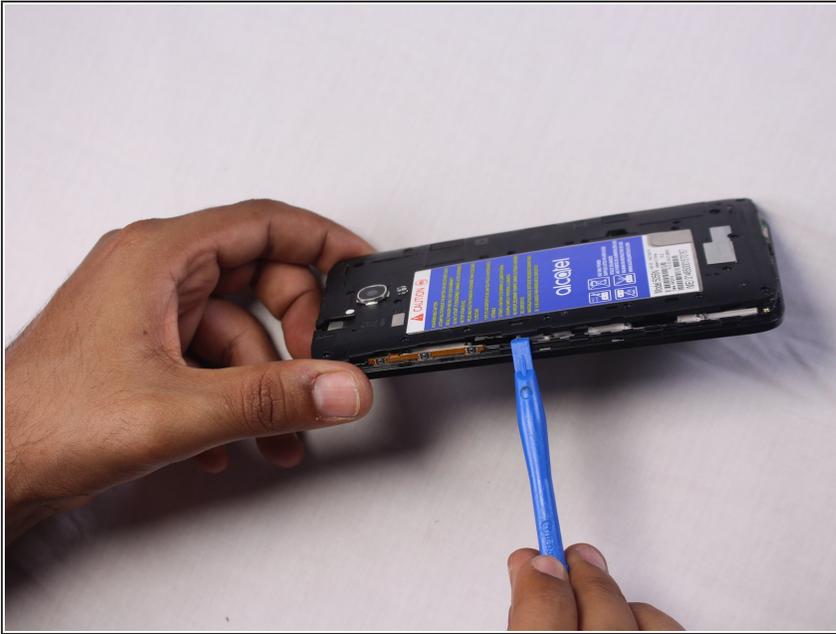

- Pry off the mid-frame using a plastic opening tool, working your way around the perimeter.

Step 4

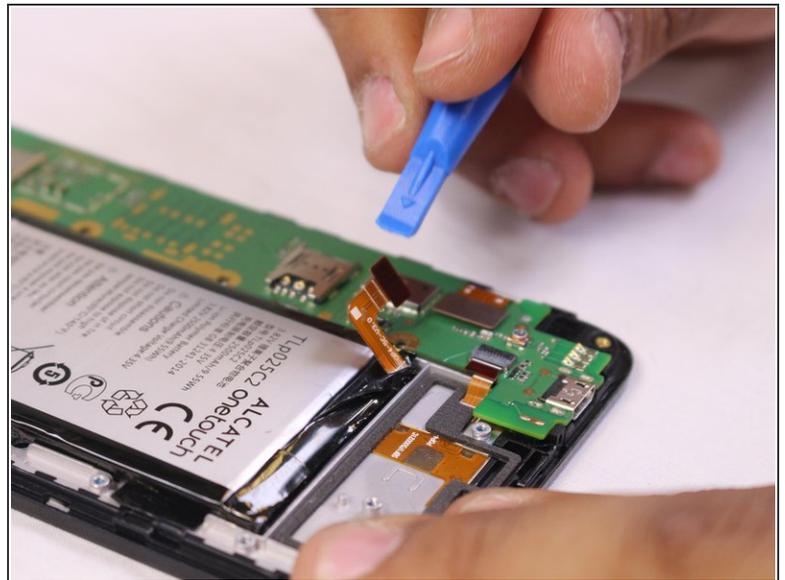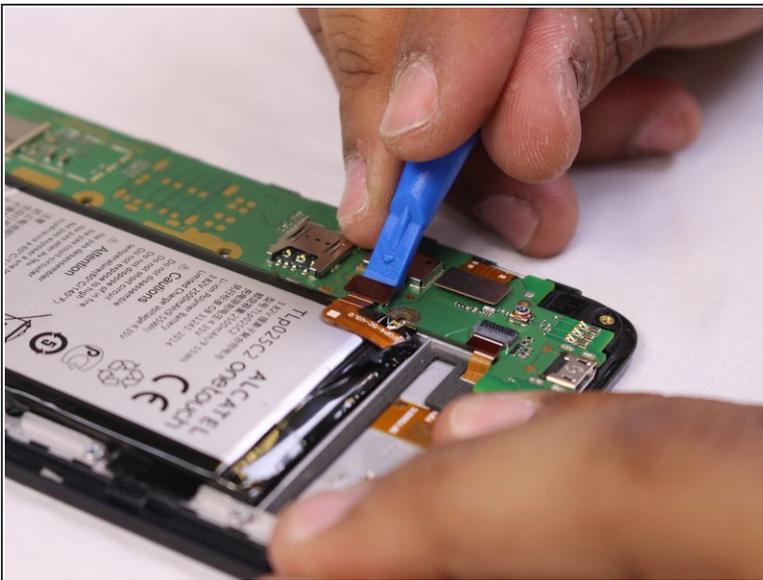

- Use a plastic opening tool to disconnect all of the cables on the motherboard.
- Use a spudger to flip up the retaining flap on the ribbon cable [ZIF](#) sockets.

Step 5



- Remove the motherboard from the phone.

Step 6



- Carefully pry up the battery with a plastic opening tool, or your hands.

To reassemble your device, follow these instructions in reverse order.