



# HP 17-x061nr Disassembly

Removing the back of the device so that you can access the internal components.

Written By: Michael hansen



## INTRODUCTION

If you are planning on replacing any of the internal components of your HP 17-x061nr laptop then you will need to remove the back. This particular laptop is built with a solid back cover that the keyboard and internal components are seated into. There are a lot of screws that hold the laptop together including 2 that are hidden under the rubber footrests. Pay careful attention to this guide and you will have your laptop disassembled and be able to replace any internal components easily.

---

### TOOLS:


- [iFixit Opening Tools](#) (1)
- [JIS #0 Screwdriver](#) (1)

## Step 1 — HP 17-x061nr Disassembly




- With the laptop upside down, remove the battery by hand and the twelve 7.0 mm screws that are holding the back case to the front. Use a JIS #0 screwdriver to remove the screws.

## Step 2

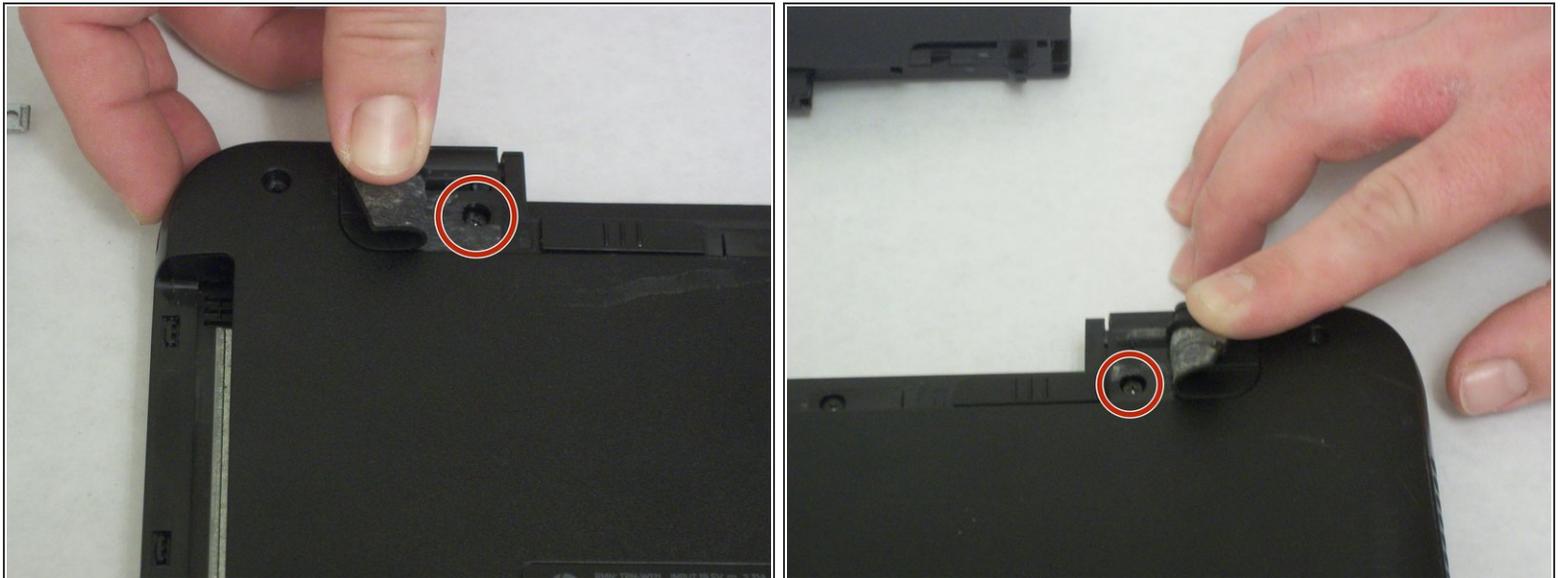

- Peel back the rubber footrests located next to the battery, on the left and right sides.
- Remove the two 7.0 mm screws underneath the rubber feet using a JIS #0 screwdriver.

### Step 3

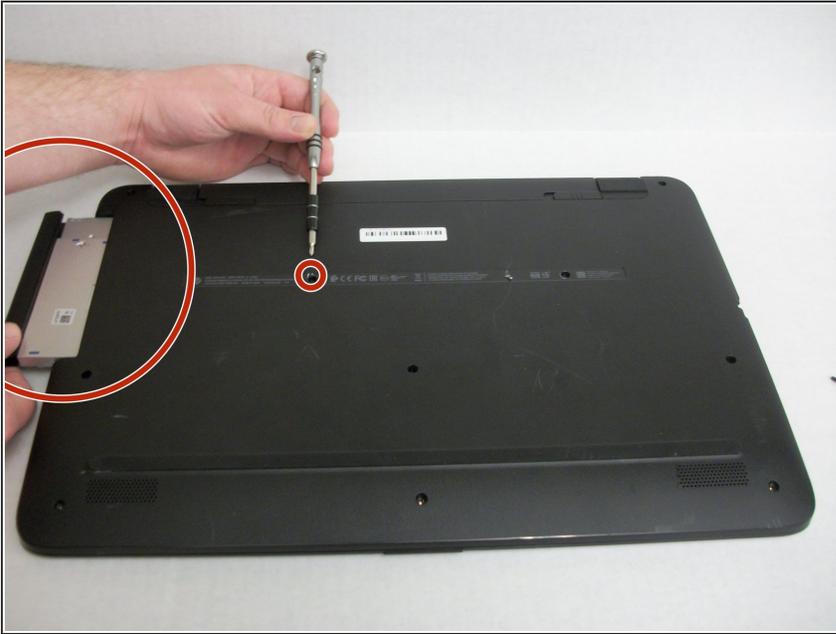

- Slide the optical drive out and away from the laptop.

### Step 4



- Flip the computer over and use a plastic opening tool to wedge between the back and front cases.
- Trace the perimeter of the laptop. Make sure to keep the tool inserted between the front and back cases. You will hear popping sounds as the back case becomes disengaged from the front plate.
- Flip the laptop over and lift the back case off. Now you have access to all of the internal hardware.

To reassemble your device, follow these instructions in reverse order.