



Acer Aspire 5740-5780 Optical Drive Replacement

Optical Drive replacement for the Acer Aspire 5740-5780.

Written By: Gian Farrell



INTRODUCTION

This guide shows how to remove the Optical Drive for the Acer Aspire 5740-5780.

TOOLS:

- [Spudger](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Back Cover



- Unscrew the 2 captive screws and 3 M2.5 x L8 screws holding back cover in place.

Step 2




- Use spudger to pry open the back panel.
- Then lift panel off of the computer.

Step 3 — Optical Drive



- Remove 1 M2 x L4 screw holding the drive in place with a screwdriver.

Step 4

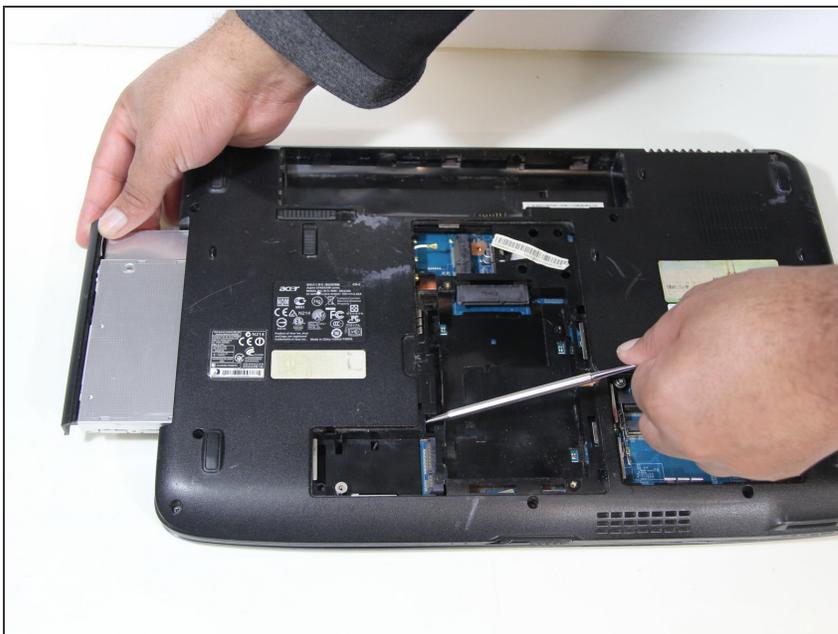

- Using your hand, slowly remove the Drive from the PC.

To reassemble your device, follow these instructions in reverse order.