


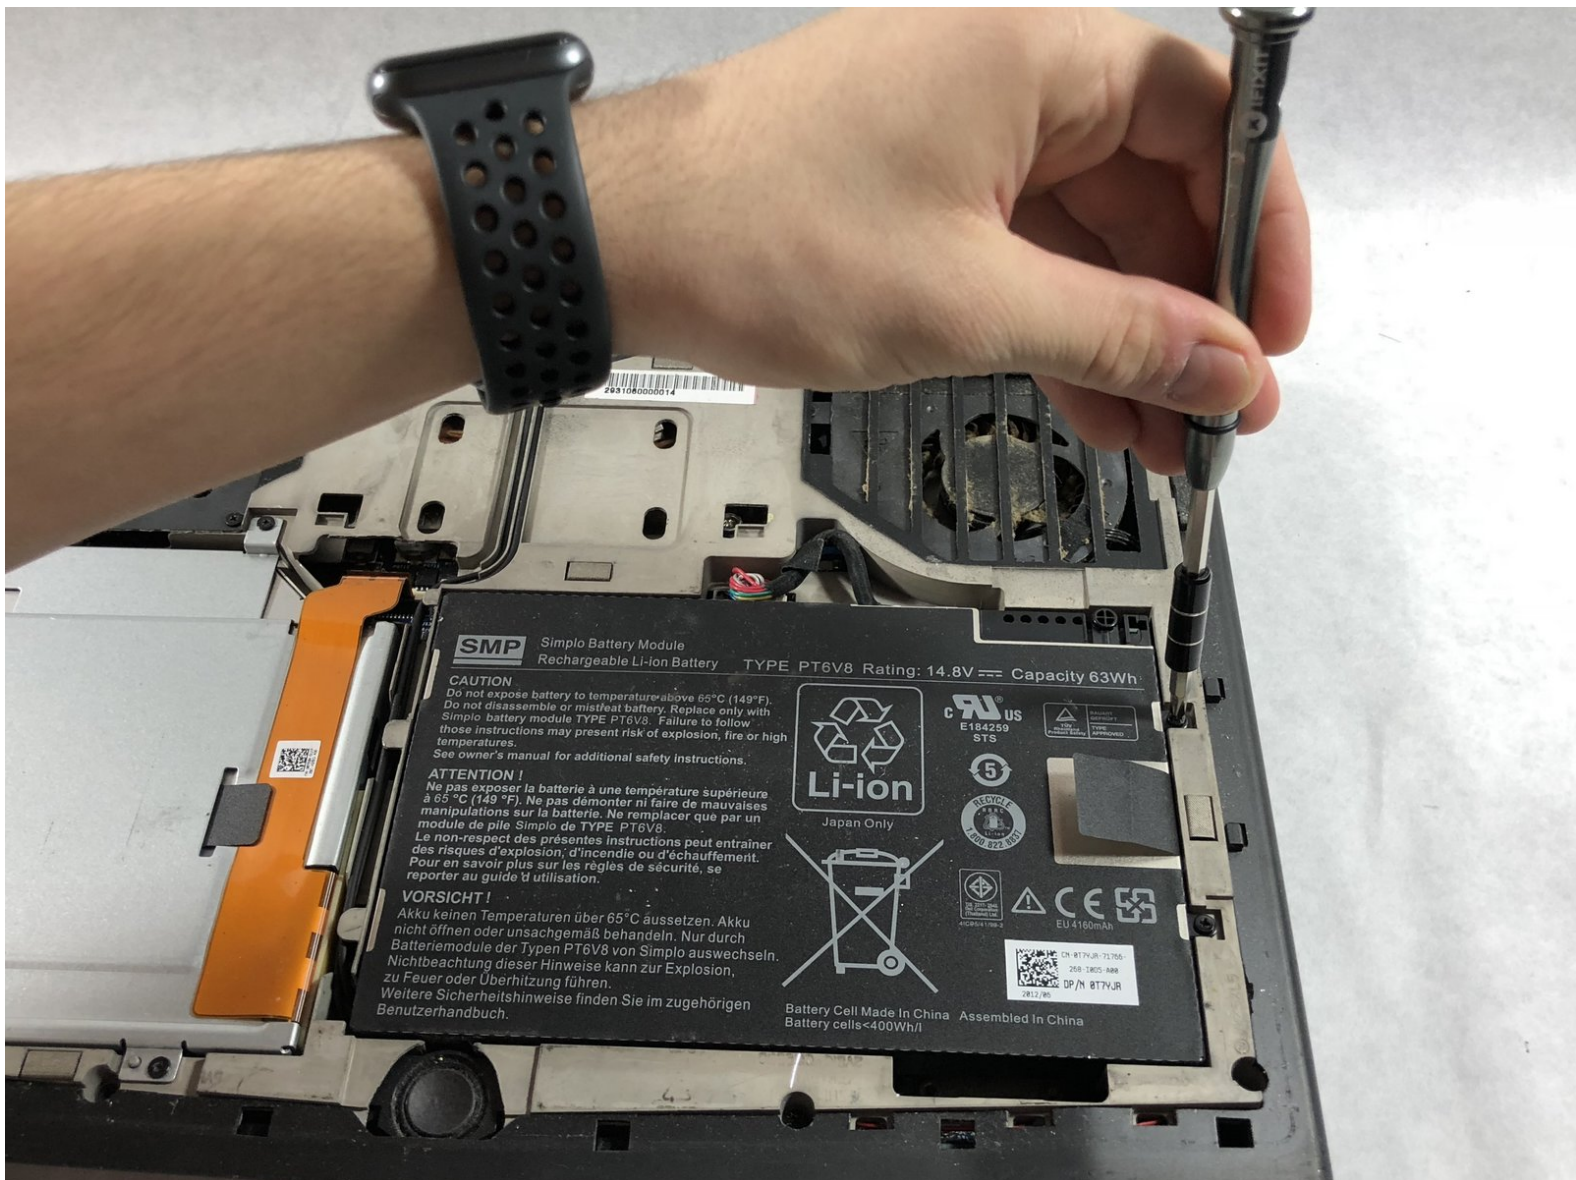

Alienware P18G M14X R1 Battery Replacement

How to replace a Alienware P18G M14X R1 battery.

Written By: Andonaq Grozdani



INTRODUCTION

Batteries fail from heat and if they reach their max charge cycles limit. This guide will show you how to replace it.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Back Cover



- Loosen the top left and top right 6.5mm PH1 screws that hold down the back cover.

i The screws will not be able to be removed from the back cover. They can only be loosened or tightened.

Step 2




- Slide back cover forward using your thumbs.

Step 3





- Lift up the cover and set aside exposing the internals of the computer.

Step 4 — Battery

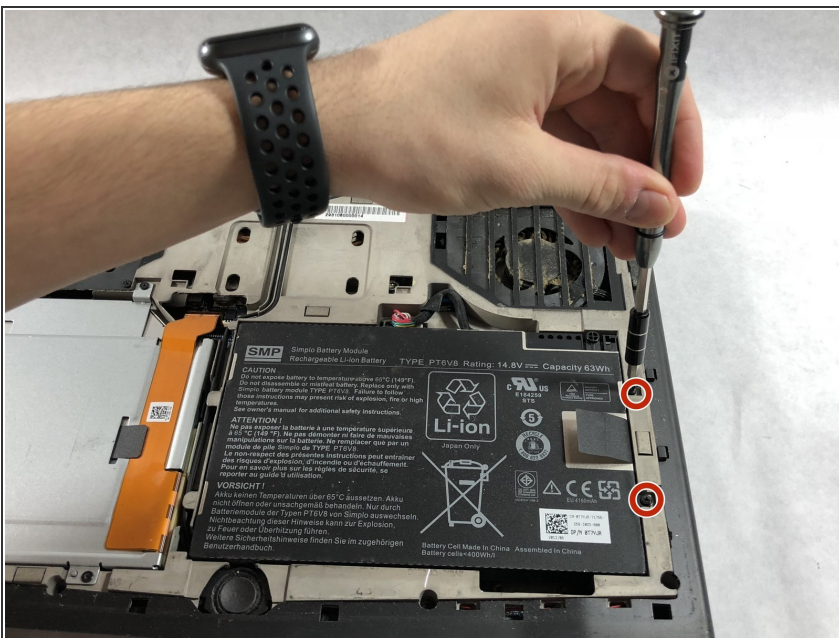


- ⓘ Make sure the laptop is turned off before starting.
- Using PH1 screwdriver loosen the two screws on the right of the battery.
- ⓘ The screws will not be able to be removed from the battery. They can only be loosened or tightened.

Step 5

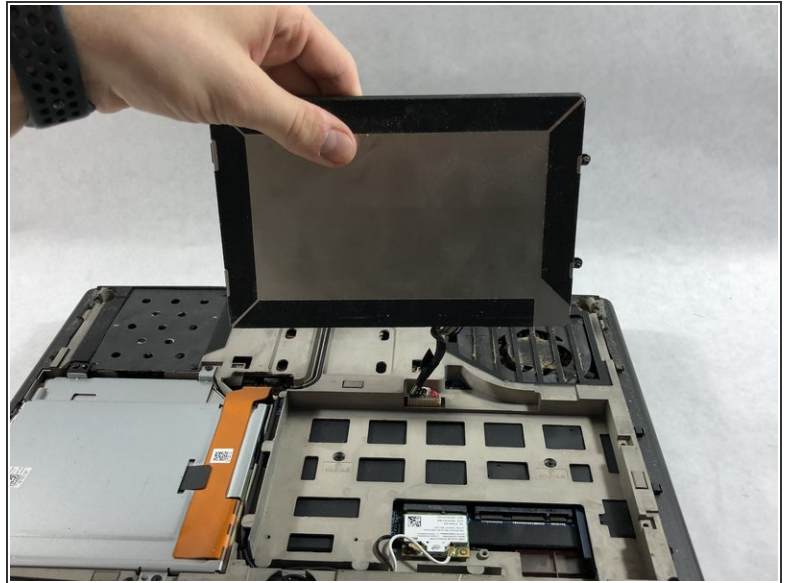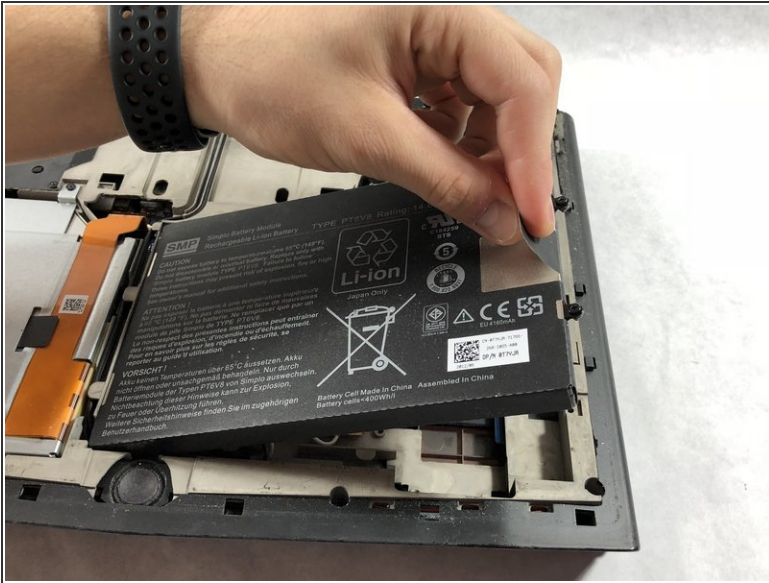

- Pull battery up using the tab provided.

Step 6

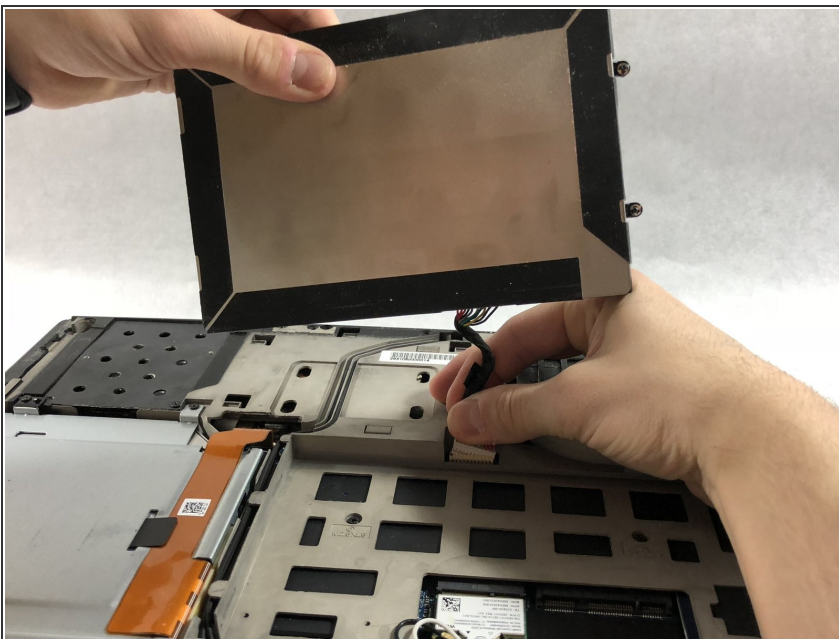

- Disconnect the clip connecting the battery to the computer.
- Set battery aside.

To reassemble your device, follow these instructions in reverse order.