



# Unnecto Drone M Earpiece Speaker Replacement

This guide will show how to replace the earpiece speaker of the Unnecto Drone M.

Written By: Esteban Almeida



**TOOLS:**

- [Tweezers](#) (1)
- [Phillips PH000 Screwdriver](#) (1)
- [iFixit Plastic Opening Tool](#) (1)

**PARTS:**

- [Unnect Drone M Earpiece Speaker](#) (1)

## Step 1 — Unnecto Drone M Disassembly



- Place the phone facedown on a cleared work area
- Remove the back case by applying moderate force to the indentation in the lower left corner of the case.

## Step 2



- Grip the top right corner of the battery.
- Remove the battery by pulling it outwards.

## Step 3



- Remove the four screws on the back of the phone using a Philips 000 screwdriver

## Step 4




- Separate the frame evenly using a plastic opening tool.
- ⓘ Be careful, as the frame is thin and can break easily.

## Step 5



- Use a Phillips #000 screwdriver to remove the four screws that secure the motherboard.

## Step 6

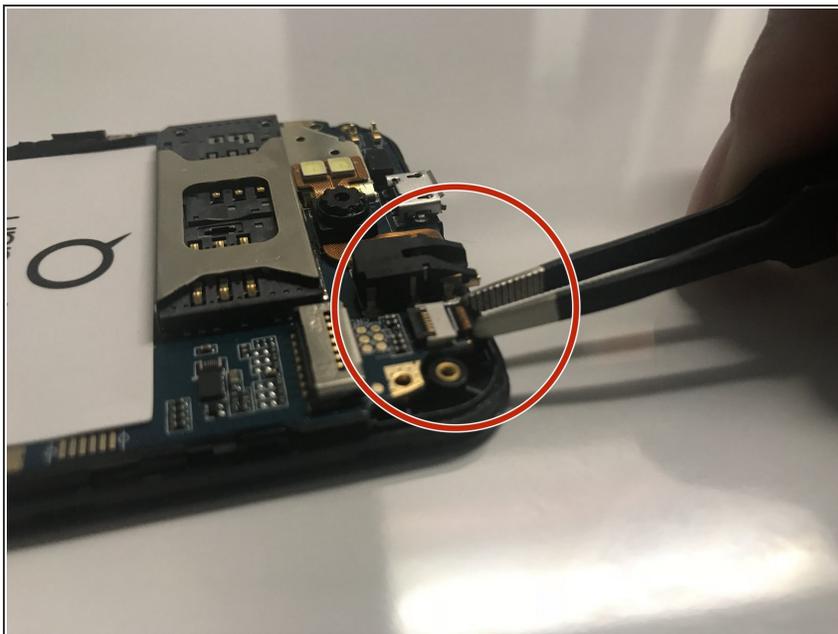

- Disconnect the ribbon cable from the motherboard using rounded, spade-tipped tweezers.

## Step 7




- Peel the white circuit on left side of the frame by inserting fine-tipped tweezers between it and the frame.
- ⓘ The white circuit is flimsy and securely glued to the frame.

## Step 8



- Set aside the circuit board from the screen protector.

## Step 9 — Earpiece Speaker

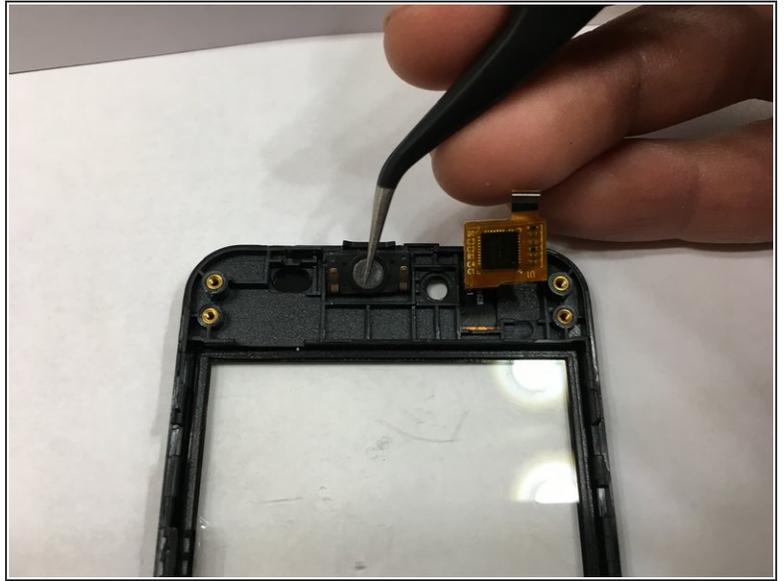

- Peel back the speaker using fine-tipped tweezers
- ⓘ Use caution when removing the earpiece speaker

To reassemble your device, follow these instructions in reverse order.