


# Dell Inspiron 1200 Display Assembly Replacement

Written By: Terrence15

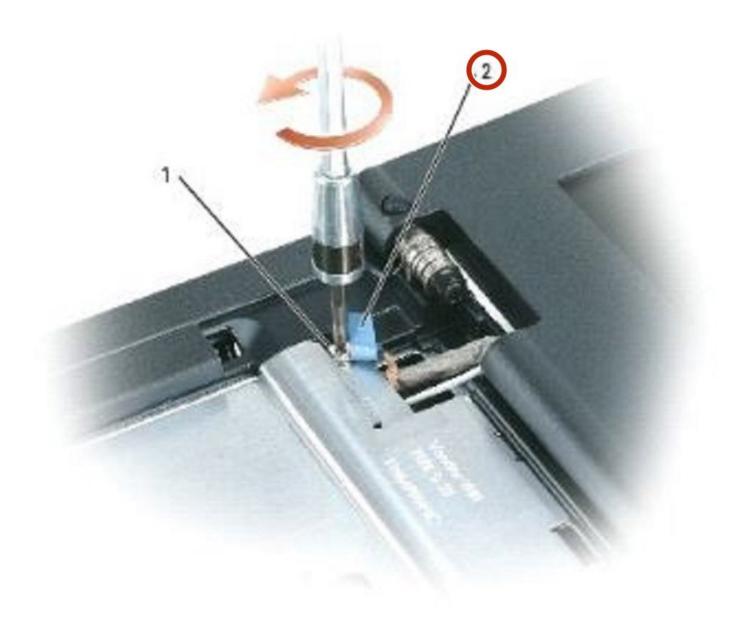

## **INTRODUCTION**


In this guide, we will show you how to remove the Display Assembly.




# **TOOLS:**

• Phillips #0 Screwdriver (1)


#### Step 1 — Disconnecting the Ground Wire

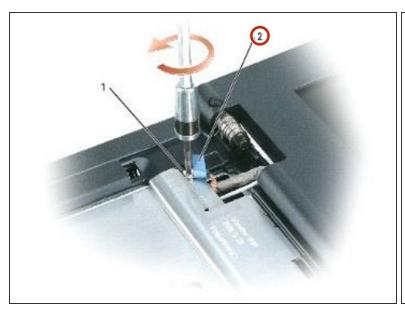

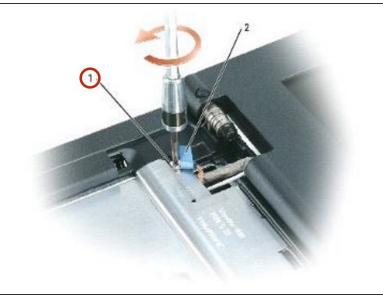


- Follow the instructions in <u>"Before Working Inside Your Computer."</u>
- Disconnect the display ground wire from the EMI shield by unscrewing the captive screw.

#### Step 2 — Remove the Screws

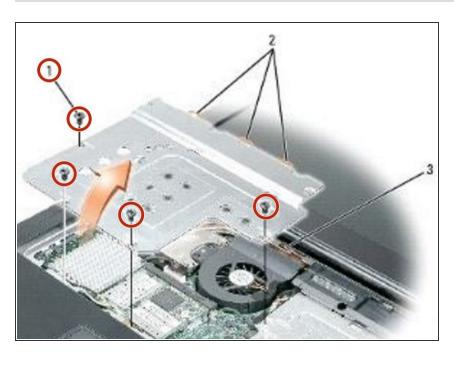


 Remove the four M2.5 x 5-mm screws (labeled "M2.5x5") that secure the EMI shield to the system board.

#### **Step 3** — Releasing the Retention Tabs

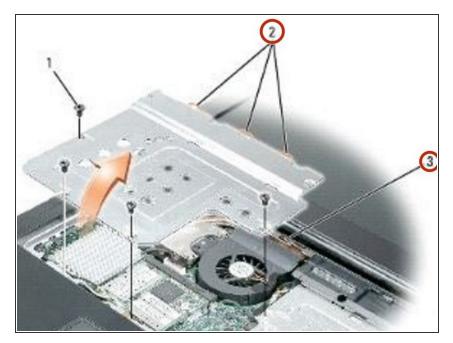


 Pull the EMI shield out of the computer baseby rotating the front upwards then lifting to release the retention tabs from the retention-tab slots.

#### **Step 4** — **Disconnecting the Antenna Cable**

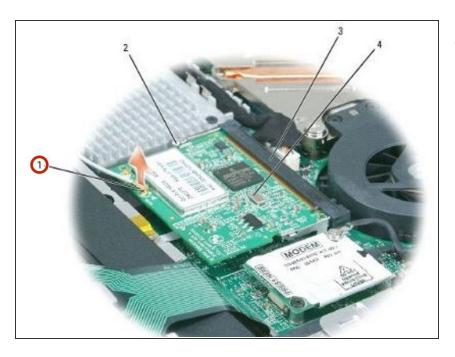

 Disconnect the attached antenna cable from the Mini PCI card.

#### Step 5 — Remove the Screws

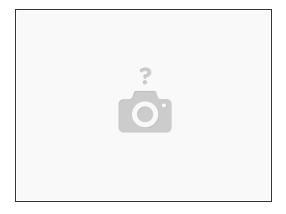

- Close the display.
- From the bottom of the computer, remove the two M2.5 x 5-mm screws labeled "D."

#### Step 6 — Remove the Screws



 From the back of the computer, remove the two M2.5 x 8-mm screws labeled "D."

## Step 7 — Pull the Pull-Tab





 Pull straight up on the pull-tab that is attached to the display-feed flex cable to disconnect the cable from the system board.

#### **Step 8 — Removing the Cables**



 Carefully remove the Mini PCI card antenna cable and the display cables from their routing guides.

## Step 9 — Lifting the Display Assembly



 Lift the display assembly out of the computer base.

To reassemble your device, follow these instructions in reverse order.