

IBM ThinkPad A31 Battery Replacement

Showing how to properly remove a battery from the ThinkPad A31 by IBM.

Written By: Sean Tocci



INTRODUCTION

This guide will show you how to remove the battery for the ThinkPad A31.

Step 1 — Battery





- Flip the ThinkPad over so that it is upside down.
- Push latch switch to the left.
- Gently lift the battery out and away from the ThinkPad
- (i) You have to hold the latch to the left while you remove the battery. Simply pushing once will not unlock the battery

To reassemble your device, follow these instructions in reverse order.