

IBM ThinkPad A31 Hard Drive Replacement

This guide will show you how to remove the hard drive for the ThinkPad A31

Written By: Thomas Stone





• Phillips #1 Screwdriver (1)

Step 1 — Battery





- Flip the ThinkPad over so that it is upside down.
- Push latch switch to the left.
- Gently lift the battery out and away from the ThinkPad
- You have to hold the latch to the left while you remove the battery. Simply pushing once will not unlock the battery

Step 2 — Hard Drive







- Remove the 6mm screw
- Pull out the hard drive
- The hard drive might be a little tough to pull out

To reassemble your device, follow these instructions in reverse order.