




# D-Link DCS-2630L Wi-Fi Camera Microphone Replacement

This guide will walk through the necessary steps to replace the microphone in the D-Link DCS-2630L Wi-Fi Camera.

Written By: Stanley DeLuna-Dabrowski

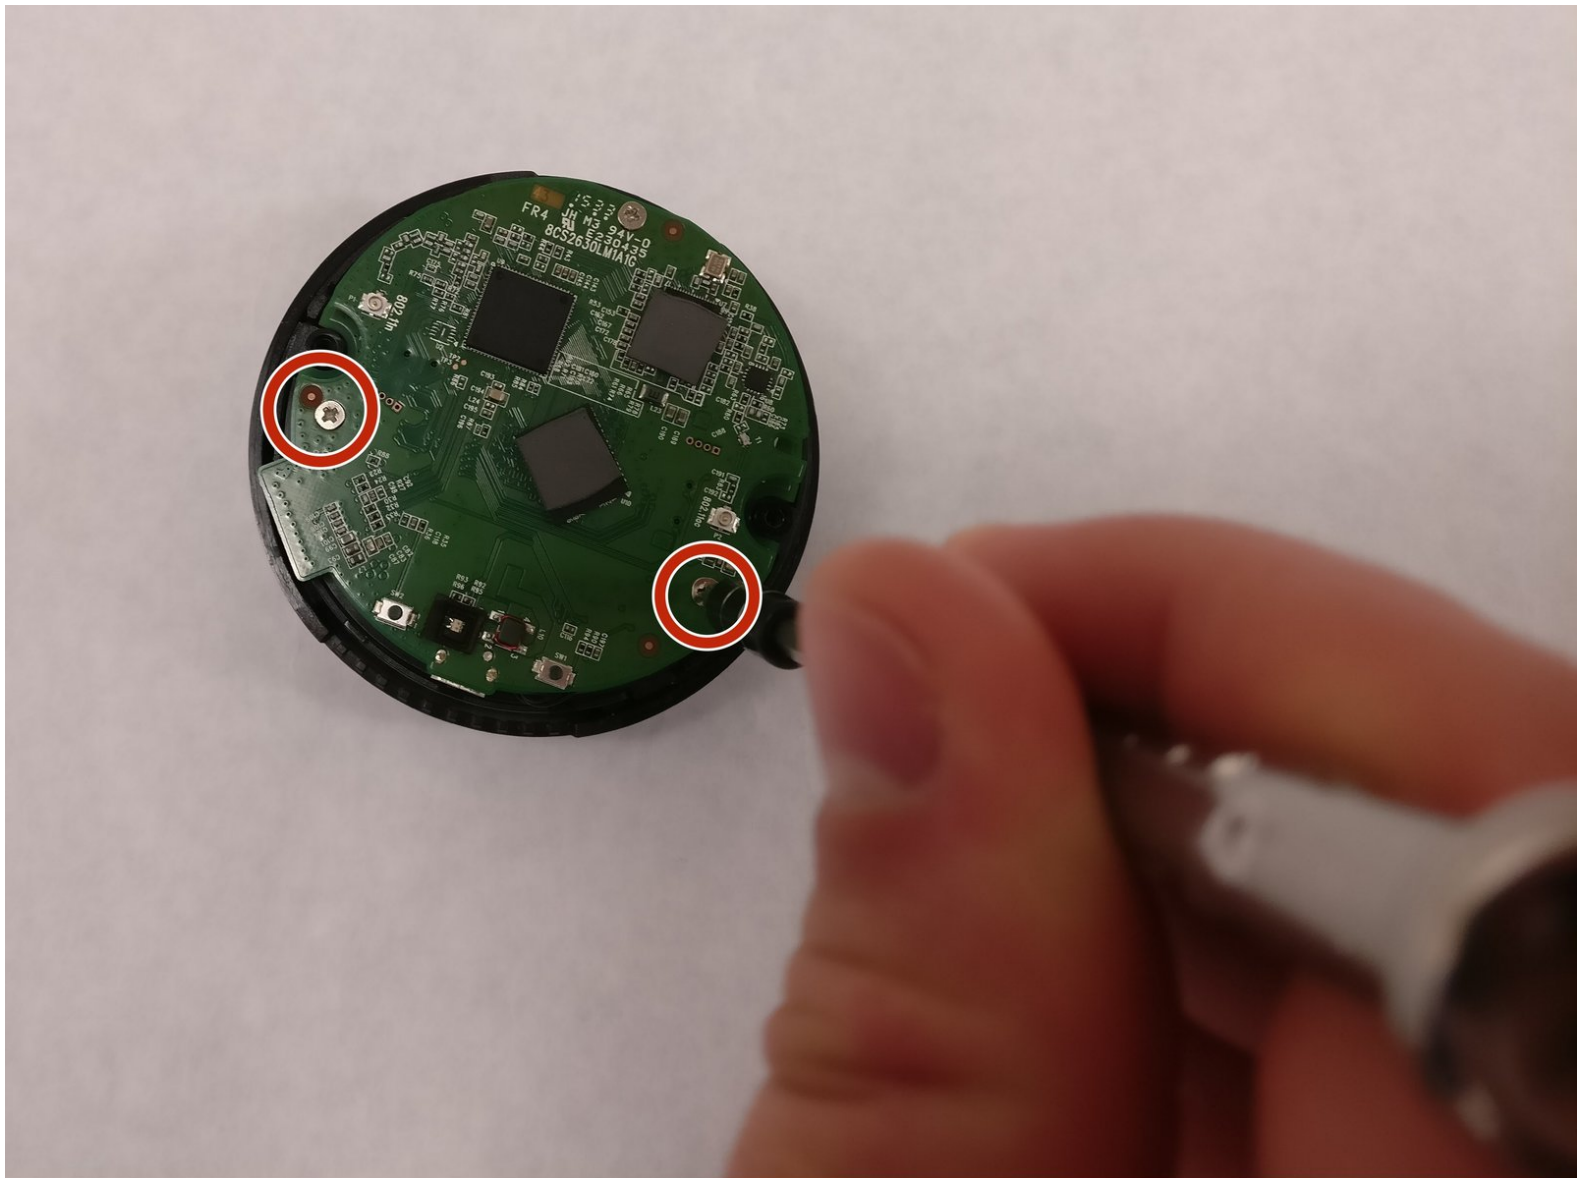



## TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Back casing



- Remove the two 9.65 mm screws on the back cover using the Philips head PH00 screw driver.

## Step 2




- Remove the back casing to expose the circuit board.

### Step 3



- Detach the gray antenna wires by gently pulling on the side closest to the circuit board.


### Step 4

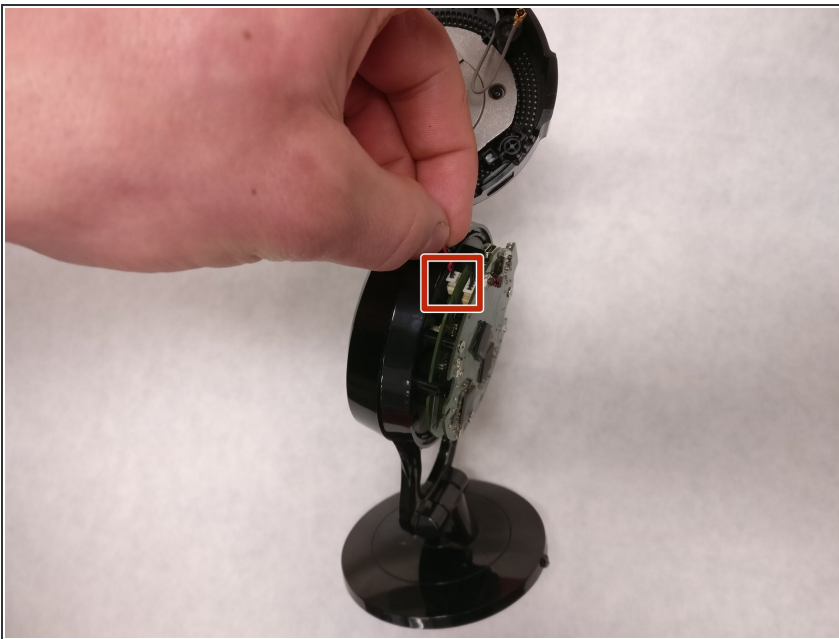

- Detach the speaker wire by gently pulling on the side closest to the body of the camera.





## Step 5 — Microphone

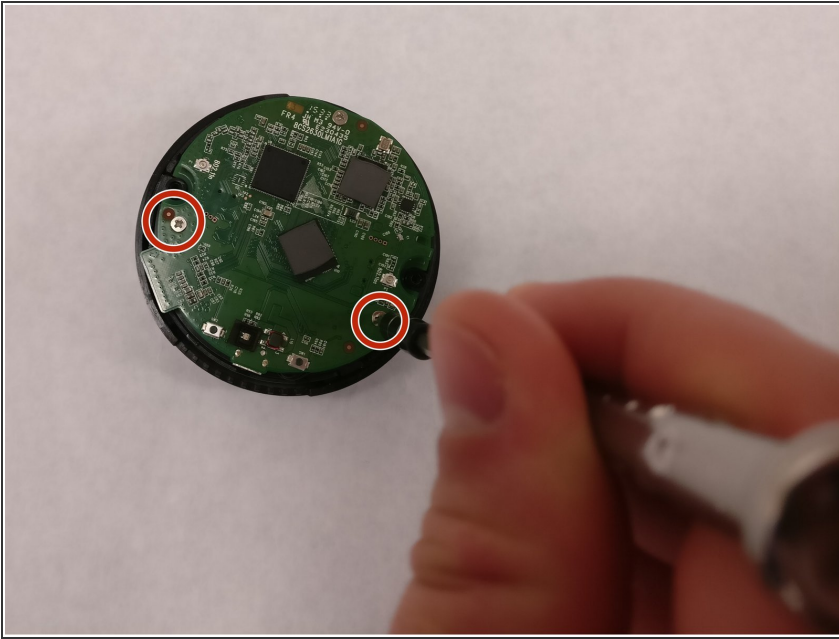


- Remove the two 4.35 mm screws on the circuit board using the Philips head PH00 screw driver.

## Step 6

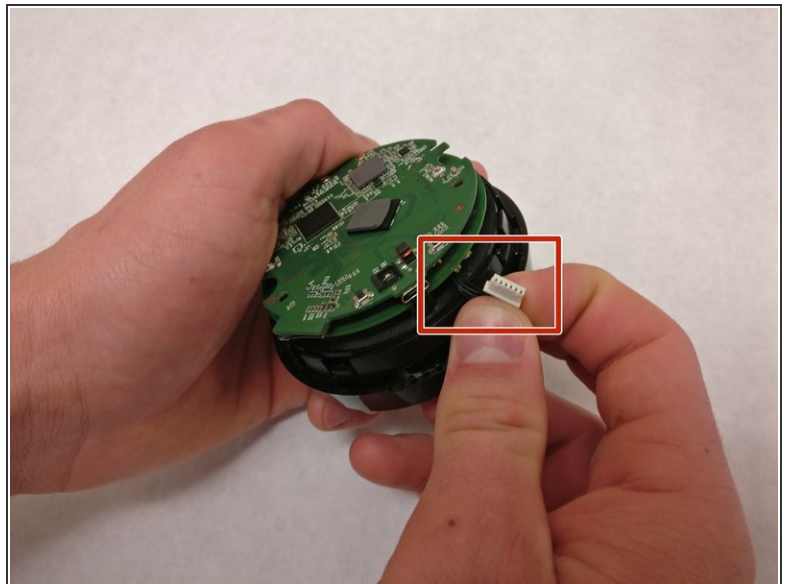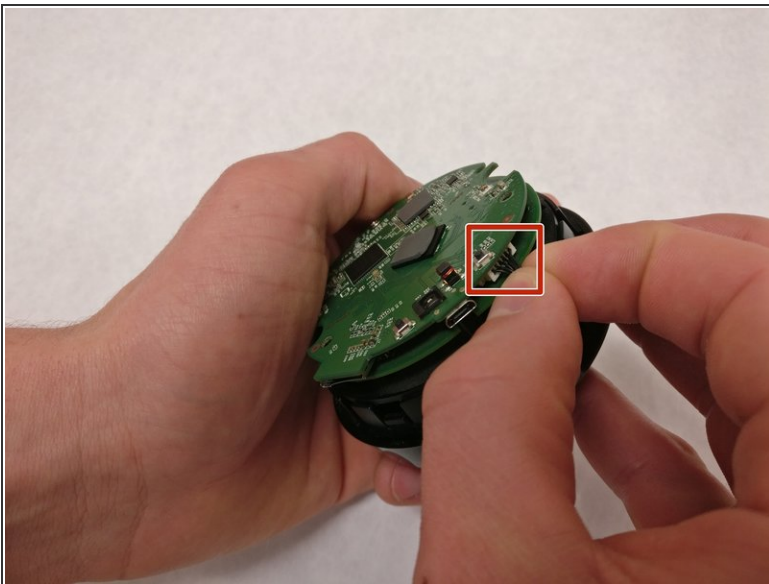



- Detach the white plug by gently pulling on the black wires.

## Step 7

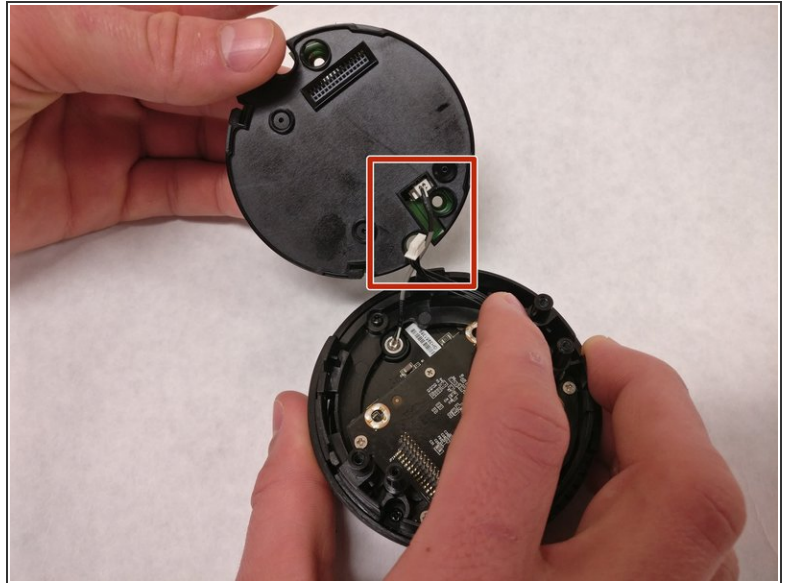


- Remove the circuit board to expose the camera body.
- At the same time, you will need to feed the wires through the circuit board and out the slot in the black plate under the circuit board.

## Step 8

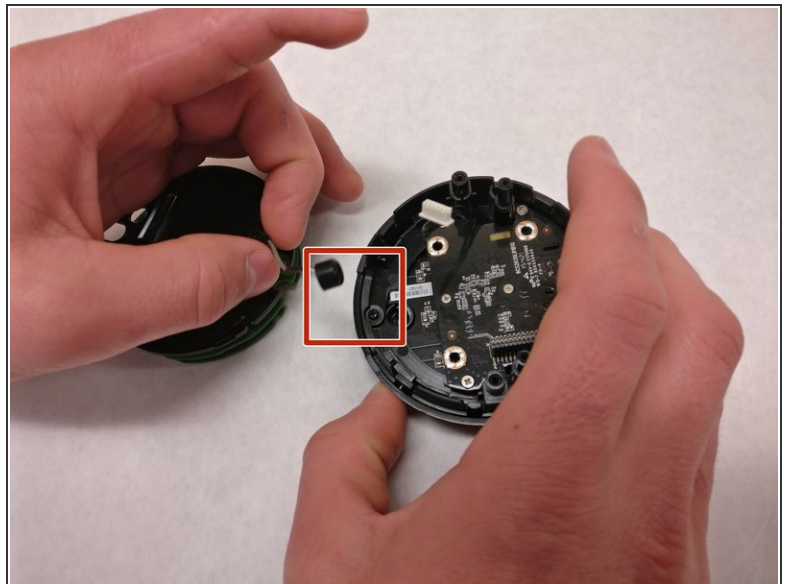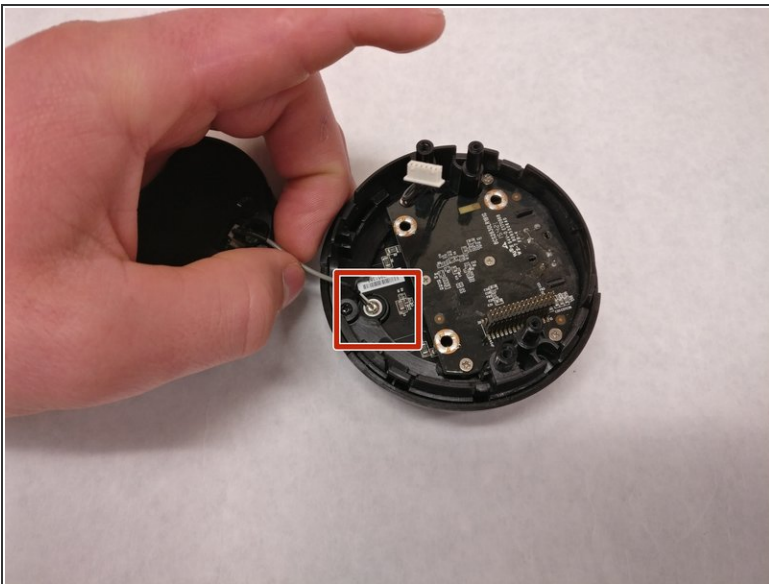

- Gently pull on the grey wire to detach the microphone from the camera body.

## Step 9

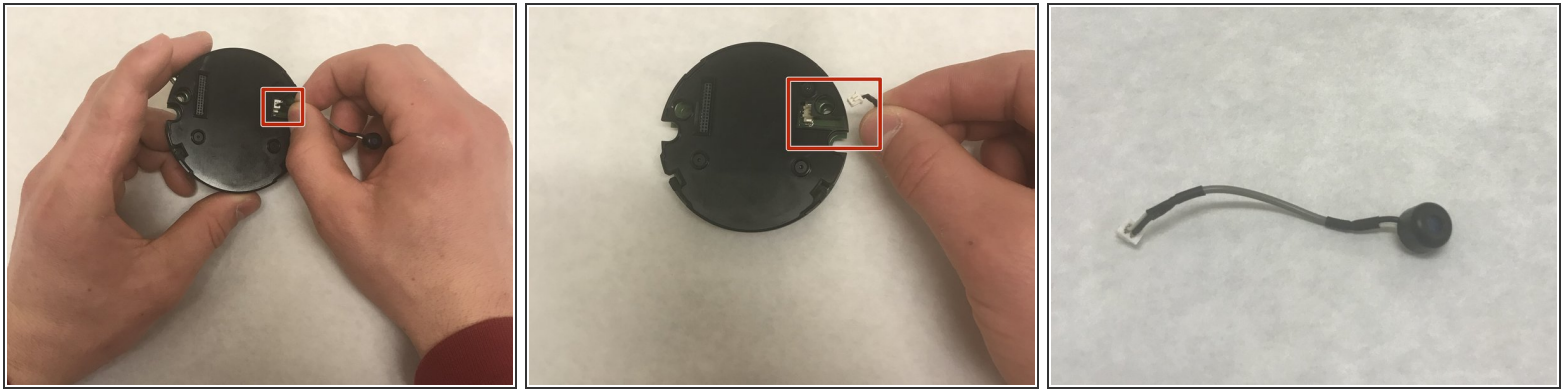

- Detach the microphone from the circuit board by gently pulling on the grey wire.

To reassemble your device, follow these instructions in reverse order.